

| Engine Relay Box (FN) | | | |
|-----------------------|---------------|-----------|-----------|
| Relay Number | Details | Loads | Schematic |
| RLYa | 30A-1 Contact | Engine | |
| RLYb | 30A-1 Contact | Fuel Pump | |
| 1500-A | 40A-1 Contact | Fan HS | |
| 1500-B | 30A-1 Contact | Fan LS | |