

Notes

ELECTRODIAGNOSTIC



Contents

- List of families in the wiring diagrams	2
- List of electrical components	3 - 20
- List of indicator lights/connectors/specific cases	21 - 24
- Technical abbreviations and interpretation/Identification of wires	24 - 25
- Identification of connectors	26
- Numbering of wires	27 - 29
- Multiplexing and intersystem	30 - 31
- List of cable functions	32 - 53
- Wiring Diagrams explanation	53 - 57
- Principles of multiplexing/Multiplexing application	58 - 67
- Multiplex system precautions	68
- Initialising engine management computers	69 - 71
- Maintenance indicators initialisation procedure	72
- Location of electrical parts (main) for all models	74 - 139
- Boxer transponder system/Engine systems interface/ CV00	139 - 141
- Special notes on 206 CC & 307 CC	142 - 147
- Coolant temperature sensor function	148
- Radios: Abbreviation/Decoding/Identification/Removal	149 - 157
- Transponder immobiliser/Locking/Key programming/Windows	158 - 172
- Airbag/Pyrotechnic seatbelts/Centralised airbag system/ Sunroof 307	173 - 179
- Diagnostic connectors/PPS	180 - 189
- Refrigeration capacities/Features of lubricants	190 - 193
- Diesel and petrol engine identification list/Oil capacity	194 - 201
- Abbreviation of depollution standards	202
- Vehicle identification	204 - 213
- Manufacturing location identification	214

List of families in the wiring diagrams

4310

Family number

Function number

Family 1 - Engine and transmission assembly

- 10. Starting, current generation
- 11. Ignition, preheating
- 12. Carburettor supply, injection
- 13. Carburettor supply, injection
- 14. Engine fault finding
- 15. Cooling
- 16. Gearbox, transmission
- 17. Electrical motor supply, batteries
- 18. Gas circuit
- 19. Alternating current starter

Family 2 - Signalling, exterior lighting.

- 20. Rear fog lights
- 21. Brake lights
- 22. Reversing lights
- 23. Indicators, side repeaters side lights, hazard lights
- 24. Daytime running lights, dimmed lights
- 25. Horns
- 26. Headlights, Rear lights, number plate lights, side lights

Family 3 - Interior lighting

- 30. Passenger compartment lighting
- 31. Closed compartment lighting

Family 4 - Driver information

- 40. Engine coolant and miscellaneous coolant information, current generation
- 41. Engine oil information
- 42. Engine air and engine speed information
- 43. Fuel and preheating information
- 44. Brake information
- 45. Suspension information
- 46. Gearbox and transmission information
- 47. Audible warning information
- 48. Engine management information
- 49. Opening elements information

Family 5 - Washers, wipers

- 50. Windscreen wipers
- 51. Windscreen washer
- 52. Rear screen wiper
- 53. Rear screen washer
- 54. Headlight wipers, Headlight washers

Family 6 - Various assistance mechanisms

- 60. Front electric windows
- 61. Rear electric windows
- 62. Central locking
- 63. Electrically controlled seat
- 64. with 6449 electric door mirror
6450 to 6469 blind spot detection
6470 to 6499 steering column
- 65. Passive safety seat belts
- 66. Headlight attitude corrector
- 67. Gearbox and driveshaft assistance
- 68. Sunroof, quarter panels

Family 7 - Driving assistance

- 70. Braking
- 71. Variable power-assisted steering
- 72. Multifunction display, trip computer, clock
- 73. Cruise control
- 74. Black ice warning
- 75. Front and side proximity detection
- 76. Under inflation detection (DSG)
- 77. Suspension (CSS)
- 78. Electronic stability program (ESP)

Family 8 - Driving comfort

- 80. Climate control, air conditioning
- 81. Heating equipment: rear screen and windscreen, windows, rear view mirror, cigarette lighter
- 82. Coded immobiliser with transponder
- 83. Heated seats
- 84. Radio, aerial, radiotelephone
- 85. Navigation, road information
- 86. Forced entry alarm
- 87. Electrically controlled blind
- 88. Towing

Family 9 - Multiplexing

- 90. Multiplex network computers

Numbering of devices

0002	Signalling lighting switch	1127	Ignition supply relay
0004	Controls	1130	Ignition computer
0005	Wiper switch	1131	Cylinder 1 ignition coil
1000	Starting safety switch	1132	Cylinder 2 ignition coil
1001	Cold starting relay	1133	Cylinder 3 ignition coil
1002	Cold starting pump	1134	Cylinder 4 ignition coil
1003	Cold starting solenoid valve	1135	Ignition coil
1005	Starting prevention relay	1136	Ignition coil condenser
1006	Engine blocking actuator	1137	Cylinder 5 ignition coil
1007	Body tilt sensor	1138	Cylinder 6 ignition coil
1010	Starter	1140	Antipol. module for the carburettor
1015	Stop start check computer	1141	Coolant reheating plug 1 supply relay
1020	Alternator	1142	Coolant reheating plug 2 supply relay
1021	Reversible alternator	1143	Coolant reheating plug 3 supply relay
1022	Alternator filtering condenser	1145	Throttle opening SV
1025	Dual battery unit	1146	Coolant rehea. spark plugs 1-2 supply relay
1026	Energy accumulator	1147	Coolant reheat. spark plugs 3-4 supply relay
1028	Electrical networks supply protective unit	1148	Engine coolant reheating relay 1
1030	Engine running information relay	1149	Engine coolant reheating relay 2
1031	Battery charge status unit	1150	Preheating unit
1032	Battery cable protection unit	1151	Heated fuel filter relay
1040	General power supply maintenance relay	1155	Preheating relay
1041	Emergency stop switch	1156	Postheating relay
1042	General relay	1157	Postheating thermal switch
1043	Reset switch	1158	Pre/postheating control unit
1044	Diode unit	1159	Heater plugs supply link
1045	Auxiliary reset switch	1160	Heater plugs
1050	Starting heating resist. solenoid valve ctrl	1161	Cylinder 1 heater plugs
1086	Antitheft alarm starting cut-off relay	1162	Cylinder 2 heater plugs
1087	Starting solenoid valve relay	1163	Cylinder 3 heater plugs
1088	Trailer cooling supply relay	1164	Cylinder 4 heater plugs
1100	Distributor	1190	Coolant circuit reheater
1101	Advance module engine coolant thermistor	1191	Ignition coil + cylinder reference
1102	Advance module	1200	Fuel pump relay
1103	Advance correction solenoid valve resis.	1201	Injection pump relay
1104	Advance correction solenoid valve	1202	Tachometric relay
1105	Ignition module	1203	Inertia switch
1107	Variable valve position sensor	1204	Impact safety relay
1108	Valve control computer	1205	Fuel pump fuse
1109	Cylinder deactivation SV	1206	Transition pump control unit
1110	Ignition distributor	1207	Transition pump
1115	Cylinder reference sensor	1208	Diesel injection pump
1116	Cylinder reference sensor 1	1209	Low-pressure pump
1117	Cylinder reference sensor 2	1210	Fuel pump
1118	Inlet cylinder reference sensor	1211	Fuel pump-sender unit
1119	Exhaust cylinder reference sensor	1212	Fuel tank air SV
1120	Pinking sensor	1213	Air pump relay
1121	Pinking sensor 1	1214	Shift indicator light
1122	Pinking sensor 2	1215	Canister bleed SV
1125	Accelerator pedal switch	1216	Resistance simulation canister
		1217	Canister bleed cut-off SV
		1218	Ignition advance cut-off SV

1219 Automatic gearbox inject. throttle potenti.	1270 Throttle valve reheating resistor
1220 Engine coolant temperature sensor	1271 Damper SV
1221 Diesel fuel thermistor	1272 Damper assembly
1222 Accelerometer	1273 Oil vapour rebreathing reheating resistor 1
1223 Injection air solenoid valve	1274 Oil vapour rebreathing reheating resistor 2
1224 Absorber closing solenoid valve	1275 Carburettor
1225 Idle speed regulation stepper motor (MMBA)	1276 Diesel heater
1226 Idle regulation motor and idle switch	1277 HP pump 3rd piston deactiv. SV
1227 Fuel tank pressure sensor	1278 Discharge start sensor
1228 Idle regulation motor/idle sensor + Hall effect sensor	1279 Fuel high pressure regulation SV
1229 Variable geometry turbo regulation SV	1280 Long variable air duct inlet (AFP) SV
1230 Additional air control	1281 Short variable air duct inlet (AFP) SV
1231 Automatic gearbox idle speed support unit	1282 Fuel additive computer
1232 Idle speed maintenance SV	1283 Fuel additive pump
1233 Turbocharging pressure regulation SV	1284 Fuel additive injector
1234 Carburettor damper SV	1285 Air inlet heating SV
1235 Carburettor breather SV	1286 Diesel fuel heater relay
1236 Deceleration cut-off SV	1287 Diesel heating resistor
1237 Blower SV	1288 Diesel heating thermal switch
1238 Variable air duct inlet SV (AFP)	1289 Inlet coolant heating SV
1239 Idle speed regulation SV	1290 Injection potentiometer
1240 Inlet air temperature sensor	1291 Degassing coolant SV
1241 Pulsair pump	1292 Fuel filter relay
1242 Pulsair relay	1293 Coolant unit integr. proport. coolant SV
1243 Variable distribution SV 1	1294 Vacuum pump
1244 EGR proportional SV	1295 Turbine discharge SV
1245 Altitude switch	1296 Variable air inlet SV
1246 EGR function supply relay	1297 Electric EGR SV
1247 EGR engine coolant thermal switch	1298 Air vacuum proport. SV
1248 EGR calibration resistor	1299 Bypass valve SV
1249 Load lever potentiometer (EGR)	1300 Coolant emulsion sensor
1250 Exhaust gas recirc. calc. (EGR)	1301 Automatic gearbox signal relay (injection)
1251 EGR vacuum pump	1302 Injection supply relay
1252 Diesel advance correct. relay	1303 Ignition and injection supply relay.
1253 EGR all or nothing SV	1304 Injection duplicate multifunction relay
1254 Load lever switch (EGR)	1305 Richness potentiometer
1255 Pump cut-off SV	1306 Automatic gearbox relay shunt
1256 Diesel advance SV	1307 Power multif. double relay
1257 - Flow SV (Diesel)	1308 Engine oil pressure sensor
1258 + Flow SV (Diesel)	1309 Turbocharger air thermistor
1259 +/- Flow SV (Diesel)	1310 Air flow sensor
1260 Injector needle lift sensor	1311 Turbocharging overpressure sensor
1261 Accelerator pedal position sensor	1312 Air intake pressure sensor
1262 Motorised throttle	1313 Engine speed sensor
1263 EGR SV + throttle	1314 Altitude sensor
1264 Swirl SV	1315 Injection resistor
1265 Carburettor reheating thermal switch.	1316 Throttle position sensor
1266 Carburettor reheating relay	1317 Diesel pump lever position sensor
1267 Diesel throttle SV (air inlet)	1318 Throttle switches
1268 Variable distribution SV 2	1319 Injection coding resistor
1269 Fuel reheating resist. relay	1320 Engine management computer
	1321 Diesel high pressure sensor

1322 Diesel high pressure regulator	1373 Turboch. air heating position recopy sensor
1323 Exhaust gas high temp. sensor	1374 Turbocharging position recopy sensor
1324 Proportional dosing SV	1375 Vertical linkage SV 1
1325 Fuel high pressure sensor	1376 Turbocharging pressure sensor
1326 Injection computer supply fuse	1377 Electric EGR SV A
1327 Cam position sensor (Diesel pump)	1378 Electric EGR SV B
1328 Rotor position sensor (Diesel pump)	1379 Vertical linkage SV 2
1329 Slide position sensor (D pump)	1380 Controlled thermostat (S2RE)
1330 Injector	1381 Fuel injection supply cut-off relay
1331 Cylinder 1 injector	1382 Dual mode exhaust SV
1332 Cylinder 2 injector	1383 Particle filter upstream exhaust high temp. sensor
1333 Cylinder 3 injector	1384 Pre-cat. downstream exhaust high temp. sensor A
1334 Cylinder 4 injector	1385 Pre-cat. upstream exhaust high temp. sensor A
1335 Cylinder 5 injector	1386 Pre-cat. downstream exhaust high temp. sensor B
1336 Cylinder 6 injector	1387 Pre-cat. upstream exhaust high temp. sensor B
1337 Cylinder 7 injector	1388 Oil vap. rebreathing heating res.
1338 Cylinder 8 injector	1389 EGR motorised throttle valve
1339 Cylinder 9 injector	1390 Inlet air pressure sensor 2
1340 Cylinder 10 injector	1391 Air flow sensor 2
1341 Particle filter differential pressure sensor	1392 WG1 proportional SV
1342 Engine multifunction computer	1393 Turbocharger proportional SV 2
1343 Downstream exhaust gas high temp. sensor	1394 EGR bypass throttle SV
1344 Upstream exhaust gas high temp. sensor	1395 Air inlet temperature sensor 2
1345 Oxygen sensor heating relay	1396 Gas recirculation SV 2
1346 Air flow sensor A	1397 Compressor SV 2
1347 Air flow sensor A	1398 Intake VANOS SV
1348 Oxygen sensor heating fuse	1399 Exhaust VANOS SV
1349 Material temperature sensor	1400 TDC sensor
1350 Upstream oxygen sensor	1401 Brake amplifier pressure sensor
1351 Downstream oxygen sensor	1405 Neutral sensor
1352 Front downstream oxygen sensor	1410 Exhaust temp. recovery SV
1353 Front upstream oxygen sensor	1411 Exhaust temp. recovery pump
1354 Rear downstream oxygen sensor	1412 Exhaust temp. recovery temperature switch
1355 Rear upstream oxygen sensor	1413 RTE coolant temperature sensor
1356 Braking vacuum sensor	1414 Engine speed sensor unit
1357 Proportional oxygen sensor	1500 Engine cooling fan relay (GMV)
1358 RR cat. downstr. exhaust gas high temp. sensor	1501 Engine cooling fan fuse (GMV)
1359 Cat. upstream exhaust gas high temp. sensor A	1502 Left-hand engine cooling fan supply relay
1360 ADC1 gateway unit	1503 Right-hand engine cooling fan supply relay
1361 Turbocharging air heating SV 1	1504 Right and Left engine cooling fan supply relay
1362 Turbocharging air heating SV 2	1505 Fan trigger temp. switch.
1363 Cat. downstr. exhaust gas high temp. sensor B	1506 GMV dual speed resist.
1364 Cat. upstream exh. gas high temp. sensor B	1507 GMV control thermistor
1365 Heating bracket relay	1508 Low speed GMV supply relay
1366 Heating bracket	1509 High speed GMV supply relay
1367 Electr. controlled turbocharger. + local contr. A	1510 Engine cooling fan (GMV)
1368 Electr. controlled turbocharger. + local contr. B	1511 Right-hand engine cooling fan
1369 Diesel volumetric regulator	
1370 Engine management single relay	
1371 Unlocked CCM multif. double function relay	
1372 Intake air heating position recopy sensor.	

1512	Left-hand engine cooling fan	1639	No load accel. pedal switch
1513	Fan unit electronic chopper	1640	Automatic gearbox program selector
1514	Medium speed engine cooling fan supply relay	1642	Gear lever block. actuator ctrl relay
1515	Left interference suppression filter	1643	Key blocking actuator ctrl relay
1516	Right interference suppression filter	1644	Key blocking actuator
1517	Controlled flap for cooling fan	1645	Automatic gearbox electronic control
1518	Fan unit three-speed resistor	1646	Automatic gearbox solenoid block
1519	Fan unit dual speed resistor	1647	Clutch SV
1520	Engine post-cooling temp.switch	1650	Controlled elec. gearbox computer
1521	Variable speed fan unit el. unit	1655	Electrically controlled gearbox power relay
1522	Dual speed fan unit control elec. unit	1660	Controlled manual gearbox computer
1523	Variable speed fan unit assembly 2	1661	Gear selector
1524	Power supply cut-off relay	1662	Control. manual gearbox inlet speed sensor
1525	Engine post-cooling relay	1663	Change actuator
1526	Engine post-cooling timer	1664	Selection actuator
1527	Supply cut-off relay 2	1665	Clutch actuator
1528	Single speed fan unit control elec. unit	1666	Gear control at steering wheel
1530	Post-cooling shunt	1670	Controlled manual gearbox auto mode switch
1550	Turbocharger cooling water pump	1700	Electronic management computer
1551	Turbocharger cooling water pump fuse	1701	Lower front batt. volt./temp. module
1552	Disconnectable coolant pump	1702	Upper front batt. volt./temp. module
1555	Turbocharger cooling water pump ctrl relay	1703	Rear batt. volt./temp. monitoring module
1600	Selection lever position switch	1704	Relay unit
1601	One-touch ctrl lever sensor	1705	Electronic tool kit
1602	One-touch ctrl switch	1706	Sector supply filter
1603	Automatic gearbox control assembly	1707	Traction batt. management computer
1606	Parking pos. buzzer supply relay	1708	Elec. converter electronics casing
1607	Grille + select. light supply relay	1709	Electric machine
1610	Exchanger flow control SV	1710	Hybrid traction chain supervis. computer
1611	Clutch pedal angle position sensor	1711	Electric cooling pump (CTH)
1612	Diagnostic neutral switch	1712	Heater matrix coolant pump (CTH)
1613	Automatic gearbox engine speed sensor	1713	Accelerator potentiometer
1615	Automatic gearbox pressure sensor	1714	Energy gauge
1620	Vehicle speed sensor	1715	Elec. cooling pump relay (CTH)
1621	Automatic gearbox vehicle speed sensor	1716	Heater matrix coolant pump relay (CTH)
1622	Automatic gearbox output speed sensor	1718	Electric motor cooling blower ctrl thermistor
1623	Hydraulic slave cylinder sensor	1722	Battery coolant cooling fan ctrl thermistor
1624	Gear change sensor	1724	Additional heater switch
1625	Vehicle speed interface module	1725	Inverter electronic unit, elec. machine
1626	Control lever	1727	Traction battery coolant pump
1627	Clutch power module	1728	Computer coolant pump
1628	Gear change power module	1729	Electric vehicle coded immobiliser relay
1629	Selection power module	1730	Coded immobiliser shunt
1630	Automatic gearbox computer	1732	Battery heating relay
1631	Torque reduction SV	1733	Battery heating resistance
1632	Pedal position switch	1740	Electric drive motor
1633	Selection sensor	1746	Electric motor cooling blower
1634	Clutch sensor	1747	Charging socket
1635	Automatic gearbox electrohydraulic unit	1748	Battery charging socket unit
1636	Automatic gearbox position sensor	1749	Heating cut-off self-energising relay
1637	Automatic gearbox kickdown switch	1750	Fast recharging switch
1638	Automatic gearbox lever blocking actua.	1800	Gas computer

1801 Absolute pressure sensor	1855 Cylinder 4 gas injector
1802 Metering SV (Solenoid valve)	1856 Fuel injector management unit
1803 Tank SV	1857 Gas expansion valve vap.
1804 Vaporiser SV	1858 Vaporiser gas pressure sensor
1805 3 relay unit	1859 Vaporiser coolant temp. sensor.
1806 Oxygen sensor relay	1860 Absolute low pressure sensor
1807 Diode bridge	1861 Absolute high pressure sensor
1808 Gas supply unit	1862 Gas information display
1809 Linear actuator	1863 Gas temperature sensor
1810 Gas/fuel switch	1864 Gas supply SV 2
1811 Gas/fuel timer relay	1865 Gas supply SV 3
1812 Gas supply fuse block	1900 Starter/alternator check computer
1813 Diagnostic warning light cut-off relay	1901 Starter/alternator engine management
1814 Gas pressure indicator	1902 Starter/alternator electric machine.
1815 LPG/Fuel double relay	1903 Heater matrix coolant pump
1816 12V/5V voltage adaptor assembly	1904 Electronic cooling coolant pump.
1817 Gas gauge	1905 Coolant temperature electronic sensor
1818 Engine coolant thermistor (15°)	1906 Clutch pedal switch
1819 LPG tank sender pressure absorbing unit	1907 Gearbox neutral sensor
1820 Gas distribution motor	1908 Coolant circuit heating plugs 1
1821 Gauge + LPG SV	1909 Coolant circuit heating plugs 2
1822 12V/5V adaptor assembly diode	1910 Coolant circuit heating plugs 3
1823 12V/5V conversion resistance	1911 Starter/alternator fuse power
1824 Air inlet flap SV	1912 Stop/start switch
1825 Gas supply SV	1913 High pressure battery fan
1826 Fuel pump cut-off relay	1914 High pressure battery temp. sensor
1827 Tank SV control relay	1915 Battery temperature sensor
1828 LPG distributor	2000 Rear fog lights switch
1829 LPG distributor pressure sensor	2001 Wiping/lighting controller
1831 LPG switch relay	2002 Driving school buzzer (Germany)
1832 Cylinder 1 LPG injector	2003 Driving school monitor unit (Germany)
1833 Cylinder 2 LPG injector	2004 Driving school jack socket (Germany)
1834 Cylinder 3 LPG injector	2005 Rear fog lights relay
1835 Cylinder 4 LPG injector	2006 Driving school switch (Germany)
1836 LPG general relay	2007 Driving school footwell lighting (Germany)
1837 Fuel booster relay	2008 Driving school interface unit
1839 Expansion valve SV	2010 Rear left fog light
1840 Gas return SV relay	2011 Central rear fog light
1841 Gas injector relay	2015 Rear right fog light
1842 Gas return SV	2016 Rear fog lights control unit
1843 Gas pump current sensor	2100 Brake light switch
1844 Gas SV fuse holder	2101 Redundant brake light switch
1845 Gas injectors fuse holder	2110 Additional brake light
1846 Gas computer supply fuse holder	2111 Left additional brake light
1847 Gas gen. relay supply fuse holder	2112 Right additional brake light
1848 Gas pressure/temp. sensor	2120 Brake dual function switch
1849 Gas injector rail SV	2200 Reversing lights switch
1850 Vaporiser SV control relay	2202 Reversing ctrl switch
1851 Gas pressure management unit	2210 Left reversing light
1852 Cylinder 1 gas injector	2215 Right reversing light
1853 Cylinder 2 gas injector	2300 Hazard warning lights switch
1854 Cylinder 3 gas injector	2305 Flasher sensor

2310	Indicator switch	2640	FR LH side clearance light
2320	Front left direction indicator light	2641	FR RH side marker
2325	Front right direction indicator light	2642	FR LH side marker
2330	Rear left direction indicator light	2643	RR RH side marker
2335	Rear right direction indicator light	2644	RR LH side marker
2340	Left-hand side repeater light	2645	FR RH clearance light
2345	Right-hand side repeater light	2646	RR LH light on upper body
2400	Daytime running lights side light line relay	2647	Rear right light on upper body
2401	Daytime run. lights dipped headlights relay	2650	RR LH clearance light
2402	Daytime running lights relay shunt	2651	Roof-mounted police sign
2403	Rear side lights relay	2655	Rear right clearance light
2404	Daytime running lights relay	2656	Rondo lights (Rear roof lights)
2410	Dipped headlights relay	2657	Central Rondo lights (Rear roof lights)
2411	Dim dip lights relay	2658	Rondo lights switch (Rear roof lights)
2415	Dim dip lights resistance	2659	Orange lights switch
2500	Horn switch	2660	Fog lights switch
2501	Horn steering wheel switch	2662	Front fog lights inhibition relay
2505	Horn compressor relay	2665	Front fog lights relay
2510	Horn compressor	2670	Left fog lights headlight
2520	Horn	2675	Right fog light headlight
2521	Low-pitched horn	2676	Additional headlights shunt
2522	High-pitched horn	2680	Long range headlights switch
2523	Pedestrian buzzer	2685	Long range headlights relay
2524	Pedestrian horn	2690	Left long range headlights
2525	Horn compressor fuse	2695	Right long range headlights
2530	Siren unit (police)	3000	FR LH door sill switch
2531	Siren switch (police)	3001	FR RH door sill switch
2532	Day-night siren switch (police)	3002	FR LH door sill switch
2535	Siren loudspeaker (police)	3003	FR RH door sill switch
2600	Lighting coil turret	3004	Lighting timer unit
2601	Front slope sensor	3005	Courtesy light timer relay
2602	Rear slope sensor	3006	Courtesy lights switch
2605	Dipped headlights relay	3007	Courtesy light relay
2606	Main beam headlights relay	3008	Interior lighting ctrl elec. unit.
2610	Left-hand headlight	3009	Ambient lighting dimmer switch
2611	Left-hand turning headlight	3010	Front interior lights
2612	Left-hand additional headlight	3011	Front central interior light
2615	Right-hand headlight	3012	FR LH courtesy light
2616	Right-hand turning headlight	3013	FR RH courtesy light
2617	Additional right-hand headlight	3015	Roof console + integrated funct.
2620	FR LH side light	3019	Rear courtesy light switch
2625	FR RH side light	3020	Rear courtesy lights
2630	RR LH light on body	3021	Rear central courtesy lights
2631	RR RH light on boot lid	3022	Left rear courtesy lights
2632	RR LH light on boot lid	3023	Right rear courtesy lights
2633	Right-hand license plate light	3024	Left courtesy light
2634	Jack socket shunt	3025	Right courtesy light
2635	RR RH light on body	3028	Boot lid courtesy light
2636	Left-hand license plate light	3029	Central courtesy light switch
2637	Jack plug socket for revolving strobe light	3030	Central courtesy light
2638	Revolving strobe light	3031	FR RH reader
2639	Revolving strobe light switch	3032	FR LH reader

3033	RR RH reader	3105	Boot light (or rear shutter)
3034	RR LH reader	3106	Rear boot left-hand light
3035	Footwell light	3107	RR RH boot light
3036	FR RH footwell light	3108	CD console light switch
3037	FR LH footwell light	3109	Secondary boot light
3038	RR RH footwell light	3110	Glovebox light switch
3039	RR LH footwell light	3115	Glovebox light
3040	FR LH door sill plate light	3116	FR LH storage compartment light
3041	Reading light on left-hand 2nd row seat	3117	FR RH storage compartment light
3042	RR LH door sill plate light	3118	FR LH storage tray
3043	RR LH int. door opening ctrl light	3119	FR RH storage tray
3044	RR RH int. door opening ctrl light	3120	Bonnet switch
3045	FR RH door sill plate light	3121	Engine compartment light
3046	Reading light on right-hand 2nd row seat	3122	Engine compartment light switch
3047	RR RH door sill plate light	3123	Central storage tray light switch
3048	FR LH int. door opening ctrl light	3125	Boot light relay
3049	FR RH int. door opening ctrl light	3126	Boot light timer relay
3050	Lighting dimmer	3690	Rear headrest retract. switch
3051	Air conditioning light (heating ctrl)	3691	RR RH seat adjustment assembly
3052	Console light	3692	RR LH seat adjustment assembly
3053	Cigarette lighter light	4000	Combined centralised electronic module
3054	Ashtray light	4001	Head-up view unit
3055	Radio flap ctrl light	4002	Head-up view control plate
3056	Ashtray flap ctrl light	4005	Engine coolant temp. sensor
3057	Left air vent light	4010	Engine coolant level switch
3058	Right air vent light	4012	Remote controls unit
3059	Central air vent light	4015	Engine coolant level unit
3060	Driver's courtesy mirror light	4020	Engine coolant thermal switch
3061	Passenger courtesy mirror light	4021	Engine temp. thermal switch
3062	Rear ashtray light	4025	Engine coolant thermal switch-temp.sensor
3063	Roof light	4026	Engine coolant temp. indicator
3064	Dashboard light	4030	Engine coolant thermistor
3065	Card light	4035	Pre-warning thermal switch
3066	FR LH armrest light	4040	A/C and engine coolant thermistor
3067	FR RH armrest light	4050	Water presence sensor (separator)
3068	RR LH armrest light	4060	Battery charge indicator
3069	RR RH armrest light	4100	+ engine oil level temp. indicator
3070	Gear selector light	4101	Engine oil temp. indicator
3071	Centre pillar light	4102	Engine oil level indicator
3072	Front left door light	4103	Engine oil temp. sensor
3073	FR RH door light	4104	Engine oil pressure sensor
3074	Roof light 2	4105	Engine oil pressure indicator
3075	Anti-theft light	4106	Engine oil pressure switch/pressure sensor
3080	Police visor light	4110	Engine oil pressure switch
3085	White passenger central courtesy light switch	4111	Engine oil thermal switch/temp. sensor
3086	Blue passenger central courtesy light switch	4120	Engine oil level sensor
3087	Parking lights switch	4130	Engine oil thermal switch
3088	Parking lights relay	4131	Engine oil level + temp. sensor
3100	Boot lid switch	4132	Engine oil level + temp. grade sensor
3101	Detachable boot light	4200	Starter switch
3102	Cooled central storage compartment light	4205	Air filter pressure switch
3104	Shutter light	4210	Rev counter (if separate)

4240	Inlet pressure sensor	4737	Detection panel
4241	Turbocharger pressure indicator	4738	RR L centre seat belt switch
4300	Fuel min. level switch	4739	RR right centre seat belt switch
4310	Fuel gauge	4740	Overspeed buzzer
4311	Fuel pump electronic shock absorber unit	4741	RR LH 3rd row seat belt switch
4315	Fuel gauge (sender)	4742	RR RH 3rd row seat belt switch
4320	Tank cap presence switch	4743	RR RH + RR centre seat belt switch
4330	Fuel flow sensor (computer)	4744	Seat belt switch RR centre and RR LH
4335	Consumption interface unit	4745	Seat belt switch row RR LH and RR RH
4340	Consumption computer	4747	Seat belt switch Rear left/centr./right
4341	Fuel instant. consumption indic.	4748	Wireless detachable seat connection 2nd row on body
4400	Parking brake switch	4746	Belt unbuckled warning lights unit
4401	Parking brake light diode	4750	Anti-lock braking system buzzer
4402	Reversing buzzer diode	4760	Antitheft/key presence switch (noise ctrl)
4405	Brake servo vacuum check vacuum switch	4765	Anti-theft/key presence buzzer
4410	Brake fluid level switch	4790	Electric motor reminder buzzer
4420	ABS warning light relay	4800	Catalytic converter temperature sensor
4430	FR LH brake pad wear switch	4805	Catalytic converter temperature unit
4431	FR RH brake pad wear switch	4900	Fault detection indicator symbol
4432	RR LH brake pad wear switch	4905	Points information display
4433	RR RH brake pad wear switch	4990	Charging flap open monitoring switch
4440	Burned out bulbs detection unit	5000	Front window washer/wiper switch
4445	Burned out bulbs relay (warning light)	5001	Rain sensor
4450	Brake warning light (Australia)	5002	Rain sensor control relay
4500	Trim height corr. fluid level switch	5003	Rain sensor gear control relay
4600	Automatic gearbox gear lever position switch	5004	Automatic wiper computer.
4605	Automatic gearbox prog. or selection display	5005	Windscreen wiper relay
4610	Gearbox oil temperature switch	5006	Windscreen and rear screen wiper relay
4620	Vehicle speed sensor	5007	Rain/light sensor
4625	Vehicle speed interface unit	5008	Rain/Light/Tunnel Sensor
4630	Vehicle speedometer	5010	Windscreen wiper timer
4635	Tachograph electronic converter.	5015	Front wiper motor
4640	Odometer (if separate)	5016	Parking stop unit
4645	Odometer/warning lights electronic unit	5020	Cleaning fluid heater
4700	FR LH lock switch	5021	Pipe heater
4701	FR RH lock switch	5025	FR LH wiper motor
4702	RR LH lock switch	5030	FR RH wiper motor
4703	RR RH lock switch	5100	Front washer pump
4704	Bonnet closed switch (bonnet open detection)	5105	Left heated windscreen washer jet
4705	Bonnet lock switch (bonnet open detection)	5106	Right heated windscreen washer jet
4710	Hazard lights relay	5110	Cleaning fluid level switch
4715	Open door buzzer	5115	Front/Rear washer pump
4716	Parking position reminder buzzer	5200	Rear wiper switch
4720	Lights on reminder buzzer	5201	Rear screen washer switch
4725	Lighting reminder + key presence buzzer	5202	Rear screen wiper switch
4730	FR LH seat belt switch	5203	Rear screen washer switch
4731	FR RH seat belt switch	5204	Rear wiper motor switch
4732	RR LH seat belt switch	5205	Rear screen wiper relay
4733	RR RH seat belt switch	5210	Rear screen wiper timer
4734	RR C seat belt switch	5211	RR LH wiper motor
4735	Seat belt buzzer	5212	RR RH wiper motor
4736	Seat belt buckle management unit		

5215	Rear wiper motor	6115	RR RH electric window front switch
5300	Rear washer pump	6116	RR electric window control plate
5400	Headlight washer timer relay	6120	Rear electric window locking switch
5401	Headlight washer relay	6121	Rear functions locking relay
5405	Headlight washer pump	6122	Rear electric window locking switch
5406	Headlight washer switch	6125	Rear electric window relay
6000	Left electric window switch, Left-hand door	6126	+AA rear electric window relay
6001	Left electric window front switch	6130	RR LH electric window motor
6002	Right electric window front switch	6131	RR RH electric window unit + motor
6003	Passenger electric window driver's switch	6132	RR LH electric window unit + motor
6004	Passenger electric window switch	6133	RR LH anti-pinch electric window motor
6005	Right electric window switch, Right-hand door	6134	RR RH anti-pinch electric window motor
6007	Driver's electric window, driver's switch	6135	RR RH electric window motor
6010	Left electric window switch, Right-hand door	6140	Rear electric window + heated seat relay
6015	Right electric window switch, Left-hand door	6142	Left electr. quarter panel pos. recall switch
6016	Electric window + sunroof circuit diode	6145	Right electr. quarter panel switch
6017	Passenger electric window pass. switch	6147	Right electr. quarter panel pos. recall switch
6020	Front electric windows + sunroof relay	6150	Left electr. quarter panel motor
6021	Electric window relay	6155	Right electr. quarter panel motor
6025	Electric window + sunroof resupply relay	6200	FR LH open door switch
6029	FR LH sequent./anti-pinch unit	6201	Left open door switch diode
6030	Sequential electric window unit	6202	FR LH door lock assembly
6031	FR RH sequ. electric window unit + motor	6203	Switch isolation diode (FR/RR door)
6032	FR LH sequ. electric window unit + motor	6204	Right open door switch diode
6033	Anti-pinch unit	6205	FR RH open door switch
6034	Anti-pinch sensor	6206	Child locking switch
6035	FR LH anti-pinch electric window motor	6207	FR RH door lock assembly
6036	FR LH rear-view mirror/electric window ctrl. plate	6208	Left engine catch
6037	FR RH rear-view mirror/electric window ctrl. plate	6209	Right engine catch
6038	FR RH anti-pinch electric window motor	6210	RR LH open door switch
6039	RR micro-lower anticipation unit	6211	Lock switch
6040	FR LH electric window motor	6212	RR LH door lock assembly
6041	FR LH interior handle sensor	6213	FR LH ext. opening ctrl sensor
6042	FR LH exterior handle sensor	6214	FR RH ext. opening ctrl sensor
6043	FR RH interior handle sensor	6215	RR RH open door switch
6044	FR RH exterior handle sensor	6216	Open boot switch
6045	FR RH electric window motor	6217	RR RH door lock assembly
6046	RR LH exterior handle switch	6218	RR RH hinged door lock assembly
6047	RR RH exterior handle switch	6219	Door unlocking security relay
6048	FR microdescent anticipation unit	6220	Central door locking switch
6049	FR LH exterior handle switch	6221	RR RH hinged door locking switch
6050	FR RH exterior handle switch	6222	Boot locking assembly
6051	FR RH electric window unit + motor	6223	Window locking assembly
6052	FR LH electric window unit + motor	6224	Left shutter lock assembly
6060	Centralised electric window switch	6225	Right shutter lock assembly
6100	RR LH electric window rear switch	6226	Fuel filler flap relay
6101	RR RH sequ. electric window unit + motor	6228	El. window/door locking unit
6102	RR LH sequ. electric window unit + motor	6229	Locking prevention/locking switch
6105	RR RH electric window rear switch	6230	Infrared receiver (remote)
6110	RR LH electric window front switch	6231	Central locking HF receiver
		6232	Central locking HF transmitter
		6233	FR LH door lock assembly

6234	Door actuator cut-off unit	6286	Rear screen/boot authorisation relay
6235	Central locking unit	6287	Boot opening relay
6236	Left sliding door end of opening switch	6288	Rear screen opening relay
6237	Boot unlocking switch	6289	Boot striker panel
6238	Right sliding door end of opening switch	6290	Boot manoeuvre unit
6239	Sliding side door module	6291	Fixed terminal switch
6240	FR LH door lock motor	6292	Boot switch
6241	Fuel filler flap switch	6293	Left sliding side door split switch
6242	FR LH door deadlocking motor	6294	Boot shared relay
6243	Left sliding side door motor	6295	Left anti-pinch sensor
6244	Left sliding side door FR LH switch	6296	Right anti-pinch sensor
6245	FR RH door lock motor	6297	Shutter opening position switch
6246	Left sliding side door RR LH switch	6298	Rear access lock
6247	FR RH door deadlocking motor	6300	Driver's seat advance switch
6248	Right sliding side door motor	6301	Rear-view mirror + seat pos. mem. unit
6249	Right sliding side door FR RH switch	6302	Driver's seat adjustment assembly
6250	RR LH door lock motor	6303	Passenger seat adjustment assembly
6251	Right sliding side door RR RH switch	63A1	Driver's seat motor assembly
6252	RR LH door deadlocking motor	63A2	Passenger seat motor assembly
6253	RR LH hinged door locking motor	63A3	RR RH headrest folding motor
6254	Front right door lock assembly	63A4	RR LH headrest folding motor
6255	RR RH door lock motor	63A5	Rear seats unlocking unit
6256	Rear doors lock motor	6304	Pass. seat pos. mem. unit
6257	RR RH door deadlocking motor	6305	Passenger seat pos. switch
6258	RR RH hinged door locking motor	6306	Driver's seat pos. sensor
6259	RR RH hinged door deadlocking motor	6307	Seat position mem keypad
6260	Boot lock motor	6308	Presence sensor
6261	Shutter lock motor	6309	Passenger seat site sensor
6262	Boot deadlocking motor diode	6310	FR LH seat cushion switch
6263	Left door child safety motor	6311	FR LH seat front seat base switch
6264	Child safety relay	6312	FR LH seat rear seat base switch
6265	Fuel filler flap lock motor	6313	FR LH seat cushion length pos. sensor
6266	Loading flap lock motor	6314	FR RH seat cushion length pos. sensor
6267	Right door child safety motor	6315	Seat height adj. switch
6268	RR LH child safety LED	6316	Driver's seat height motor
6269	RR RH child safety LED	6317	Passenger seat height motor
6270	Left sliding door brake sensor	6318	FR LH seat cushion length motor
6271	Right sliding door brake sensor	6319	FR RH seat cushion length motor
6272	Left lock opening actuator	6320	FR LH seat runner motor
6273	Right lock opening actuator	6321	FR LH seat slider position sensor
6274	Left lock with integrated switch	6322	FR LH seat cushion adjustment mot.
6275	Right lock with integrated switch	6323	FR RH seat cushion adjustment mot.
6276	Boot lock actuator	6324	FR RH seat runner position sensor
6277	Moving terminal switch	6325	FR RH seat runner motor
6278	Left sliding side door switch	6326	FR LH seat headrest motor
6279	Right sliding side door switch	6327	FR RH seat headrest motor
6280	Right sliding side door split switch	6328	FR LH seat headrest pos. sensor
6281	Window opening switch	6329	FR RH seat headrest pos. sensor
6282	Boot opening switch	6330	FR RH seat cushion pos. sensor
6283	Rear shutter window opening switch	6331	FR LH seat cushion pos. sensor
6284	Rear shutter window lock actuator	6332	FR LH seat front seat base motor
6285	Open rear window switch	6333	FR LH seat front seat base pos. sensor

6334	FR LH seat rear seat base motor	6386	Rear RH head restraint retraction switch
6335	FR LH seat seat base pos. sensor	6387	Rear LH head restraint retraction switch
6336	Front RH seat fore and aft switch	6388	Rear RH head restraint motor
6337	FR RH seat front seat base motor	6389	Rear LH head restraint motor
6338	Seat memory unit	6390	Rear head restraint retraction switch
6339	FR RH seat rear seat cushion motor	6391	Rear RH seat adjustment assembly
6340	FR LH seat backrest switch	6392	Rear LH seat adjustment assembly
6341	FR LH seat backrest pos. sensor	6393	Front LH seat plate
6342	Front RH seat backrest pos. sensor	6394	Front RH seat plate
6343	Front LH seat tension level ctrl	6395	Driver's seat
6344	Front RH seat tension level ctrl	6396	Passenger seat
6345	Front RH backrest switch	6397	5 movements seat master unit
6346	Central armrest switch	6398	5 movements seat slave unit
6347	Central armrest motor	6399	2 movements seat slave unit
6348	Rear seat pos. memory unit	6400	LH rear view mirror switch
6349	Front RH position unit	6404	Memory and lighting unit
6350	Front LH backrest tilt motor		passenger rear view mirror
6351	Front RH seat position rear switch	6405	RH rear view mirror switch
6352	Rear seats position unit	6406	Rear view mirrors switch
6353	Rear LH seat fore and aft switch	6407	Folding rear view mirror unit
6354	Rear RH seat fore and aft switch	6408	Rear view mirrors folding relay
6355	Front LH backrest inclination motor	6409	Rear view mirrors fold-out relay
6356	Front LH seat lumbar adj. motor	6410	Driver's rear view mirror
6357	Front RH seat lumbar adj. motor	6411	LH rear-view mirror
6358	Front LH seat horizontal lumbar motor	6415	Passenger rear view mirror
6359	Front RH seat horizontal lumbar motor	6416	RH rear view mirror
6360	Front LH seat adjustment relay	6420	Folding rear view mirror switch
6361	Front LH seat vertical lumbar motor	6421	Reverse gear indexing unit
6362	Front RH seat vertical lumbar motor	6422	Reverse gear indexing switch
6363	Front LH seat horizontal lumbar pos. sensor	6430	Electric interior rear view mirror
6364	Front RH seat horizontal lumbar pos. sensor	6435	Anti-dazzle module
6365	Front RH seat adjustment relay	6440	Self-darkening int. rear view mirror
6366	Front RH seat high-speed runner motor	6450	Blind spot monitoring module
6367	Front LH seat high-speed runner motor	6451	LH camera
6368	Front LH seat vertical lumbar pos. sensor	6452	RH camera
6369	Front RH seat vertical lumbar pos. sensor	6470	Steering wheel adjustment switch
6370	Adjustment pump + SV ass. front LH seat	6471	Steering wheel height adjustment motor
6371	Front RH seat backrest infl. switch	6472	Steering wheel depth adjustment motor
6372	Front LH seat backrest infl. switch	6473	Steering wheel height/depth adj. mot.
6373	Front LH seat front stop pos. micro-switch	6500	Front LH passive seat belt switch
6374	Front LH seatback locked pos. micro-switch	6501	Front LH pyrotechnic seat belt inertia reel
6375	Adjustment pump + SV ass. front RH seat	6502	Front RH head side airbag module
6376	Front RH seat front stop pos. micro-switch	6503	Front LH head side airbag module
6377	Front RH seat folded backrest microswitch	6505	Front RH passive seat belt switch
6378	Front RH seat locked backrest micro-switch	6506	Front RH pyrotechnic seat belt inertia reel
6379	Front RH seat memory backrest micro-switch	6510	Front LH passive seat belt module
6380	Rear seat cushion adjustment switch	6515	Front RH passive seat belt module
6381	Rear seat cushion adjustment motor	6520	Passive seat belt timer relay
6382	Rear RH seat adjustment switch	6524	Front LH strap return pretensioner
6383	Rear LH seat adjustment switch	6525	Front RH airbag neutralised warning light
6384	Rear RH seat adjustment motor	6530	Front LH passive seat belt motor
6385	Rear LH seat adjustment motor	6535	Front RH passive seat belt motor

6539	Central front pretensioner	6600	Headlights corr. switch
6540	Front LH pyrotechnic seat belt module	6601	Vehicle height switch
6541	Front RH pyrotechnic seat belt module	6605	Headlights corrector unit
6542	Pyrotechnic seat belt module	6606	Headlights dyn. corr. unit
6543	FR LH seat presence detector	6610	LH headlight corrector
6544	Front RH strap return pretensioner	6615	RH headlight corrector
6546	FR RH seat presence detector	6616	Front body height sensor
6547	Front LH seat position sensor	6617	Rear body height sensor
6548	Front LH knee-level airbag module	6620	Vehicle height corr. ctrl fuse
6549	Front RH knee-level airbag module	6621	Vehicle height corr. motor fuse
6550	Front RH seat position sensor	6625	Vehicle height position switch
6551	RH curtain airbag module	6630	Parking brake signal relay
6552	LH curtain airbag module	6631	Brake pedal signal relay
6553	Airbag shunt resistor	6632	Hydraulic circuit fluid pressure switch
6555	Central front airbag mod.	6635	Vehicle height corr. sensor/ECU
6558	Rear LH roll-bar	6636	Vehicle height corr. motor relay
6559	Rear RH roll-bar	6637	Vehicle height corr. SV relay
6560	Rear safety support control unit	6640	Vehicle height corr. electric pump mot.
6561	Airbag ECU anti-interference coil	6645	Vehicle height correction SV
6562	Front RH side airbag module	6646	Vehicle height corr. fluid level switch
6563	Front LH side airbag module	6700	Differential lock ctrl switch
6564	Front RH airbag module	6701	Rear differential lock ctrl SV
6565	Front LH airbag module	6702	Engage 4x4 control SV
6566	Rear RH side airbag module	6703	Hold 4x4 drive SV
6567	Rear LH side airbag module	6705	Differential lock fuse
6568	Front RH strap return pretensioner	6706	Engage 4x4 control relay
6569	Front RH airbag neutralisation switch	6707	Engage 4x4 switch
6570	Airbags and pretensioner unit.	6708	Engage 4x4 and differential lock control switch
6571	RH side airbag unit	6709	Gear downshift closing contact
6572	LH side airbag unit	6710	Front diff. lock pos. switch
6573	Front LH satellite sensor	6711	Engage 4x4 closing sensor
6574	Front RH satellite sensor	6712	Rear diff. lock opening sensor
6575	Front LH pretensioner	6713	Differential engine speed sensor (CTH)
6576	Front RH pretensioner	6715	Rear diff. lock pos. switch
6577	Rear LH pretensioner	6720	Differential lock ECU
6578	Rear RH pretensioner	6730	Front differential lock motor
6579	Central rear pretensioner	6735	Rear differential lock motor
6580	Rear LH satellite sensor	6740	Differential lock relay
6581	Rear RH satellite sensor	6750	Controlled differential ECU
6582	Front LH frontal satellite sensor	6755	Traction control cut-off switch
6583	Front RH frontal satellite sensor	6760	Controlled differential proportional SV
6584	Front RH active anti-submarining module	6800	Sunroof switch
6585	Front frontal satellite sensor	6801	Sunroof runner limit switch
6588	Front LH strap return pretensioner	6802	Sunroof tilt limit switch
6590	Pedestrian impact detection control unit	6803	Sunroof runner control relay
6591	Front RH pedest. impact detect. accel. sensor	6804	Sunroof tilt control relay
6592	Front LH pedest. impact detect. accel. sensor	6805	Sunroof relay
6593	Pedestrian impact detection force sensor	6806	Sunroof zero pos. switch
6594	RH bonnet hinge actuator	6807	Sunroof relay in sunroof assembly
6595	LH bonnet hinge actuator	6808	Intermediate position sunroof switch
6596	LH rear 3rd row pretensioner	6809	Rear screen actuator power supply relay
6597	RH rear 3rd row pretensioner	6810	Sunroof motor

6811	One-touch sunroof motor	6874	Electric hood switch
6812	Level 2 one-touch sunroof motor	6875	Electric hood buzzer
6813	Level 3 one-touch sunroof motor	6876	Electric hood buzzer diode
6814	LH rear screen switch	6877	Boot opening diode
6815	RH rear screen switch	6878	LH closed roof switch
6816	Mechanism opening switch	6879	RH closed roof switch
6817	Level 2 and 3 sunroof front switch	6880	Open roof switch
6818	Level 2 sunroof switch	6881	Boot switch
6819	Level 3 sunroof switch	6882	Folding roof flap motor
6820	Sunroof assembly	6883	LH locked roof switch
6821	Anti-pinch sensor	6884	RH locked roof switch
6822	LH rear screen actuator	6885	Hydraulic pump unit
6823	RH rear screen actuator	6886	Blind switch
6824	Rear screen opening switch	6887	RH boot locked switch
6825	Sunroof infrared transmitter	6888	LH boot locked switch
6826	Sunroof infrared receiver	6889	Roof closed switch
6827	LH mechanism actuator	6890	Boot open switch
6828	RH mechanism actuator	6891	Cover panel retracted switch
6829	Mechanism actuator power supply relay	6892	Cover panel out switch
6830	Sunroof module	6893	Folding roof ECU
6831	LH roll bar switch	6894	Sunroof cover panel retracted/out switch
6832	RH roll bar switch	6895	Central electric window folding roof switch plate
6833	LH mechanism switch	6896	Folding roof assembly
6834	RH mechanism switch	6897	LH locked boot switch
6835	Sunroof control module	6898	RH locked boot switch
6840	LH electric quarter light switch	6899	Open boot switch
6841	Quarter light relay	6900	Luggage cover curtain switch
6842	LH electr. quarter light return switch	6901	Curtain switch
6845	RH electric quarter light switch	6910	Moving protector
6847	RH electr. quarter light return switch	70A1	ABS motor power supply relay
6850	LH electric quarter light motor	70A2	ABS solenoid valve power supply relay
6851	Folding roof switch	7000	Front LH ABS sensor
6852	Folding roof adjustment SV	7001	Power steering fluid pressure switch
6853	Folding roof hydraulic unit R1 relay	7005	Front RH ABS sensor
6854	Folding roof hydraulic unit R2 relay	7010	Rear LH ABS sensor
6855	RH electric quarter light motor	7013	Gear lever in neutral switch
6856	Roof locking/unlocking switch	7014	Rear wheels ABS gyro sensor
6858	Folding roof mechanism LH cover switch.	7015	Rear LH ABS sensor
6859	Folding roof mechanism RH cover switch.	7016	ABS accelerometer sensor
6860	Electric hood module	7017	ABS ECU fuse
6861	Electric hood switch	7018	ABS ECU relay
6862	Hood electric pump motor	7019	Idle speed maintain simul. resistor
6863	Rear part open SV	7020	ABS ECU
6864	Rear part closed SV	7025	ABS hydraulic assembly
6865	Electric hood close SV	7026	Braking assistance electric pump
6866	Electric hood open SV	7027	ABS solenoid valves fuse
6867	Cover open SV	7028	ABS shunt
6868	Cover closing SV	7029	ABS pump fuse
6870	Hood electric pump motor relay	7030	Pump assembly (GEP)
6871	Rear part jack switch	7031	GEP relay
6872	Electric hood jack switch	7040	Additional regulation unit
6873	Cover jack switch		

7041	Additional regulation unit electric plate	7301	Cruise control rotary switch
7045	Clutch pedal signal switch	7302	Lidar sensor
7046	Clutch position potentiometer	7305	Cruise control switch
7048	Controlled braking amplifier	7306	Cruise control safety switch (clutch)
7049	Controlled braking amplifier ECU	7307	Cruise control safety relay
7050	Traction control ECU	7308	Cruise control safety switch (brake)
7055	Traction control hydraulic assembly	7309	Engine manag.cruise control circuit shunt
7060	Traction control throttle actuator	7310	Cruise control ECU
7065	Traction control throttle potentiometer	7311	Cruise control fuse
7070	Brake electro-hydraulic unit	7312	Cruise control switch warning light diode
7071	Brake pedal travel sensor	7315	Vacuum pump assembly
7075	Traction control cut-off switch	7316	Speed limiter switch
7076	Traction control switch warning light relay	7318	Speed limiter analogue/digital conversion unit
7077	Hill holder cut-off switch	7320	Cruise control safety SV
7078	Hill holder buzzer	7325	Cruise control control
7080	Brake fluid level signal diode	7400	External temperature display
7090	Braking assistance vacuum pump	7500	Parking aid ECU
7091	Braking assistance pressure switch	7501	Laser telemeter
7092	Electric handbrake control	7502	Laser telemeter switch
7095	Electric handbrake assembly	7503	Parking aid front speaker
7100	Power steering regulator servo	7504	Parking aid rear speaker
7105	Variable power-assisted steering ECU	7505	Parking aid inhibit switch
7110	Power steering servo	7506	Ext. front LH proximity sensor
7111	Variable power steering proportional SV	7507	Int. front LH proximity sensor
7112	Power steering pressure sensor	7508	Ext. front RH proximity sensor
7113	Power steering limit sensor	7509	Int. front RH proximity sensor
7114	Variable power steering valve	7510	Ext. rear LH proximity sensor
7115	Power steering control relay	7511	Int. rear LH proximity sensor
7120	Power steering electric pump motor	7512	Ext. rear RH proximity sensor
7121	Power steering electric pump diode	7513	Int. rear RH proximity sensor
7122	Power steering electric pump assembly	7514	Parking aid buzzer
7125	Power steering power relay	7515	Parking aid cut-off switch
7126	Electric power steering ECU	7516	LH available space meas. proxim. sensor
7127	Electric power steering wheel angle sensor	7517	RH available space meas. proximity sensor
7128	Electric power steering torque sensor	7518	Middle front LH proximity sensor
7129	Electric power steering motor	7519	Middle front RH proximity sensor
7130	Multiplex steering wheel angle sensor	7520	Parking aid camera
7200	Regulator-computer signal relay	7521	Space available measurement switch
7201	Colour screen control module	7522	Parking aid video screen
7202	Colour screen infrared receiver	7525	Overtaking aid camera
7205	Scrolling switch (computer)	7526	Vehicle in blind spot warning light
7206	Check switch	7530	Overtaking aid management module
7210	Trip computer	7550	Lateral trajectory monitoring ECU
7211	Police trip computer	7551	Lateral trajectory monitoring LH 1 sensor
7214	Screen tilt motor	7552	Lateral trajectory monitoring LH 2 sensor
7215	Multifunction screen	7553	Lateral trajectory monitoring LH 3 sensor
7216	Multifunction screen keypad	7554	Lateral trajectory monitoring LH 4 sensor
7220	Clock	7555	Lateral trajectory monitoring LH 5 sensor
7222	External temperature sensor	7556	Lateral trajectory monitoring LH 6 sensor
7225	Ext. temperature display + clock	7559	Lateral trajectory monitoring LH vibrator
7226	External temperature display	7561	Lateral trajectory monitoring RH 1 sensor
7300	Cruise control switch	7562	Lateral trajectory monitoring RH 2 sensor

7563 Lateral trajectory monitoring RH 3 sensor	7729 Front RH active anti-roll accelerometer
7564 Lateral trajectory monitoring RH 4 sensor	7730 Rear LH shock absorber actuator
7565 Lateral trajectory monitoring RH 5 sensor	7731 Rear LH shock absorber interference coil
7566 Lateral trajectory monitoring RH 6 sensor	7732 Front active anti-roll accelerometer
7569 Lateral trajectory monitoring RH vibrator	7733 Rear LH active anti-roll accelerometer
7570 Lateral trajectory monitoring switch	7734 Rear RH active anti-roll accelerometer
7600 Tyres underinflated detection ECU	7735 Rear RH shock absorber actuator
7601 Underinflation detect. HF receiver	7736 Rear RH shock absorber interference coil
7602 Wheel transmitter module	7737 Suspension compressor
7605 Underinflation reset switch	7738 Suspension inhibit switch
7606 Front LH tyre pressure detection low frequency transmitter	7739 Central electronic unit motor
7607 Front RH tyre pressure detection low frequency transmitter	7740 Suspension electro-hydraulic unit
7608 Rear LH tyre pressure detection low frequency transmitter	7741 Front RH hydraulic suspension SV unit
7609 Rear RH tyre pressure detection low frequency transmitter	7742 Front LH hydraulic suspension SV unit
7610 Front tyre pressure detection high frequency transmitter	7743 Rear RH hydraulic suspension SV unit
7611 Rear tyre pressure detection high frequency transmitter	7744 Rear LH hydraulic suspension SV unit
7612 Underinflation high frequency detection transmitter	7745 Vehicle height selector
7700 Steering wheel angle sensor	7746 Controlled rear axle pad SV
7702 Body front height sensor	7747 Front suspension SV
7703 Body rear height sensor	7748 Rear suspension SV
7704 Body height potentiometer	7749 Boot height selector
7705 Body height sensor	7750 Suspension control panel
7706 Brake pressure switch	7751 Front LH body height sensor
7707 Accelerator pedal sensor	7752 Front RH body height sensor
7708 Front wheel travel sensor	7753 Rear LH body height sensor
7709 Rear wheel travel sensor	7754 Rear RH body height sensor
7710 Suspension switch	7755 Front suspension pressure sensor
7711 FR RH wheel travel sensor	7756 Rear suspension pressure sensor
7712 FR LH wheel travel sensor	7757 Pump ass. power supply current cut-off relay
7713 RR RH wheel travel sensor	7758 Variable shock absorber ECU
7714 RR LH wheel travel sensor	7759 Elec. unit motor cut-off relay
7715 Suspension ECU	7760 CAN bridge
7716 Front suspension SV	7769 Suspension buzzer
7717 Rear suspension SV	7770 Hydraulic fluid pressure and/or level buzzer
7718 Roll correction SV	7771 Tank SV
7719 Anti-roll electro-hydraulic unit	7772 Suspension ECU P-fuse
7720 Front LH shock absorber actuator	78A1 ESP motor power supply relay
7721 Front LH shock absorber interference coil	78A2 ESP solenoid valves power supply relay
7722 Active roll control ECU	7800 Stability program ECU (ESP)
7723 Active anti-roll accelerometer	7801 ESP cut-off switch
7724 Variable damping accelerometer	7802 ESP relay
7725 Front RH shock absorber actuator	7803 ESP steering wheel angle sensor
7726 Front RH shock absorber interference coil	7804 ESP accelerometer gyrometer
7727 Rear active anti-roll accelerometer	7805 ESP pre-loading pump
7728 Front LH active anti-roll accelerometer	7806 ESP hydraulic unit
	7807 Braking circuit pressure 1 sensor
	7808 Braking circuit pressure 2 sensor
	7809 ESP bridge
	7810 Front LH stability program sensor
	7815 Front RH stability program sensor
	7820 Rear LH stability program sensor
	7825 Rear RH stability program sensor

80A0	Multi-function blower relay	8049	Addit. air conditioning blower resistor
80F1	Additional air conditioning P-fuse 1	8050	Blower motor (if separate)
80F2	Additional air conditioning P-fuse 2	8051	RH blower motor
8000	Air conditioning switch	8052	LH blower motor
8001	Air conditioning compressor relay shunt	8053	LH addit. blower speed switch
8002	Internal ventilation switch	8054	RH addit. blower speed switch
8003	Internal ventilation motor	8055	First resistor unit control relay
8004	Air conditioning cut-off module	8056	2nd resistor unit control relay
8005	Air conditioning compressor relay	8057	3rd resistor unit control relay
8006	Evaporator thermistor (if separate)	8058	R2 and R3 control relay
8007	Pressure switch	8059	Additional air con blower motor
8008	Air conditioning motor coolant thermistor	8060	Air conditioning heater unit
8009	Freon pressure sensor	8061	Air conditioning heater unit relay
8010	Coolant temperature module	8062	Air conditioning heater unit shunt
8011	Warm loop coolant pump control relay	8063	RH mixer flap gear motor
8012	Air conditioning cut-off pressure switch	8064	LH mixer flap gear motor
8013	Additional air conditioning SV	8065	Mixer flap gear motor
8014	Idle speed stability SV	8066	Rear air conditioning heater unit
8015	Compressor cut-off relay by temp. module	8067	Air inlet flap control
8016	Relay for compress. cut-off via CCM	8068	LH air inlet flap gear motor
8017	Warm loop SV control relay	8069	RH air inlet flap gear motor
8018	Blower high speed control relay	8070	Air inlet flap gear motor
8019	Blower low speed control relay	8071	Distribution flap gear motor
8020	Air conditioning compressor	8072	Airflow flap gear motor
8021	Front LH air conditioning control panel	8073	Footwell/deicing flap gear motor
8022	Air conditioning motor coolant temper. switch	8074	Chopper valve
8023	Front RH air conditioning control panel	8075	RH distribution flap gear motor
8024	LH passenger compartment air thermistor	8076	LH distribution flap gear motor
8025	Air conditioning control panel (if separate)	8077	Rear blower speed switch
8026	Additional air conditioning control panel	8078	Rear blower motor
8027	Additional air conditioning switch	8079	Air quality sensor
8028	RH passenger compartment air thermistor	8080	Air conditioning ECU
8029	Air conditioned central storagecompartment	8081	Rear LH air conditioning control panel
8030	Passenger compartment air thermistor	8082	Mixer flap gear motor control relay.
8031	Coolant thermistor	8083	Rear RH air conditioning control panel
8032	External air thermistor	8084	Passenger compartment air heating resistor
8033	Brightness thermistor	8085	Power blower motor
8034	Footwell air thermistor	8086	LH additional blower unit
8035	Passenger compartment temp.electron. thermostat	8087	RH additional blower unit
8036	Temperature display control	8088	Additional heating control panel
8037	Air vent air thermistor	8089	Additional heater SV fuse
8038	Light sensor	8090	Compressor protection diode
8039	Front seat air blower	8091	Independent/additional heater control relay
8040	Blower speed control	8092	Additional heater switch
8041	Centre rear air blower	8093	Additional heater fuel pump
8042	Rear air blower	8094	Additional heater fuse
8043	RH blower control module	8095	Additional heater control fuse
8044	LH blower control module	8096	Additional heater on signal diode
8045	Blower control module (if separate)	8097	Fuel heating control switch
8046	Blower speed resistor (if separate)	8098	Additional heater
8047	Blower speed switch	8099	Independent/add. heater igniter
8048	Blower relay	8100	Front cigarette lighter

8105	Rear cigarette lighter	8313	Front RH heated seat relay
8106	Rear cigarette lighter 2	8314	Passenger heated bench seat
8110	Heated rear screen switch	8315	Front RH heated seat
8111	Demisting switch	8316	Heated cushion adjustment module
8112	Rear screen demisting sensor	8317	Heated backrest adjustment module
8115	Heated rear screen relay	8318	Rear LH heated seat rheostat
8116	Heated rear screen timer relay	8319	Rear RH heated seat rheostat
8118	LH heated rear screen	8320	Rear heated seat
8119	RH heated rear screen	8321	Front LH heated seat timer relay
8120	Heated rear screen	8322	Front RH heated seat timer relay
8121	Rear screen demisting motor	8323	Rear LH heated seat timer relay
8122	Top heated rear window	8324	Rear RH heated seat timer relay
8125	Front LH heated rear-view mirror	8325	Rear LH heated seat
8130	Front RH heated rear view mirror	8326	Rear RH heated seat
8140	Heated windscreen	8327	Front LH seat cushion heating element
8141	Heated windscreen switch	8328	Front LH seat backrest heating element
8145	Heated windscreen relay	8329	Front RH seat cushion heating element
8146	Heated windscreen timer module.	8330	Front RH seat backrest heating element
8200	Coded immobiliser keypad	8331	Front LH heated seat adjustment module
8201	Coded immobiliser warning light	8332	Front RH heated seat adjustment module
8203	Injection ECU power supply relay warning light	8333	Front LH heated seat sensor
8204	Injection ECU re-power relay	8334	Front RH heated seat sensor
8205	Diagnostic light circuit warning light	8335	Central seat cushion heating element
8206	Coded immobiliser door circuit warning light	8340	Front LH heated seat adjustment ass.
8207	Coded immobiliser relay for diesel pump	8345	Front RH heated seat adjustment ass.
8208	Coded imm./transponder electronic module	8346	Front RH heated seat switch
8209	Transponder coil	8401	Resistance adapter
8210	Transponder relay shunt	8402	Aerial cable
8220	Analogue module transponder	8403	Aerial filter
8221	Control module transponder	8404	Aerial
8235	Engine start switch	8405	Electric aerial
8240	Hands-free starting access electronic module	8406	Aerial amplifier
8241	Passenger compartment internal aerial 1	8407	Duplexer
8242	Passenger compartment internal aerial 2	8408	Radio amplifier
8243	Boot internal aerial	8409	Heated rear screen aerial assembly
8244	Emergency aerial	8410	Car radio
8245	Front LH external aerial	8411	Front LH/RH radio balance
8246	Front RH external aerial	8412	Front/Rear radio balance
8247	Rear LH external aerial	8413	Car radio control
8248	Rear RH external aerial	8414	Navigation audio line transform.
8249	Boot external aerial	8415	CD loader
8300	Front LH heated seat switch	8416	CD interface
8301	Heated seats adj. module	8417	Radio receiver/transmitter fan
8302	Front LH heated seats rheostat	8418	Radio aerial adapter
8303	Front RH heated seats rheostat	8419	Radio amplifier relay
8305	Front RH heated seat switch	8420	Front LH door speaker
8306	Rear LH heated seat switch	8421	Front speaker
8307	Rear RH heated seat switch	8422	Front LH speaker
8308	Heated seats relay	8423	Front RH speaker
8310	Front LH heated seat	8424	Audio amplifier
8311	Heated seat thermostat	8425	Front RH door speaker
8312	Front LH heated seat relay	8426	Bass speaker

8427	Bass boost speaker	8485	Radiotelephone keypad
8428	Rear LH hifi coaxial	8486	External video audio input unit
8429	Rear RH hifi coaxial	8487	Multimedia assembly
8430	Rear LH speaker	8488	PC auto colour screen
8431	Rear LH central speaker	8489	PC auto connection unit
8432	Aerial filter 2	8490	PC auto control unit
8433	Radio power supply filter	8491	Aerial switching module
8435	Rear RH speaker	8492	HANDSFREE KIT
8436	Rear RH central speaker	8493	Telematics receiver control
8440	Front LH tweeter speaker	8494	Telephone charge power supply
8442	Front LH medium speaker	8495	Television aerial assembly (Japan)
8443	Front LH boomer speaker	8496	Electronic toll system (Japan)
8444	Front LH woofer speaker	8497	Filter (Japan)
8445	Front RH tweeter speaker	8498	AM/FM aerial (Japan)
8447	Front RH medium speaker	8499	External audio input unit
8448	Front RH boomer speaker	8500	Navigation computer
8449	Front RH woofer speaker	8501	GPS aerial
8450	Rear LH tweeter speaker	8502	Navigation speaker
8451	Front LH heated seat	8503	Control keypad
84A1	Front centre console USB socket	8504	Traffic info module
84A2	MP3 player jack socket	8505	Traffic info switch
84A3	Aerial filter + heated rear screen	8506	RH audio/nav line conversion
84A4	Aerial filter + heated rear screen	8507	LH audio/nav line conversion
84A5	Telematic transmitter-receiver service module	8508	Navigation repeat switch
8800	Trailer cooler control relay	8509	Traffic condition signal warning light
8452	Rear LH medium speaker	8510	Navigation assembly (Japan)
8453	Rear LH boomer speaker	8511	Brake signal warning light (Japan)
8454	Rear LH subwoofer speaker	8512	Receiving/transm. module Traffic information
8455	Rear RH tweeter speaker	8520	Authorised speed control module
8457	Rear RH medium speaker	8521	Dialogue unit
8458	Rear RH boomer speaker	8522	Authorised speed stop switch
8459	Rear RH subwoofer speaker	8523	System data/transm. acquis +recovery.
8460	Rear LH headphones socket	8600	Anti-theft alarm module
8461	Resistor 1 (Japan)	8601	Switch with anti-theft alarm key
8462	Resistor 2 (Japan)	8602	Anti-theft alarm movement detection unit
8463	Resistor 3 (Japan)	8603	Anti-theft alarm switch
8464	Resistor 4 (Japan)	8604	Movement detection sensor
8465	Rear RH headphones socket	8605	Anti-theft alarm siren
8470	Front police radio power supply	8606	Anti-theft alarm warning light
8471	Rear police radio power supply 1	8607	Ultrasound transmitter
8472	Rear police radio power supply 2	8608	Ultrasound receiver
8473	Rear police radio power supply 3	8609	Ultrasound transmitter/Anti-theft alarm warning light
8475	Mobile phone handset	8610	Anti-theft alarm boot lid switch
8476	Radio telephone control electronic module A	8611	Anti-theft alarm bonnet switch
8477	Radio telephone control electronic module B	8612	Alarm rear RH hinged door switch
8478	Auto PC micro	8613	Alarm rear LH door switch
8479	PC auto switch	8614	Alarm rear RH door switch
8480	Telematics transceiver	8615	Alarm dipped beam power relay
8481	Radiotelephone speaker	8616	Anti-theft alarm relay
8482	Radiotelephone microphone	8617	Anti-theft alarm relay
8483	Radiotelephone on buzzer	8618	Anti-lift switch
8484	Radiotelephone aerial		

8630 Protection module
 8700 Electric blind motor
 8701 Electric blind front switch
 8702 Electric blind rear switch
 9000 Central module
 9005 Front LH light ECU
 9010 Cooling fan unit ECU
 9015 Front RH light ECU
 9020 Washer/wiper ECU
 9025 Sensor acquisition ECU
 9030 Front LH door ECU
 9031 Seat ECU
 9035 Controls ECU
 9040 Display ECU

9045 Passenger compartment ECU
 9050 Front RH door ECU
 9055 Signalling switching ECU
 9056 Automatic lighting ECU
 9060 Wipers switching ECU
 9065 Console ECU
 9070 Trailer ECU
 9075 Rear LH light ECU
 9080 Hatch ECU
 9085 Rear RH light ECU

ECU = multiplex electronic control unit

"V" warning light numbers

V0004 Stop warning
V100 Charge
V101 Traction batt. charge OK
V102 Traction batt. discharge
V117 12V converter fault
V110 Ignition test
V115 Preheating
V120 Injection test
V123 Pump cut-off
V130 Ignition/injection test
V170 Temporary fault
V171 Forward drive
V172 Reverse drive
V173 Insulation fault
V180 Gas supply warning light
V200 Rear fog light
V201 Front fog light
V230 Hazard warning lights
V231 LH/RH direction indicator
V232 LH direction indicator
V233 RH direction indicator
V260 Side lights
V261 Dipped headlights
V262 Main beam headlights
V266 Fog light warning light
V401 Engine coolant level
V417 Battery electrolyte low
V402 Engine coolant temperature
V404 Screen washer fluid level low
V405 Water detected in separator
V411 Engine oil pressure
V412 Engine oil level
V413 Engine oil temperature
V420 Starter warning light

V425 Clogged air filter
V430 Petrol level low
V432 Filler cap open
V440 Parking brake
V441 Brake fluid level
V442 Handbrake 1 fluid level
V443 Brake pads worn
V444 Bulbs blown
V450 Suspension fluid level
V460 Gear lever position
V461 Gearbox oil temperature
V470 Open door
V471 Front Doors and 2 side doors
V472 Front doors and 1 side door
V473 Seat belt buckle
V480 Catalytic converter temperature
V625 Deadlocking
V656 Front airbag
V657 Side airbag
V658 Passenger airbag inhibition
V664 Ride height corr. fluid level
V670 Differential lock test
V679 Reduction gear shift
V700 ABS test
V701 ABS active
V705 Traction control
V706 Traction control function
V731 Cruise control
V707 Brake pedal pos. (starting authorised)
V770 Suspension diagnostic
V780 Stability diagnostic (ESP)
V818 Additional heater min. level
V811 Heated rear screen
V822 Transponder

Numbering of "C" special function connectors

C001	Central diagnostic	C721	Multifunction screen test connector
C002	For troubleshooting wires	C771	Suspension test connector
C004	Instrument panel diagnostic	C800	Air conditioning test connector
C103	Engine running signal test connector	C820	Coded immobiliser test connector
C104	Emergency stop switch fuse holder	C840	Radio power supply + permanent supply connector
C105	General short-circuit optional connector	C860	Anti-theft alarm test connector
C109	Ignition test connector	C861	Anti-theft alarm power supply
C110	Ignition anti-interference connector	C863	protection module test connector
C111	Ignition adjustment connector for idle speed	C103	Engine running signal test
C120	Injection test connector	C105	General short-circuit option
C125	Anti-pollution adjustment connector	C109	Ignition test
C126	Power supply pump fuse holder connector	C110	Ignition anti-interference
C127	EGR test connector	C111	Ignition reg for idle speed
C128	Carburettor heating resistor fuse holder connector	C120	Injection test
C130	Ignition/injection test connector	C125	Antipollution adjustment
C133	Ignition/injection computer fuse holder connector	C126	Power supply pump fuse holder
C136	Heated bracket fuse holder	C128	Fuel heating resist. fuse holder
C137	Oxygen sensor heating fuse holder connector	C127	EGR test
C140	TDC connector	C130	Ignition/injection test
C145	System development connector	C133	Engine management computer fuse holder
C150	Fan assembly operation test connector	C137	Oxygen sensor heating fuse holder
C163	Automatic gearbox test connector	C140	TDC
C170	Electronic management test connector	C145	System development
C180	Gas diagnostic 1	C150	Fan unit operation test
C181	Gas diagnostic 2	C163	Automatic gearbox test
C182	Rich gas	C170	Electronic management test
C183	Lean gas	C180	LPG diagnostic
C200	Caravan socket power supply	C231	Driving school dual control
C231	Driving school double control connector	C260	Front fog light fuse holder
C260	Front fog light fuse holder connector	C464	Chronotachograph power supply fuse holder
C310	Caravan lighting + permanent power supply	C623	Locking test
C311	Brake switch connection	C630	Seat memory diagnostic
C464	Chronotachograph power supply fuse holder connector	C654	Pyrotechnic seat belt test
C623	Locking test connector	C656	Airbag test
C630	Seat memory test connector	C657	Pretensioners/airbags test
C654	Pyrotechnic seat belt test connector	C664	Ride height corr. circuit bleed
C656	Airbag test connector	C686	Electric hood test
C657	Airbag and pretensioner test connector	C700	ABS test
C664	Ride height correction circuit bleed connector	C701	ABS power fuse holder
C680	Sunroof connection	C705	Traction control diagnostic
C686	Electric hood test connector	C710	Variable power steering test
C700	ABS test connector	C721	Multifunction screen test
C701	ABS power fuse holder connector	C771	Suspension test
C705	Traction control test connector	C800	Air conditioning test
C710	Variable power steering test connector	C820	Coded immobiliser test
		C840	Radio + permanent power supply
		C860	Anti-theft alarm test
		C863	Protection unit test

Numbering for special cases

AE00	Electric anti-theft	BF02	Boot fuse box
B001	Equipotential terminal 1	BFDB	Fuse box from battery
B002	Equipotential terminal 2	BFH1	Passenger compartment 5-fuse box 1
B003	Equipotential terminal 3	BFH2	Passenger compartment 5-fuse box 2
B004	Equipotential terminal 4	BGP0	Central management unit (police)
B005	Equipotential terminal 5	BH12	Passenger compartment 12-fuse box
B006	Equipotential terminal 6	BH28	Passenger compartment 28-fuse box
B007	Equipotential terminal 7	BM27	27-fuse engine systems interface
B008	Equipotential terminal 8	BM34	34-fuse engine systems interface
B009	Equipotential terminal 9	BMF1	Maxi-fuse module 1
B010	Equipotential terminal 10	BMF2	Maxi-fuse module 2
B011	Equipotential terminal 11	BMF3	Maxi-fuse module 3
B012	Equipotential terminal 12	BMF4	Maxi-fuse module 4
B013	Equipotential terminal 13	BPCB	Battery cable protection unit
B014	Equipotential terminal 14	BSC1	Boot accessory unit
B015	Equipotential terminal 15	BSI1	built-in systems interface (BSI)
B016	Equipotential terminal 16	BSR1	Tow support unit
B017	Equipotential terminal 17	BTC1	Body repair transformer unit
B018	Equipotential terminal 18	CA00	Anti-theft switch
B019	Equipotential terminal 19	CBE1	Electronic handbook (police)
B020	Equipotential terminal 20	CCS1	Signal. central. ctrl assembly (police)
B021	Equipotential terminal 21	CJ01	Junction connector 1
B022	Equipotential terminal 22	CJ02	Junction connector 2
B023	Equipotential terminal 23	CP00	Rear 12V socket
B024	Equipotential terminal 24	CP01	Front 12V socket
BB00	Battery	CP02	Rear LH 12V socket on centre console
BB01	Rear battery assembly	CP03	Rear RH 12V socket on centre console
BB02	Front lower battery assembly	CP04	Rear central 12V socket
BB03	Front upper battery assembly	CP05	Boot 12V socket
BB04	Central battery assembly	CPC0	LH sliding side door switch assembly
BB05	Starter battery	CPC1	RH sliding side door switch assembly
BB06	Service battery	CT00	Steering wheel rotary switch
BB07	Alternator-starter power battery	CPH	Passenger compartment protection unit (module)
BB08	Traction battery (Hybrid Traction System)	CV00	Switch module under steering wheel(COM200X)
BB10	Power supply module	DRA0	Drain (shielding)
BB12	+ battery connection terminal	DRA1	Drain 1 (shielding)
BCM0	Multifunction switch unit	ECV0	Control assembly in steering wheel
BCM1	LH multifunction switch unit	MF00	Service battery maxi-fuse
BCM2	RH multifunction switch unit	MF01	Alternator maxi-fuse
BCM3	LH multifunction switch unit	MF02	Starter battery maxi-fuse
BCM4	RH multifunction switch unit	MF175	175A engine comp. MEGA-fuse
BCM5	Multifunction switch unit under the steering wheel	MFM1	Engine comp. MEGA-fuse 1
BCP3	3 relay protection and switching module	MFAV	Front fuses information display
BF00	Passenger compartment fuse box	PC01	Rear RH outlet
BF01	Engine compartment fuse box	PC02	Rear LH outlet
		PFC1	Boot fuse holder 1

PR01	Passenger compartment relay support plate	PSF1	Engine comp. fuse module-support plate
PRF1	Fuse-relay holder 1 engine compartment	PSF2	Boot fuse module-support plate
PRF2	Fuse-relay holder 2 engine compartment	PT00	Transformer socket
PS00	Support plate (if separate)	RP00	BSI power relay
PSF0	Passenger compartment fuse module-support plate	VMF1	Steering wheel with fixed centralised control

Technical abbreviations and interpretations

AAC	Camshaft
AAS	Parking aid
ADDGO	Diesel additive
A/C	Air Conditioning
ABS (ABR)	Anti-Lock Braking System
ADAM (AFU)	Advanced Dynamic Aid Mechanism
ADC	Coded immobiliser
AET	Electronic immobiliser with transponder
AMVAR	Suspension with electronic management
ASR	Wheel traction control (Acceleration Slip Regulation)
BRAC	Cooling requirement for air conditioning
BEE	Water inlet unit
BM (BSM)	Engine systems interface (Example BM34)
BMC	Bulk moulding compound
BSE	Water outlet unit
BSI	Built-in systems interface
BTE	Retractable roof unit
BTO	Odometer warning lights unit
BVA	Automatic gearbox
BVM	Manual gearbox
CAN	Controller Area Network
CBC	Corner brake control
CCM (ECM)	Engine management computer
CD	Compact Disk
CDS (ESP)	Electronic stability program
CEE	EUROPEAN Economic Community
COM200X	Switching module under the steering wheel (CV00)
CPH	Passenger compartment protection unit
CR	Common Rail (single distributor)
CTN	Negative temperature coefficient
CV00	Switching module under the steering wheel (COM200X)
DAE	Electric power-assisted steering
DAV	Variable power-assisted steering
DNS (1/2)	Domain Name Server (1 or 2 internet providers)
DSG	Underinflation detection
ECM (CCM)	Electronic engine management
EEPROM	Electrically Erasable Programmable ROM
EDC	electronic diesel test
EGR	Exhaust Gas Recirculation
EMF	Multifunction screen

EOBD	European On-Board Diagnostics
EPROM	Erasable Programmable ROM
ESMC	Extreme sheet moulding compound
ESP (CDS)	Electronic stability program
ESV	Wiper
EU	European Union
SV	Solenoid valve
SVA	Emergency Valve Assistant (emergency brake assist)
FAP	Particle filter
FRIC	Cooling function integrated in the ECU
GEP	Electro-pump assembly
GMV	Cooling fan unit
GNV	Natural Gas Vehicle
GRA	Additional regulation assembly
HDC	Top of Column
HDI	High pressure direct injection
HF	High frequency
HP	Speaker
HPI	High pressure injection (direct - petrol)
HSN	High Silicon Nitrile
IR	Infrared
JDD	Fault log
LAD	Discharge bulb
LIN	Local Interconnect Network
LVV	Vehicle speed limiter
MSR	Motor Schleppmoment Regelung (Engine torque adjustment)
PLC(M)	Sliding side door (motorised)
PSF	Fuse support plate
PTFE	Poly Tetra Fluor Ethylen
RAA	Intake air heater
RAS	System air cooler
RCO	Opening cyclic ratio
REF	Electronic braking distribution
REAR	Rear additional blower air flow regulation
REF	Electronic braking distribution
RF	A/C (manual adjustment)
RFTA	A/C with automatic adjustment (passenger compartment temperature/flow of air/air distribution)
RFTD	A/C (adjustment: air flow/passenger compartment temp.)
RVV	Cruise control
SAI	Integrated intake system
SHED	Sealed Housing for Evaporation Determination
SMC	Sheet moulding compound
SWIRL	Air turbulence
TE	Retractable roof
TO	Sunroof
VAN	Vehicle Area Network
VTC	Valve Timing Camshaft (Variable distribution)
VVT	Variable Valve Timing

Identification of connectors

BA: White

BE: Blue

BG: Beige

GR: Grey

JN: Yellow

MR: Brown

NA: Natural

NR: Black

OR: Orange

RG: Red


RS: Pink

VE: Green

VI: Purple


VJ: Green/Yellow

Identification of earths, connectors and differentiators (605 to AM 94, 106 and 405 to AM 92)

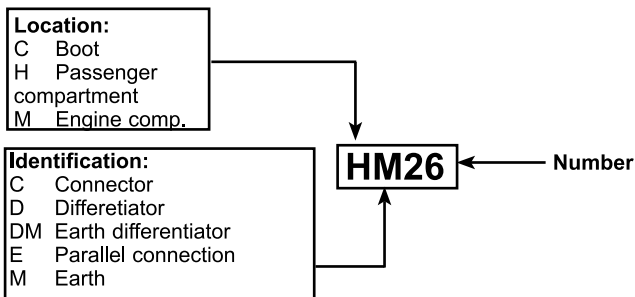

Identification of earths, parallel connections, connectors and differentiators

(1007, 106 from MJ93/206, 207, 306, 307, 405 from MJ93/406, 407, 605 from MJ95/607/806/807/Expert/Partner)

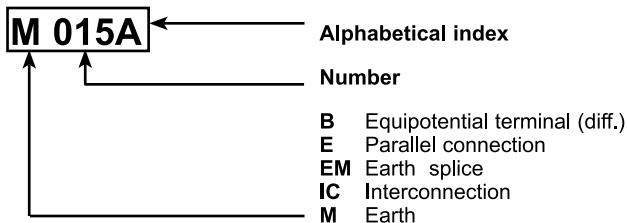

Numbering of wires (diagrams without BSI)


Before fuse power supply	After fuse power supply	Description
AA (+AA) ..	A	+ Accessories feed
BB	B	+ Battery feed
CC (+CC) ..	C	+ After ignition feed Engine run.
FF	F	+ battery feed
KK	K	+ after ignition feed cut-off
LL	L	+ Plus alternator
VV	V	+ Side light
	P	+ Headlights timed
	T	+ battery feed

Diverse power supply


BM	After fuse + battery feed power supply (fuse box in engine compartment)
CE	+ Lighting after ignition feed power supply (anti-theft output to lighting switch)
CR	Dipped/main beam power supply output (lighting switch)
PA	Additional driving lights power supply
PB	Front fog lights power supply
PC	Dipped headlights power supply
PR	Main beam headlights power supply
RC	Dipped/main beam power supply output (lighting switch)
VR	+ Side light after rheostat power supply
D	Drain
M	Earth
+P	Plus permanent
Earths	
D	Drain
M	Earth
MP	Headlights earth
MV	Warning light earth
Multiplexing	
90 ..	Multiplexing wires

Examples


2 5 6

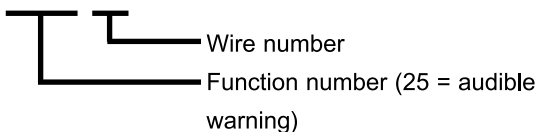


A A 1

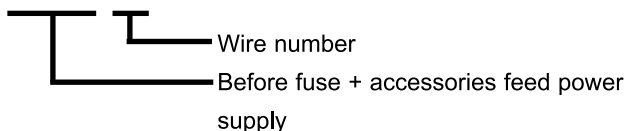


B 0 2

 

V 0 9 1

 

M 1 0 1

 

Numbering of wires (diagrams with BSI)

connector

A	+ accessories feed
AE	BSI output + accessories feed
AH	Passenger compartment fuse box outlet + accessories feed
AM	BM34 output + accessories feed
B	direct + battery feed
BD	starting + battery feed
BE	BSI output + battery feed
BECE	BSI + battery output /BSI output + after ignition feed (park shunt)
BF	Max fuse output service + battery
BH	Passenger compartment fuse box output + battery
BM	BM34 output + battery
BM1	protected BM24 output + battery
BM2	unprotected BM34 output + battery
BS	service + battery
C	+ after ignition feed
CE	BSI output+ after ignition feed
CE1	protected BSI output+ after ignition feed
CE2	unprotected BSI output+ after ignition feed
CH	passenger compartment fuse box outlet + after ignition feed
CM	BM34 output + after ignition feed
D	+ starting
DE	after relay + starting
K	+ after ignition feed (cut-off on starting)
KE	BSI output + after ignition feed (cut-off on starting)
KH	passenger compartment fuse box output + after ignition feed (cut-off on starting)
KM	BM34 output + after ignition feed (cut-off on starting)
L	direct + alternator
LH	Passenger compartment fuse box output + alternator
LM	BM34 output + alternator
P	+ engine running
PE	BSI output + engine running
PM	BM34 output + engine running
R	+ rheostat sidelight
RCD	+ REMOTE CTRL WAKE UP
T	+ timed (10 minutes)
V	+ side lights
VE	BSI output + sidelights
XC	+ VAN body
XC1	+ VAN body 1
XC2	+ VAN body 2
XC3	+ VAN body 3
XE	+ VAN comfort
Z	+ CAN

Earth


BL	shielding
MC	body earth
ME	electronic earth
MM	engine earth
SF	wireless equipotential

Intersystem and Multiplexing (link bus)


9000 CAN HIGH intersystem
 9001 CAN LOW intersystem
 9002 VAN DATA body
 9003 VAN DATA B body
 9004 VAN DATA comfort
 9005 VAN DATA B comfort
 9006 K line diagnostic (gearbox + engine manag.)
 9007 L line diagnostic (gearbox + engine manag.)
 9008 Headlights corr./BSI K3 line diagnostic
 9009 CDS/ABS / AMVAR K4 line diagnostic
 901 CCS_CMM K6 line diagnostic
 9010 CAN HIGH intersystem 2
 9011 CAN LOW intersystem 2
 9012 VAN DATA body 1
 9013 VAN DATA B body 1
 9014 Alternator-starter line K5 diagnostic
 9015 Variable power steering line K9 diagnostic
 9016 Intersystem wake-up signal
 9017 CAN HIGH low speed body
 9018 CAN LOW low speed body
 9019 CAN HIGH low speed safety
 9020 CAN LOW low speed safety
 9021 BSI wake-up output
 9022 VAN DATA body 2
 9023 VAN DATA B body 2
 9024 CAN DATA HIGH comfort
 9025 CAN DATA LOW comfort
 9026 CAN DATA HIGH body
 9027 CAN DATA LOW body

9028 CAN DIAGNOSTIC HIGH (BSI)
 9029 CAN DIAGNOSTIC LOW (BSI)
 9030 CAN HIGH intersystem 4
 9031 CAN LOW intersystem 4
 9040 LIN 1
 9041 LIN 2
 9042 LIN STL
 9043 LIN headlight
 9044 LIN passenger compartment 1
 9045 BSI/ADML wake-up signal
 9050 PCS wake-up signal
 9060 Gas diagnostic line K
 9100 BSI K diagnostic
 9110 CAN HIGH intersystem 3
 9111 CAN LOW intersystem 3
 9112 CCS dedicated CAN HIGH
 9113 CCS dedicated CAN LOW
 9989 Anti-pinking deactivation signal
 9990 CAN LOW micro 1
 9991 CAN HIGH micro 1
 9992 CAN LOW micro 2
 9993 CAN HIGH micro 2
 9994 S_ANA A micro 1
 9995 S_ANA B micro 1
 9996 S_ANA A micro 2
 9997 S_ANA B micro 2
 9998 Line K micro 1
 9999 Line K micro 2

 
Non fuse-protected power supply




Fuse-protected power supply

 


Fuse-protected power supply

 

Earth

 

Diagnostic or multiplex link bus

 

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

List of cable functions

STARTING - POWER GENERATION

100 SOLENOID CONTROL
 1000 COLD STARTING CONTROL
 1001 COLD STARTING POWER SUPPLY
 1002 COLD STARTING PUMP
 1003 COLD STARTING SV
 1004 COLD STARTING SV + PUMP
 1010 STARTER ANALOGUE EARTH OUTPUT
 1011 ENG. SPEED INCREASE REQU. OUTPUT
 1012 RELAY CONTROL OUTPUT IGNIT.CONDIT.
 1013 AIR CON STATUS FUNCTION
 RELAY CONTROL OUTPUT
 1014 LOAD SHEDDING STATUS FUNCTION
 RELAY CONTROL OUTPUT
 1015 OPERATIONAL GENERATOR STATUS
 FUNCTION RELAY CONTROL OUTPUT
 102 + STARTER SIGNAL
 1020 STARTING BY CCM + CTRL
 1021 HANDS-FREE STARTING CTRL
 1022 BACKUP BATTERY INPUT
 1024 STARTER WARNING LIGHT OUTPUT
 1025 IMPLEMENT STARTER REQUEST
 1026 STARTER IMPLEMENTATION COMMAND
 1027 ENGINE LOCKING COMMAND
 1028 LOCKER POS. SENSOR POWER SUPPLY
 1029 LOCKER POS. SENSOR SIGNAL
 103 STARTER FAULT SIGNAL
 1030 BATTERY CHARGE WARNING LIGHT
 ACTIV. COMMAND
 1035 SHIELD MONITORED VOLTAGE OUTPUT
 1036 BSI OUTPUT/P SHIELD CTRL SIGNAL
 1037 SHIELD IP CTRL SIGNAL
 1038 SHIELD DIAGNOSTIC SIGNAL
 1039 SHIELD DIAGNOSTIC SIGNAL EARTH
 104 ALTERNATOR CHARGE SIGNAL
 1040 STARTER MOTOR EXCIT. PUMP COM.
 1041 ENGINE UNLOCKING COMMAND
 1042 ENGINE FUNCTION POWER SUPPLY
 1045 BLOCKER POS. SENSOR EARTH
 1050 ANTI-THEFT SWITCH + BATTERY
 POWER SUPPLY
 1052 LOW CURRENT IMMOBILISER INPUT
 1053 IMMOBILISER KEY POSITION INPUT
 1055 IMMOBILISER SIGNAL POWER SUPPLY
 1057 EL. IMMOBILISER SAFETY OUTPUT
 1058 EL. IMMOBILISER POWER SUPPLY OUTPUT
 1060 PSF1+ ACCESSORIES PANEL + AFTER
 IGNITION FEED
 1065 AFTER IGNITION FEED INPUT
 1070 ENGINE STALLING INFO. (BSI)
 1074 ENGINE RUNNING + COMMAND
 1075 ENGINE RUNNING INFO.
 1085 ALTERNATOR-REGULATOR CONTROL.
 1086 STARTER EXCITATION (ALARM)
 1087 ALTERNATOR EXCITATION CONTROL

PREHEATING - IGNITION

1120 CYLINDER DEACTIVATION SV CTRL
 1121 CYL. DEACTIVATION SV POWER SUPPLY
 1125 VALVE ECU FUNCTIONING SAFETY LINE +
 1126 VALVE ECU FUNCTIONING SAFETY LINE -
 113 CAMSHAFT POWER SUPPLY 2+
 1130 CCS_CMM EARTH
 1131 CAMSHAFT SIGNAL
 1132 CAMSHAFT INFO
 1133 + CAMSHAFT SIGNAL
 1134 - CAMSHAFT SIGNAL
 1135 IGNITION INT. PHASE DET. SIGNAL
 1136 CAMSHAFT EARTH 2-
 1141 COOLANT HEATER PLUG 1 POWER SUPPLY
 1142 COOLANT HEATER PLUG 2 POWER SUPPLY
 1143 COOLANT HEATER PLUG 3 POWER SUPPLY
 1145 THROTTLE SV CONTROL
 1146 COOL. HEATER PLUG 1-2 POWER SUPPLY
 1147 COOL. HEATER PLUG 3-4 POWER SUPPLY
 1150 IGNITION COILS POWER SUPPLY
 1151 IGNITION CTRL 1
 1152 IGNITION CTRL 2
 1153 IGNITION CTRL 3
 1154 IGNITION CTRL 4
 1155 IGNITION CTRL 5
 1156 IGNITION CTRL 6
 1157 IGNITION CTRL 1-4
 1158 IGNITION CTRL 2-3
 1181 PRE-POSTHEATING UNIT CONTROL
 1182 PRE-POST. WARNING LIGHT CONTROL.
 1183 GLOW PLUGS CONTROL
 1184 GLOW PLUGS CONTROL 1
 1185 GLOW PLUGS CONTROL 2
 1186 GLOW PLUGS CONTROL 3
 1187 GLOW PLUGS CONTROL 4
 1188 GLOW PLUGS CONTROL 5
 1189 GLOW PLUGS CONTROL 6

INJECTION/CARBURETTOR POWER SUPPLY

120 BSM SUPPLY VIA INJECTION RELAY
 121 AIR FLOW SENS. SIGNAL FREQU. A
 1200 FUEL PRESSURE SENSOR SIGNAL.
 1201 FUEL PUMP CONTROL
 1202 POWER LATCH RELAY CONTROL
 1203 INJECTION COMPUTER POWER SUPPLY
 1204 TANK SV CONTROL
 1205 EXHAUST AIR INJECT. SV CTRL
 1206 SWIRL PHASE 1 STEPPER MOTOR CTRL
 1207 SWIRL PHASE 2 STEPPER MOTOR CTRL
 1208 SWIRL PHASE 3 STEPPER MOTOR CTRL
 1209 SWIRL PHASE 4 STEPPER MOTOR CTRL
 1210 EOBD EMIS. CONTROL WARN. LIGHT CTRL
 1211 CYLINDER INJECTOR CTRL 1 (+)
 1212 CYLINDER INJECTOR CTRL 2 (+)
 1213 CYLINDER INJECTOR CTRL 3 (+)
 1214 CYLINDER INJECTOR CTRL 4 (+)
 1215 CYLINDER INJECTOR CTRL 5 (+)

1216 CYLINDER INJECTOR CTRL 6 (+)
 1217 SWIRL POS. RECOPY SIGNAL
 1218 THROTTLE POTENTIOM. POS. SIGNAL 1
 1219 THROTTLE POTENTIOM. POS. SIGNAL 2
 1220 THROTT. POT. SV POWER SUPPLY
 122 CAT. LAMBDA SENSOR HEATING CTRL
 1221 FUEL PRESS. REG. SV CTRL
 1222 CANISTER VENT SV CTRL
 1223 ENGINE MAN. MAIN RELAY POWER SUPPLY
 1224 3RD PISTON DEACT. CTRL (INJ PUMP)
 1225 ENGINE MANAGEMENT POWER RELAY POWER SUPPLY
 1226 ENGINE MAN. POWER RELAY CTRL
 1227 INJECTOR CTRL +
 1228 POWER RELAY CTRL VIA IGNITION
 1229 ENGINE MANAGEMENT MAIN RELAY CTRL
 123 UPSTREAM B LAMDA HEATING CTRL
 1230 BODY ACCELERATION EARTH
 1231 BODY ACCELERATION SIGNAL
 1232 CANISTER BLEED SV CTRL
 1233 BODY ACCELERATION POWER SUPPLY
 1234 AC/OUT COMPRESSOR RELAY CTRL
 1235 PETROL PUMP CTRL
 1236 PETROL PUMP RELAY CTRL
 1237 VARIABLE AIR DUCT INLET SV CTRL (SHORT)
 1238 ADVANCE CORRECTION SV CTRL
 1239 ENGINE SWITCH
 124 DOWNSTREAM C LAMDA HEATING CTRL
 1240 VARIABLE TIMING SV POWER SUPPLY
 1241 VTC1 VARIABLE TIMING SV CTRL
 1242 VTC2 VARIABLE TIMING SV CTRL
 1243 VTC VARIABLE TIMING SV CTRL
 1244 AIR INLET 1 STEPPER MOTOR CTRL
 1245 AIR INLET 2 STEPPER MOTOR CTRL
 1246 AIR INLET 3 STEPPER MOTOR CTRL
 1247 AIR INLET 4 STEPPER MOTOR CTRL
 1248 VARIABLE TIMING SV 2 POWER SUPPLY
 1249 FLOW SENSOR SIGNAL (+)
 125 DOWNSTR. D LAMDA HEATING CTRL
 1250 FLOW SENSOR SIGNAL (-)
 1251 OIL VAPOUR RECYCLING REHEATING POWER SUPPLY
 1252 ENGINE CUT-OFF IN CASE OF IMPACT
 1253 EGR THROTTLE MANAGEMENT CTRL
 1254 EGR SV POWER SUPPLY
 1255 THROTTLE VALVE HEAT.G POWER SUPPLY
 1256 EGR SOLENOID VALVE CONTROL
 1257 EGR SOLENOID VALVE EARTH
 1258 PROPORTIONAL SENSOR + SIGNAL.
 1259 PROPORTIONAL SENSOR - SIGNAL.
 126 THROTTLE + EGR SV CTRL
 1260 PROP. SENSOR COMP. RESIST. SIGNAL
 1261 PROP.SENS. CURRENT PUMP SIGNAL.
 1262 PROP. SENS. HEATING POWER SUPPLY
 1263 PROP. SENSOR HEATING CONTROL
 1264 EXHAUST GAS HT SENS. 2 + SIGNAL.
 1265 EXHAUST GAS HT SENS. 2 - SIGNAL.
 1266 CAT A UPSTREAM GAS TEMP. SENS. SIG.
 1267 CAT B UPSTR. GAS TEMP. SENS. SIG.
 1268 CAT A DOWNSTR. GAS TEMP. SENS. SIG.
 1269 CAT B DOWNSTR. GAS TEMP. SENS. SIG.
 127 INLET AIR HEATING SV CTRL.
 1270 TURBOCHARGING PRESSURE SV CTRL
 1271 VARIABLE GEOM TURBO SV CTRL
 1272 AC/V SOLENOID VALVES POWER SUPPLY
 1274 EXHAUST GAS HT SENSOR + SIGNAL.
 1275 EXHAUST GAS HT SENSOR - SIGNAL.
 1276 VARIABLE AIR DUCT INLET SV CTRL (LONG)
 1277 DENSO SENSOR + SIGNAL
 1278 DENSO SENSOR - SIGNAL
 1279 ENGINE MANAGEMENT DIAG. WARNING LIGHT CTRL
 128 BSE INT. PROPORT. COOLANT SV CTRL
 1280 DIESEL PUMP FLOW CTRL
 1281 PIEZO REFERENCE SIGNAL
 1282 FUEL ADDITIVE INJECTION CTRL (+)
 1283 FUEL ADDITIVE INJECTION CTRL (-)
 1284 FUEL ADDITIVE + PUMP CTRL
 1285 FUEL ADDITIVE - PUMP CTRL
 1286 FUEL ADDITIVE PUMP + THERM
 1287 FUEL ADDITIVE PUMP - THERM
 1288 PIEZO MEASUREMENT SIGNAL
 1289 IDLE SPEED SV CTRL (F)
 1290 IDLE SPEED SV CTRL (O)
 1291 STOP SOLENOID VALVE CTRL
 1292 DIAG WARNING LIGHT CTRL
 1293 COOLANT HEATING SV CTRL
 1294 EQUIPMENT TEMP. SENSOR SIGNAL
 1295 FUEL VOLUME ADJ. SV CTRL
 1296 ELECTRIC TURBO CTRL
 1297 VERTICAL LINK ROD 1 SV CTRL
 1298 VERTICAL LINK ROD 2 SV CTRL
 1299 BYPASS VALVE SV CONTROL
 130 UPSTR. CAT A(+) LAMBDA SENSOR SIG.
 1300 UPST. CAT B(+) LAMBDA SENSOR SIG.
 1301 UPST.M CAT B(-) LAMBDA SENSOR SIG.
 1302 DOWNSTREAM CAT C(+) LAMBDA SENSOR SIG.
 1303 DOWNSTREAM CAT C(-) LAMBDA SENSOR SIG.
 1304 DOWNSTREAM CAT. D(+) LAMBDA SENSOR SIG.
 1305 DOWNSTREAM CAT. D(-) LAMBDA SENSOR SIG.
 1306 PARTICLE FILTER DIFFERENTIAL PRESS. SIG.
 1307 FAP DIFF. PRES. SENS. POWER SUPPLY
 1308 A+ EGR MOTOR CTRL
 1309 TURBOCHARGING PRESSURE B SV CTRL
 131 UPSTREAM CAT A(-) LAMBDA SENS. SIG.
 1310 EGR SV POTENT. POWER SUPPLY
 1311 INJECT. FAN SV CTRL
 1312 ENGINE SPEED SENS. POWER SUPPLY
 1313 ENGINE SPEED SENSOR EARTH
 1314 EGR A POTENTIOMETER EARTH
 1315 EGR B POTENTIOMETER EARTH
 1316 A- EGR MOTOR CTRL
 1317 ALTIMETRIC SENSOR SIGNAL

1318 ON/OFF SWIRL VALVE SWITCH
 1319 EGR SV POTENTIOMETER EARTH
 132 2.5V POT. (ENGINE MANAG. SENS.)
 1320 INJECTORS POWER SUPPLY
 1321 CYLINDER 1 INJECTOR (-) CTRL
 1322 CYLINDER 2 INJECTOR (-) CTRL
 1323 CYLINDER 3 INJECTOR (-) CTRL
 1324 CYLINDER 4 INJECTOR (-) CTRL
 1325 CYLINDER 5 INJECTOR (-) CTRL
 1326 CYLINDER 6 INJECTOR (-) CTRL
 1327 B+ EGR MOTOR CTRL
 1328 + 5V LINE 4
 1329 + 5V LINE 3
 133A EGR RECOPY INFO.
 133A FLOW SENSOR SIGNAL (+)
 133B FLOW SENSOR SIGNAL (-)
 1330 ENGINE SPEED SIGNAL
 1331 + 5V LINE 1
 1332 + 5V LINE 2
 1333 INTAKE AIR FLOW SENSOR SIGNAL
 1334 INTAKE AIR ELECT. MOT. CTRL (+)
 1335 INTAKE AIR ELECT. MOT. CTRL (-)
 1336 FLOW SENSOR EARTH
 1337 FLOW SENSOR POWER SUPPLY
 1338 FLOW SENSOR SIGNAL
 1339 FREQUENTIAL AIR FLOW SIGNAL
 13390 FREQ. AIR FLOW SENSOR SIGNAL A
 13391 FREQ. AIR FLOW SENSOR SIGNAL B
 134 PINKING SIGNAL A (+)
 1340 FLOW SENSOR AIR TEMP SIGN.
 1341 AIR TEMPERATURE SIGNAL
 1342 EXH. AIR INJ. PUMP POWER SUPPLY.
 1343 EXHAUST AIR INJ. PUMP REL. CTRL
 1344 EXH. AIR INJ. PUMP CUT-OFF SV CTRL
 1345 EXH. AIR INJ. PUMP REL. POW. SUPPLY
 1346 EGR SV RECOPY SENSOR SIGNAL
 1347 CTP1 RELAY CTRL
 1348 CTP2 RELAY CTRL
 1349 DUAL MODE EXHAUST SV CTRL
 135 PINKING SIGNAL A (-)
 1350 EAM SENSOR SIGNAL (PINKING DW10)
 1351 LAMBDA SENS. HEATING POWER SUPPLY
 1352 CAMSHAFT SENS. POWER SUPPLY
 1353 No. 1 CAMSHAFT SENSOR SIGNAL
 1354 No. 2 CAMSHAFT SENSOR SIGNAL
 1355 CANISTER SV POWER SUPPLY
 1356 CAMSHAFT SENSOR EARTH
 1357 INJECT. ENGINE COOLANT TEMP. EARTH
 1358 BRAKE VACUUM SENSOR SIGNAL
 1359 BRAKE VACUUM SENSOR EARTH
 136 PINKING SIGNAL B (+)
 1360 BRAKE VACUUM SENS. POWER SUPPLY
 1361 ENGINE SPEED SENSOR + SIGNAL
 1362 ENGINE SPEED SENSOR - SIGNAL
 1363 INTAKE AIR PRES. SENS. POWER SUPPLY
 1364 INTAKE AIR PRESSURE SENSOR EARTH
 1365 INTAKE AIR TEMP. SENSOR EARTH
 1366 ENGINE COOLANT TEMP. SIGNAL (INJEC.)
 1367 MOTOR. THROTTLE POTENT. EARTH

1368 FUEL CONSUMPTION SIGNAL
 1369 CONTROLLED FLAPS CONTROL
 137 PINKING SIGNAL B (-)
 1370 THROTTLE RECOPY SIGNAL 1
 1371 THROTTLE MOTOR CTRL VIA +
 1372 THROTTLE MOTOR CTRL VIA -
 1373 LINEAR EGR SV CTRL
 1374 THROTTLE RECOPY SIGNAL 2
 1375 THROTTLE POSITION SIGNAL
 1376 PRE-POSTHEATING UNIT CONTROL
 1377 ACCELERAT. PEDAL 1 POS. SIGNAL
 1378 ACCELERAT. PEDAL 2 POS. SIGNAL
 1379 ACCELERAT. PEDAL POS EARTH.
 138 B EGR RECOPY INFO.
 1380 ACCEL. PEDAL POS. +5 VOLT POW. SUPPLY
 1381 DIESEL FLOW ACTUATOR SIGNAL
 1382 FUEL HP REG. SV POWER SUPPLY
 1383 VEHICLE SPEED SENS. POWER SUPPLY
 1384 ACTION ON CLUTCH SIGNAL
 1385 FUEL TEMP. SENSOR SIGNAL
 1386 PRE-POSTHEATING DIAG. SIGNAL
 1387 POST-HEATING CTRL
 1388 NEEDLE LIFT SIGNAL
 1389 CATALYTIC CONVERTER TEMPER. SIGNAL
 139 ECU COOLING FAN CTRL.
 1390 NO LOAD SWITCH
 1391 MIL-REQUEST SIGNAL
 1392 EOBD WARNING SIGNAL
 1393 INLET AIR PRESSURE SIGNAL
 1394 VTC POS. RECOPY SENSOR SIGNAL
 1395 VEHIC. VERTIC. ACCEL. SENSOR SIG.
 1396 ANTI-EVAP. CIRCUIT DIAG. SIG.
 1397 PRE-CATALYTIC CONVERTER TEMP. SIG.
 1398 FUEL PRESSURE CTRL
 1399 DRIVER INPUT SIGNAL
 140 POWER SUPPLY VIA BSM POWER RELAY
 1400 DRIVER INPUT POT. + SUPPLY.
 1401 DRIVER INPUT POTENTIOM. EARTH
 1402 DRIVER INPUT SIGNAL
 1403 ENGINE SPEED + SIGNAL
 1404 ENGINE SPEED - SIGNAL
 1405 TURBO 1 SV +5V POWER SUPPLY
 1406 TURBO 1 SV PWM CTRL
 1407 TURBOCHARGING 1 SV EARTH
 1408 TURBO 2 SV +5V POWER SUPPLY
 1409 TURBO 2 SV PWM CTRL
 1410 TURBOCHARGING 2 SV EARTH
 1411 TURBO 1 SV SENSOR SIGNAL
 1412 TURBO 2 SV SENSOR SIGNAL
 1413 PF PRESSURE SENSOR SIGNAL
 1414 PF PRESSURE SENSOR EARTH
 1415 PF PRES. SENSOR +5V POWER SUPPLY
 1416 TURBO. AIR HEAT. POS. RECOPY
 SENSOR POWER SUPPLY
 1417 TUR. AIR HEAT. POS. RECOPY SENS. EARTH
 1418 TURBO. AIR HEAT. POS. RECOPY
 SENSOR SIG.
 1419 TURBO POS. RECOPY SENSOR SIGNAL
 142 TURBO A CTRL SIGNAL

1420 TURBO POS. RECOPY SENSOR EARTH
 1421 TURBO POS. REC. SENSOR SIGNAL
 1422 AIR INLET HEAT. POS. RECOPY
 SENSOR POWER SUPPLY
 1423 AIR INLET HEAT. POS. RECOPY
 SENSOR EARTH
 1424 AIR INLET HEAT. POS. RECOPY SENS. SIG.
 1425 TURBO A+B EARTH/PRE-POST UNIT
 1426 B- EGR MOTOR CTRL
 1427 UPSTREAM EXHAUST TEMP. SENS. EARTH
 1428 UPSTR. EXHAUST TEMP. SENS. EARTH
 1429 FUEL RAIL PRESS. SENSOR EARTH
 143 TURBO B CTRL SIGNAL
 1430 PUSH-BUTTON CHECK INPUT
 1431 FUEL RAIL PRES. SENS. POWER SUPPLY
 1432 UPSTREAM EXHAUST TEMP. SENS. EARTH
 1433 DOWNSTR. EXHAUST TEMP. SENS. EARTH
 1434 INJECTORS 1-3 POWER SUPPLY
 1435 INJECTORS 2-4 POWER SUPPLY
 1436 TURBO AIR INLET PRESSURE SIGNAL
 1437 TURBO AIR INLET PRESSURE SENSOR
 POWER SUPPLY
 1438 TURBO AIR INLET PRESS./S EARTH
 1439 DC MOTOR +
 1440 DC MOTOR -
 1441 TPS SIGNAL
 1442 COMPR. INT. AIR PRESS. SIGNAL 2
 1443 COMPR. INT. AIR PRESS/C EARTH
 1444 COMPR. INT. AIR PRES./C POWER
 SUPPLY
 1445 TURBO 1 WG SIGNAL
 1446 TURBO 2 WG VALVE SIGNAL
 1447 TURBO 2 BYPASS VALVE SV CTRL
 1448 COMPR. AIR TEMP. SIGNAL 2
 1449 COMPR. 2 INT. AIR TEMP/C EARTH
 145 POWER SUPPLY VIA AIR PUMP RELAY
 1450 RECIRCULATION VALVE 2 SIGNAL
 1451 COMPRESSOR VALVE 2 SIGNAL
 1452 VVT1 SENSOR INPUT
 1453 VVT1 SENSOR OUTPUT
 1454 VVT2 SENSOR INPUT
 1455 VVT2 SENSOR OUTPUT
 1456 VVT SENSOR POWER SUPPLY
 1457 VVT SENSOR CLOCK
 1458 VVT SENSOR EARTH
 1459 EXHAUST TEMP RECOV. PUMP
 POWER SUPPLY.
 1460 EXHAUST TEMP. RECOV. SV CTRL (RTE)
 1461 RTE TEMPERATURE SWITCH SIGNAL
 1462 PROPORTIONAL SENSOR (NERNST)
 MEASUREMENT CELL VOLTAGE
 1463 PROPORTIONAL SENSOR EARTH
 1464 RTE COOLANT TEMPERATURE SIGNAL
 1465 RTE COOLANT TEMP. SENSOR EARTH

COOLING

151 HIGH SPEED GMV CTRL
 1510 GMV 1 FUNCTIONING SIGNAL
 1511 HIGH/LOW SPEED GMV CTRL

1512 AVERAGE/LOW SPEED GMV CTRL
 1514 GMV CTRL
 152 LOW SPEED GMV CONTROL
 153 MID SPEED GMV SWITCH
 154 GMV 1 CONTROL (+)
 1540 GMV 1 CONTROL (-)
 155 GMV 2 CONTROL (+)
 1550 GMV 2 CONTROL (-)
 1551 GMV 2 CONTROL SIGNAL (+)
 1560 COOLANT TEMP WARNING LIGHT SWITCH
 1561 COOLANT TEMP. INDIC. SWITCH
 1562 DEGASSING COOLANT SV CTRL
 1570 CONTROLLED THERM. CONTROL
 1580 TURBO COOL. PUMP POWER SUPPLY
 1581 TURBO COOLANT PUMP CTRL
 1582 DISCON. COOLANT PUMP POWER SUPPLY
 1583 DISCONN. COOLANT PUMP CTRL
 1585 GMV SPEED SIGNAL
 1586 GMV FAULT SIGNAL
 1587 LH GMV POWER SUPPLY
 1588 RH GMV POWER SUPPLY
 1589 GMV MODULE POWER SUPPLY
 1590 GMV RELAY POWER SUPPLY
 1591 POST COOLING RELAY CTRL
 1592 LOW SPEED RELAY CONTROL
 1593 MID SPEED RELAY CONTROL
 1595 HIGH SPEED RELAY CTRL
 1598 COOLANT PUMP CTRL
 1599 GMV DIAGNOSTIC SIGNAL

CONTROLLED MANUAL GEARBOX

1600 + BVA 2 POS. SIGNAL
 1601 - BVA 2 POS. SIGNAL
 1602 BVA 2 POS. REF.
 1603 MOTOR 2 POS. SENS. POWER SUPPLY
 1604 MOTOR 2 POS. SENSOR EARTH
 1660 CTRL BVM PUSH BUTTON LED OUTPUT
 1661 CONTROL. BVM INPUT SPEED + SIGNAL
 1662 CONTROL. BVM INPUT SPEED - SIGNAL
 1663 SHIFT SENSOR RECOPY SIGNAL
 1664 SELECTION SENSOR RECOPY SIG.
 1665 CLUTCH SENSOR RECOPY SIGNAL
 1666 DOOR SWITCH BSI SIGNAL
 1667 AUTOMATIC MODE SWITCH SIGNAL
 1668 AUTOM. MODE SWITCH WARN. LIGHT CTRL
 1669 CLUTCH 2 SENSOR RECOPY SIGNAL
 1670 CONTROLLED BVM (BSI) OUTPUT

ELECTRIC POWER SUPPLY

1700 DIFF. SPEED SENSOR POWER SUPPLY
 1701 DIFFER. SPEED SENSOR SIGNAL
 1702 DIFFERENTIAL SPEED SENSOR EARTH
 1703 TRACTION CONTROL LEVER 1 SIGNAL
 1704 TRACTION CONTROL LEVER 1 EARTH
 1705 TRACTION CONTROL LEVER 2 SIGNAL
 1706 TRACTION CONTROL LEVER 2 EARTH
 1707 HEATER UNIT COOL. PUMP RELAY CTRL
 1708 HEATER MATRIX COOLANT PUMP
 POWER SUPPLY

1709 ELEC. COOLANT PUMP RELAY CTRL
 1710 ELEC. COOL.T PUMP POWER SUPPLY
 1711 TRACTION BATTERY + TERMINAL
 1712 TRACTION BATTERY - TERMINAL
 1713 TOOL RD RESERVE
 1714 TOOL SD RESERVE
 1715 TRACTION BATT. CONNECT. SIGNAL
 1716 EMERGENCY STOP SIGNAL
 1717 HIGH VOLTAGE RELAY CUT-OFF
 1718 EMERGENCY STOP EARTH
 1719 BODY ANGLE SENS. POWER SUPPLY
 1720 BODY ANGLE SENSOR SIGNAL
 1721 BODY ANGLE SENSOR EARTH
 1722 TRACT. BATT. FULLY ON CUT-OFF
 1723 FAST RECHARGE PUSH CONTROL
 1724 FAST RECH. WARNING LIGHT OUTPUT

GAS SUPPLY

1801 LPG WARNING LIGHT CTRL
 1802 LPG GENERAL RELAY CTRL
 1803 LPG GEN. RELAY SUPPLY INPUT
 1804 LPG INJECTOR SUPPLY
 1805 LPG ECU SUPPLY
 1806 LPG GAUGE + SIGNAL
 1807 LPG GAUGE EARTH
 1808 LPG SWITCH CTRL
 1809 LPG SWITCH LED CTRL
 1810 TANK SV CONTROL
 1811 EVAPORATOR SV CTRL
 1812 ABSOL. PRES. SENSOR POWER SUPPLY
 1813 ABSOLUTE PRESSURE SENSOR SIGNAL
 1814 ABSOLUTE PRESSURE SENSOR EARTH
 1815 LPG SV POWER SUPPLY
 1816 No. 1 CYLINDER LPG INJECTOR CTRL
 1817 No. 2 CYLINDER LPG INJECTOR CTRL
 1818 No. 3 CYLINDER LPG INJECTOR CTRL
 1819 No. 4 CYLINDER LPG INJECTOR CTRL
 1820 LPG MAIN RELAY POW. SUPPLY OUTPUT
 1821 PETROL LOW PRES. RELAY POWER SUPPLY
 1822 TDC SIGNAL
 1825 LPG THROTTLE POSITION SENSOR
 1830 GAS FILTERED INJECTORS POWER SUPPLY
 1831 GAS INJECTORS RELAY CONTROL
 1832 GAS FAULT SIGNAL
 1833 GAS LEVEL INFO. 1834 TEMPERATURE
 SIGNAL GAS TANK
 1835 SOLENOID VALVE CONTROL
 GAS EXPANSION VALVE
 1836 SOLENOID VALVE CONTROL GAS RAIL
 1837 PETROL BOOSTER RELAY CTRL
 1838 GAS INJECTORS POWER SUPPLY
 1839 GAS TYPE SELECTION (RICH OR LEAN)
 1840 GAS PRESS. SENSOR +5V SUPPLY
 1841 GAS PRESSURE SIGNAL
 1842 GAS TEMPERATURE SIGNAL
 1843 GAS LEVEL SIGNAL
 1844 GAS CTRL COMMON
 1845 1/4 LEVEL GAS LED
 1846 AUTOMATIC GAS FUNCTION LED

1847 GAS TANK CTRL
 1848 GAS SAFETY SV CONTROL
 1849 GAS INJECTOR RETURN
 1850 GAS TEMP./PRESS./LEVEL EARTH
 1851 GAS CTRL
 1852 2/4 LEVEL GAS LED
 1853 3/4 LEVEL GAS LED
 1854 4/4 LEVEL GAS LED
 1855 GAS ACTUATOR RELAY
 1856 GAS WARNING BUZZER
 1857 PETROL OPERATION SWITCH
 1860 No. 1 CYL. GAS INJECTOR CTRL
 1861 No. 2 CYL. GAS INJECTOR CTRL
 1862 No. 3 CYL. GAS INJECTOR CTRL
 1863 No. 4 CYL. GAS INJECTOR CTRL

ALTERNATOR-STARTER

1900 PARTIAL VOLTAGE REF. SIGNAL
 1901 PARTIAL VOLTAGE 1 SIGNAL
 1902 PARTIAL VOLTAGE 2 SIGNAL
 1903 PARTIAL VOLTAGE 3 SIGNAL
 1904 PARTIAL VOLTAGE 4 SIGNAL
 1905 BATTERY VENTILATION CTRL
 1906 HIGH VOLTAGE BATT. 1 TEMP. SIG.
 1907 HIGH VOLTAGE BATT. 2 TEMP. SIG.
 1910 NEUTRAL STATUS SIGNAL
 1911 ALTERN.-STARTER COOLANT TEMP. SIG.
 1912 CLUTCH PEDAL STATUS SIGNAL
 1913 BRAKE PRESSURE STATUS SIGNAL
 1914 ISOVAC PRESSURE SENSOR SIGNAL
 1915 ALTERNATOR-STARTER
 MONITORING ECU SENSOR +5V
 192 STOP GO STARTER SECURISATION
 1920 CMAD WAKE-UP SIGNAL
 1921 PROTECTION RELAY CONTROL
 1922 ELECTRIC MACHINE TEMP. SIG.
 1923 ELECTRIC MACHINE IDENTIFIC. SIG
 1924 STOP GO WARNING LIGHT CONTROL
 1925 STARTER ALTER. COOLANT PUMP CTRL
 1926 HEATER UNIT COOLANT PUMP CTRL
 1927 HIGH VOLTAGE BATT. BLOWER CTRL
 1928 STOP GO PUSH-BUTTON SIGNAL
 1929 STOP GO AUTHORISATION
 1930 ELEC. MACH. PHASE U POWER SUPPLY
 1931 ELEC. MACH. PHASE V POWER SUPPLY
 1932 ELEC. MACH. PHASE W POWER SUPPLY
 1933 BATTERY + 42V
 1934 AUXILIARY + 42V
 1935 ROTOR + EXCITATION
 1936 ELEC. MACHINE U ROTOR POS.
 1937 ELEC. MACHINE V ROTOR POS.
 1938 ELEC. MACHINE W ROTOR POS.
 1939 ELECT. MACH. SENSOR +5V SUPPLY
 1940 CMAD SENSOR EARTH
 1941 CCAD SENSOR EARTH
 1942 BATTERY 42V EARTH
 1943 AUXILIARY + 42V EARTH
 1945 ROTOR - EXCITATION
 1946 ELEC. MACH. SENS. POW.SUPPLY EARTH

1947 BATTERY TEMPERATURE

EXTERNAL LIGHTING

200 FOG LIGHTS CONTROL
201 FOG LIGHTS POWER SUPPLY
202 RH BLIND OUTPUT
203 LH BLIND OUTPUT
205 FOG LIGHTS RELAY CTRL
2051 REAR FOG LIGHT SIGNAL (BSI)
2052 REAR LH FOG LIGHT POWER SUPPLY
2053 REAR RH FOG LIGHT POWER SUPPLY
2055 BOOT/HATCH FOG LIGHT OUTPUT
2056 BOOT/HATCH RR LH FOG LIGHT OUTPUT
206 FOG LIGHTS CTRL
2060 FR LH FOG LIGHTS CTRL
2061 FR RH FOG LIGHTS CTRL
2062 FR LH FOG LIGHTS POWER SUPPLY
2063 FR RH FOG LIGHTS POWER SUPPLY
207 FOG LIGHT WARNING LIGHT CTRL
210 BRAKE LIGHTS CTRL
214 ADD. BRAKE LIGHTS CTRL. (BSI)
215 ADD. BRAKE LIGHTS POWER SUPPLY
2100 RR RH BRAKE LIGHTS CTRL (BSI)
2101 RR LH BRAKE LIGHTS CTRL (BSI)
2102 RR RH BRAKE LIGHTS POWER SUPPLY
2103 RR LH BRAKE LIGHTS POWER SUPPLY
220 REVERSING LIGHT CONTROL
221 RR LH REVERS. LIGHTS POWER SUPPLY
222 RR RH REVERS. LIGHTS POWER SUPPLY
2200 REVERSING LIGHTS POWER SUPPLY (BSI)
2201 HATCH/BOOT RH REV. LIGHT OUTPUT
2202 HATCH/BOOT LH REV. LIGHT OUTPUT
2203 REVERSING LIGHT SIGNAL OUTPUT
230 DIRECTION INDICATOR CTRL
231 INDICATOR CONTROL
232 LH INDICATOR CONTROL
233 RH INDICATOR CONTROL
234 DRIVING SCHOOL INDICATOR CTRL
240 DAYTIME RUNNING LIGHTS CTRL
2400 FR LH DAYTIME RUNNING LIGHT CTRL
2401 DAYTIME RUNNING LIGHT SIGNAL
2405 FR RH DAYTIME RUNNING LIGHT CTRL
241 FLASHING ROOF LIGHT CTRL
242 RONDO LIGHTS CTRL
260 SIDE LIGHTS CTRL
2600 AUTOM. HEADLIGHTS SAFETY REL. CTRL
2601 LH SIDE LIGHTS CTRL
2602 RH SIDE LIGHTS CTRL
2603 FR LH SIDE LIGHTS CTRL
2604 FR RH SIDE LIGHTS CTRL
2605 FR LH LAT. SIDE LIGHTS CTRL
2606 FR RH LAT. SIDE LIGHTS CTRL
2607 FR LAT. SIDE LIGHTS CTRL
261 FR LH SIDE LIGHTS POWER SUPPLY
262 FR RH SIDE LIGHTS POWER SUPPLY
263 RR LH SIDE LIGHTS POWER SUPPLY
2631 SIDE LIGHT RETURN
264 RR RH SIDE LIGHTS POWER SUPPLY
2640 TRAILER LIGHT RELAY CTRL

2641 SIDE LIGHT RETURN
2642 RR ADD. SIDE LIGHT OUTPUT (BSI)
265 SWITCH + SIDE LIGHT POW. SUPPLY
266 DRIVING SCHOOL SIDE LIGHTS CTRL
2660 PEDAL ACTIVATION ACQUISITION
270 DIPPED BEAM CTRL
2700 INTER HEADLIGHTS COMMUNICATION
2701 LH DIPPED BEAM CTRL
2702 RH DIPPED BEAM CTRL
2705 LH STATIC TURNING LIGHT CTRL
2706 RH STATIC TURNING LIGHT CTRL
271 LH DIPPED BEAM POWER SUPPLY
2715 LH STATIC TURNING LIGHT EARTH
2716 RH STATIC TURNING LIGHT EARTH
272 RH DIPPED BEAM POWER SUPPLY
273 DRIVING SCHOOL DIPPED BEAM CTRL
275 HEADLIGHT LEVELLER + CTRL.
276 HEADLIGHT LEVELLER POS. CTRL
277 HEADLIGHT LEVELLER - CTRL
278 HEADLIGHT LEVEL. POWER SUPPLY
279 HEADLIGHT LEVEL. + MODULE VIA RELAY
280 HEADLIGHT MAIN BEAM CTRL
2801 LH HEADLIGHT MAIN BEAM CTRL
2802 RH HEADLIGHT MAIN BEAM CTRL
2803 HEADLIGHT MAIN BEAM POWER SUPPLY
281 LH HEADL. MAIN BEAM POWER SUPPLY
282 RH HEADL. MAIN BEAM POWER SUPPLY
283 ADDITIONAL HEADLIGHT CTRL
284 DRIV. SCHOOL HEADL. MAIN BEAM CTRL
285 LH SIDE REPEATER OUTPUT (BSI)
286 RH SIDE REPEATER OUTPUT (BSI)
287 FF LH DIRECT. INDICATOR OUTPUT (BSI)
288 FF RH DIRECT. INDICATOR OUTPUT (BSI)
289 RR LH DIRECT. INDICATOR OUTPUT (BSI)
290 RR RH DIRECT. INDICATOR OUTPUT (BSI)
2900 FR BUMP. SIDE MARK. OUTPUT (SIDE-MA.)
2901 RR BUMP. SIDE MARK. OUTPUT (SIDE-M)
2905 NUMBER PLATE LIGHTS (BSC)
292 RH INDIC. LIGHT CLUSTER OUT. (BSI)
293 LH SIDE INDICATORS STEERING COL. INPUT (BSI)
2930 RH/LH DIRECTION INDIC. CTRL (BSI)
2931 FR/RR FOG LIGHTS CTRL (BSI)
2932 DIPPED/MAIN BEAM SWITCH CTRL (BSI)
2933 NAV. SCREEN LIGHTING CUT-OFF CTRL (BSI)
2934 CUT-OFF EARTH (BSI)
2935 BSI EARTH
294 RH SIDE INDICAT. STEERL. COL. INPUT (BSI)
295 HAZARD LIGHTS SWITCH INPUT
296 HAZARD LIGHTS SWITCH INDICAT. OUTPUT
2960 HAZARD LIGHTS SIGNAL INDIC. INFO
2961 HAZARD LIGHTS CTRL

HORNS

250 HORN CTRL
2500 LOW NOTE HORN
2501 HIGH NOTE HORN
251 HORN RELAY CONTROL
252 HORN SIGNAL (BSI)

2530 POLICE SIREN + POWER SUPPLY
 2531 POLICE SIREN - POWER SUPPLY
 2532 POLICE SIREN MOD. + POWER SUPPLY
 2533 POLICE SIREN MOD. - POWER SUPPLY
 254 SIREN RELAY CTRL
 2550 SIREN CONTROL (JACK)
 2555 SIREN CTRL
 2558 INPUT DAY/NIGHT SIREN SIGNAL
 2559 OUTPUT DAY/NIGHT SIREN SIGNAL
 2570 JACK PLUG + CONTROL
 2571 JACK PLUG - CONTROL

INTERIOR LIGHTING

300 FRONT COURTESY LIGHT SWITCH
 3000 FR LH DOOR SILL LIGHTING CTRL
 3001 FR RH DOOR SILL LIGHTING CTRL
 3002 FOOTWELL LIGHTING POWER SUPPLY
 3003 FF SILL LIGHTS POWER SUPPLY
 3004 RR SILL LIGHTS POWER SUPPLY
 3005 FR FOOTW. LIGHTING POWER SUPPLY (BSI)
 3006 RR FOOTW. LIGHTING POWER SUPPLY (BSI)
 3007 LH REAR-VIEW MIR. SILL LIGHTING CTRL
 3008 RH REAR-VIEW MIR. SILL LIGHTING CTRL
 3009 AMBIANCE LIGHTING PUSH-BUTTON
 301 COURTESY LIGHT TIMER + CTRL
 3010 AMBIANCE LIGHTING - PUSH-BUTTON
 3011 EARTH INT. LIGHT MODULE OUTPUT
 3012 +ACC INT. LIGHT MODULE OUTPUT
 3013 INSET LIGHTING OUTPUT
 3014 ROOF LIGHTING OUTPUT
 3015 DASHBOARD LIGHTING OUTPUT
 3016 UNDER-DASHBOARD LIGHTING OUTPUT
 302 FF/RR COURTESY LIGHTS CTRL
 3020 REAR COURTESY LIGHTS CTRL
 3021 REAR COURTESY LIGHT SIGNAL
 3022 DRIVER'S STORAGE TRAY LIGHTING CTRL
 3023 PASSENGER'S STOR. TRAY LIGHTING CTRL
 3024 DRIVER'S DOOR INSET LIGHT CONTROL
 3025 PASSENGER DOOR INSET LIGHT CTRL
 3026 DRIVER'S DOOR INT. OPENING
 LIGHTING CTRL
 3027 PASSENGER DOOR INT OPENING
 LIGHTING CTRL
 303 FR COURTESY LIGHT SIGNAL
 3030 CENTRAL COURTESY LIGHTS CTRL
 3035 FRONT COURTESY LIGHT SIG./EXTINCT.
 3050 LIGHTING DIMMER + SIGNAL
 3051 LIGHTING DIMMER - SIGNAL
 3060 LH HEATING PANEL PUSH-BUTTON
 LIGHT CTRL
 3061 RH HEATING PANEL PUSH-BUTTON
 LIGHT CTRL
 3062 RR LH HEATING PANEL PUSH-
 BUTTON LIGHT CTRL
 3063 RR RH HEATING PANEL PUSH-
 BUTTON LIGHT CTRL
 310 GLOVEBOX LIGHTING CTRL
 318 HATCH LIGHTING CTRL
 319 BOOT LIGHTING CTRL

3190 BOOT LIGHTING POWER SUPPLY
 320 LH VANITY MIRROR POWER SUPPLY
 321 LH VANITY MIRROR EARTH
 3210 RH VANITY MIRROR POWER SUPPLY
 3211 RH VANITY MIRROR EARTH

ENGINE FUEL OIL COOLANT SIGNAL

400 COOLANT TEMPERATURE SIGNAL
 4000 COOLANT TEMPER. SENSOR EARTH
 401 COOLANT TEMPERATURE SIGNAL
 402 COOLANT LEVEL SIGNAL
 4020 ENGINE COOLANT LEVEL INPUT
 403 WATER IN DIESEL DETECT. SIGNAL
 4030 DIESEL TEMP. SENSOR EARTH
 4031 WATER IN DIESEL DETECT. EARTH
 4035 WAT. IN DIESEL DETECT. POWER SUPPLY
 404 COOL. TEMP. PRE-WARNING SIG.
 405 COOLANT TEMP. WARNING CTRL
 406 EGR A AND EGR B EARTH
 410 MIN. OIL PRESSURE SIGNAL
 411 OIL TEMPERATURE SIGNAL
 412 OIL PRESSURE SIGNAL
 413 MAX. OIL TEMPERATURE SIGNAL
 414 OIL LEVEL SIGNAL
 415 OIL LEVEL - SIGNAL
 416 OIL TEMP./LEVEL REFERENCE
 4150 ENGINE OIL LEVEL ANALOG. EARTH
 4200 CAP OPEN INPUT SIGNAL
 4201 CAP OPEN OUTPUT SIGNAL
 421 FUEL FILLER CAP OPEN SIGNAL
 4210 FUEL FIL. FLAP PUSH-BUTTON INPUT (BSI)
 422 FUEL PRESSURE SENSOR SIGNAL
 430 FUEL MIN. LEVEL SIGNAL
 431 FUEL CUT-OFF CTRL
 4310 FUEL FILLER CAP INPUT (BSI)
 4311 INERTIA SWITCH INPUT (BSI)
 4312 FUEL ANALOG. EARTH INPUT (BSI)
 4315 FUEL GAUGE ANALOG. EARTH
 4316 BSI FUEL FILLER CAP ANALOG. EARTH
 OUTPUT
 432 FUEL CUT-OFF SIGNAL
 433 FUEL GAUGE 1 SIGNAL
 434 FUEL GAUGE 2 SIGNAL
 435 LPG FUEL GAUGE SIGNAL
 4398 SUPPLIER 1 DIAGNOSTIC
 4399 SUPPLIER 2 DIAGNOSTIC

BRAKING

440 HANDBRAKE SIGNAL
 441 HYD. CIRC. BRAKE FLUID HANDB. SIG.
 4411 HANDBRAKE SWITCH SIGNAL
 442 BRAKE FLUID LEVEL SIGNAL
 4420 EL. HANDBRAKE PUSH-BUTTON INPUT
 4425 EL. HANDB. PUSH-BUTTON WARN. LIGHT CTRL
 4430 ELECTRIC HANDBRAKE 1 CTRL
 4431 ELECTRIC HANDBRAKE 2 CTRL
 4432 ELECTRIC HANDBRAKE 3 CTRL
 4433 ELECTRIC HANDBRAKE 4 CTRL
 444 BRAKE PADS WEAR

4440 BRAKE LIGHT BULB BLOWN WARNING SIG.
 4441 BRAKE PADS WEAR SIGNAL
 445 FR LH PAD WEAR SIGNAL
 4450 INT. FR LH PAD WEAR SIGNAL
 4451 EXT. FR LH PAD WEAR SIGNAL
 446 FR RH PAD WEAR SIGNAL
 4460 INT. FR RH PAD WEAR SIGNAL
 4461 EXT. FR RH PAD WEAR SIGNAL
 447 RR LH PAD WEAR SIGNAL
 448 RR RH PAD WEAR SIGNAL
 4481 EL. BRAKE CALLIPER ACTUATOR CTRL
 4482 EL. HANDBRAKE ACTUATOR CTRL

WASH/WIPE

500 LOW SPEED MOTOR CTRL
 501 HIGH SPEED MOTOR CTRL
 5010 WIPER MOTOR SWITCH COMMUN.
 502 WIPER PARK CONTROL
 503 MOTOR PARK CONTROL
 505 INTERMITTENCE CONTROL
 506 LOW SPEED FR WIPER SIGNAL
 5060 FR WIPER MOTOR SIGNAL
 507 HIGH SPEED FR WIPER SIGNAL
 508 HIGH SPEED RELAY CTRL
 509 MOTOR CONTROL VIA RELAY
 510 FRONT WASHER PUMP CONTROL
 511 FRONT WASHER PUMP SIGNAL
 512 WASHER MIN. WATER LEVEL SIGNAL
 520 REAR SCREEN WIPER CONTROL
 5200 RR LH WIPER MOTOR CONTROL
 5201 REAR WIPER POWER SUPPLY
 521 RR WIPER MOTOR CTRL
 522 RR WIPER MOT. PARK CTRL
 526 REAR WIPER SIGNAL
 5261 LOW/HIGH SPEED LOW.RAIN SENS.
 LINK INPUT (BSI)
 5262 RAIN SENS. POW. SUPPLY OUTPUT (BSI)
 5263 WIP. MOT. AF SIG. RAIN SENS. OUTPUT (BSI)
 5264 SENSOR RAIN QUANTITY INPUT (BSI)
 5265 FRONT WIPER RELAY OUTPUT
 530 REAR WASHER PUMP CTRL
 531 REAR WASHER PUMP SIGNAL
 540 HEADLIGHT WASHER WATER MIN.
 WARNING LIGHT CTRL.
 542 HEADLIGHT WASHER PUMP CONTROL

ELECTRIC WINDOWS

6000 DR ONE-TOUCH ELECT. WINDOW SIG.
 6001 FR RH WINDOW SWITCH POWER SUPPLY
 6002 FR LH CONTROL PANEL SHUNT
 (RH/LH DRIVE SEL.)
 6003 DR WINDOW TORQUE SENSOR SIGNAL
 6004 DR WINDOW POS. SENSOR SIGNAL
 6005 FR RH WINDOW SWITCH LIGHTING
 6006 DRIVER'S CTRL PANEL LIGHTING + CTRL
 6007 DRIVER'S CONTROL PANEL - CONTROL
 6008 RR WINDOW INHIBIT SIGNAL
 6010 DR WINDOW LIFT SIGNAL
 6011 DR WINDOW LIFT CTRL

6012 DRIVER OT WINDOW OUTPUT (BSI)
 6013 PASSENGER OT/EL WINDOW OUTPUT
 6015 ELEC. WINDOW CTRL VIA RELAY
 6016 MULTIPLEX LH DOOR PANEL AUTH.
 6017 SIGN LH DOOR PANEL AUTH.
 6018 FR ONE-TOUCH ELEC. WINDOWS REMOTE
 6020 DR ELECTRIC WINDOW LOWER SIGNAL
 6021 DR ELECTRIC WINDOW LOWER CTRL
 6022 FR LH ELECTRIC WINDOW ANALOGUE SIG.
 6023 FR RH ELECTRIC WINDOW ANALOGUE SIG.
 6024 RR LH ELECTRIC WINDOW ANALOGUE SIG.
 6025 RR RH ELECTRIC WINDOW ANALOGUE SIG.
 603 RR MICRO-LOWER ANTICIP. UNIT (BSI)
 6030 PASS ELEC. WINDOW SWITCH RAISE SIG.
 6031 PASS ELEC. WINDOW SWITCH LOWER SIG.
 6032 RR LH ELEC WINDOW SWITCH RAISE SIG.
 6033 RR LH ELEC WINDOW SWITCH LOWER SIG.
 6034 RR RH ELEC WINDOW SWITCH RAISE SIG.
 6035 RR RH ELEC WIND. SWITCH LOWER SIG.
 6036 RR LH MICRO-LOWER REQ SIG.
 6037 RR RH MICRO-LOWER REQ SIG.
 6038 FR LH MICRO-LOWER REQ SIG.
 6039 FR RH MICRO-LOWER REQ SIG.
 604 FR LH ELECTRIC WINDOW CTRL
 6041 FR LH ELECTRIC WINDOW AUTOM. CTRL
 6042 LH ELEC. WINDOW LOWER SIGNAL
 6045 LH MICRO-LOWER REQ SIGNAL
 6046 RH MICRO-LOWER REQ.
 6050 RH ONE-TOUCH ELEC. WINDOW SIG.
 6052 LH ELEC. WINDOW RAISE SIGNAL
 6053 RH ELECTRIC WINDOW TORQUE
 SENSOR SIGNAL
 6054 RH ELECT. WINDOW POS. SENSOR SIG.
 6060 RH ELECT. WINDOW RAISE SIGNAL
 6061 RH ELECTRIC WINDOW RAISE CTRL
 6062 PASS ELECTRIC WINDOW RAISE VIA
 DR SIGNAL
 6063 CENTRAL WINDOW RAISE SIGNAL
 6064 CENTRAL WINDOW LOWER SIGNAL
 607 JOINT LH ELEC. WINDOW CTRL
 6070 PASS ELECT. WINDOW LOWER SIG.
 6071 PASS ELECTRIC WINDOW LOWER CTRL
 6072 PASS ELECTRIC WINDOW LOWER
 VIA DR SIGNAL
 608 FR RH ELECTRIC WINDOW CONTROL
 6081 PASS. ELECTRIC WINDOW AUTO CTRL
 6082 RH ELECTRIC WINDOW RAISE SIGNAL
 6092 RH ELECTRIC WINDOW LOWER SIGNAL
 610 REAR FUNCT. CENTRAL LOCKING CTRL
 6100 RR LH 1-TOUCH WINDOW SIGNAL
 6101 REAR ELEC. WINDOW POWER
 SUPPLY VIA INHIB. RELAY
 6102 RR ELECTRIC WINDOW INHIBIT CTRL
 6103 RR LH ELEC. WINDOW TORQUE
 SENSOR SIGNAL
 6104 RR LH ELECTRIC WINDOW POS.
 SENSOR SIGNAL
 6105 BSI EW CENTRAL CLOSING CTRL
 6110 RR LH ELECT. WINDOW RAISE SIG.

6111 RR LH ELECTRIC WINDOW RAISE CTRL
 6112 RR LH ELECT. WINDOW RAISE SIG.
 6120 RR LH ELECT. WINDOW LOWER SIGNAL
 6121 RR LH ELECTRIC WINDOW LOWER CTRL
 6122 RR LH ELECTRIC WINDOW LOWER
 SIGNAL VIA DR
 614 RR LH ELECTRIC WINDOW CTRL
 6150 RR RH ONE-TOUCH ELECTRIC
 WINDOW SIGNAL
 6153 RR RH ELEC. WINDOW TORQUE
 SENSOR SIGNAL
 6154 RR RH ELECTRIC WINDOW/POS. SENS. SIG.
 6160 RR RH ELECTRIC WIND. RAISE SIG.
 6161 RR RH ELECTRIC WINDOW RAISE CTRL
 6162 RR RH ELECTRIC WINDOW RAISE
 SIGNAL VIA DR
 6163 ELECTRIC WINDOW POWER SUPPLY
 617 COMMON RH ELEC. WINDOW CTRL
 6170 RR RH ELECT. WINDOW LOWER SIGNAL
 6171 RR RH ELECT. WINDOW LOWER CTRL
 6172 RR RH ELECTRIC WINDOW LOWER
 SIGNAL VIA DR
 6173 BSI SUNROOF AND FR ELEC.
 WINDOW SUPPLY OUTPUT
 6174 RR ELEC. WINDOW CTRL VIA RELAY
 6175 RR ELEC. WINDOW POWER SUPPLY (BSI)
 6176 RR ELEC. WINDOW SWITCH OUTPUT (BSI)
 6177 LH RR OT WINDOW RAISE OUTPUT (BSI)
 6178 RH RR OT WINDOW RAISE OUTPUT (BSI)
 6179 LH RR OT WINDOW LOWER OUTPUT (BSI)
 610 RR RH ELECTRIC WINDOW CTRL
 6180 RH RR OT WINDOW LOWER OUTPUT (BSI)
 6181 OT WINDOW RR SWITCH OUTPUT (BSI)
 6182 CONTROL PANEL/RR OTEW OUTPUT (BSI)
 6183 RR INHIBIT INPUT (BSI)
 6184 OT WINDOW FR SWITCH OUTPUT (BSI)
 619 ELEC. WINDOWS CENTRAL OPEN. CLOS.
 6190 REAR ELEC. WINDOW + HYDR.
 PUMP POWER SUPPLY
 6191 HP + EW FOLDING ROOF MOD. OUTPUT

CENTRAL LOCKING

620 CHILD SAFETY CTRL
 6200 DOOR OPEN WARNING LIGHT SIGNAL
 6201 FUEL FILLER FLAP OPEN INPUT (BSI)
 6202 FUEL FILLER FLAP OPEN OUTPUT (BSI)
 6203 FR LH EXT. MOT. CTRL
 6204 EXTERIOR MOTOR CTRL
 6205 LOCK COMMON CTRL
 6206 INTERIOR MOTOR CTRL
 6207 RR EXT. MOT. CTRL
 6208 RR LOCK COMMON CTRL
 6209 CHILD SAFETY/INT. MOT. CTRL
 621 REAR SCREEN + BOOT LOCK
 PUSH-BUTTON INPUT
 6210 BOOT ACTUATOR CTRL
 6211 REAR SCREEN ACTUATOR CTRL
 6212 BOOT CATCH CTRL SIGNAL
 6213 BOOT LOCK UNLOCKED SIGNAL

6214 RETURN BOOT CATCH SIGNAL
 6215 DIAGNOSTIC LINE
 6216 BOOT OPENING OUTPUT
 6217 CENTRAL LOCKING INFO.
 6218 CENTRAL LOCK WARNING LIGHT OUTP.
 6219 ENGINE IMMOBILISER + CTRL
 622 DEADLOCKING + CTRL
 6220 MOTOR CATCH RELAY OUTPUT
 6221 DOOR DEADLOCKING INPUT O
 6222 LH ENGINE CATCH CTRL
 6223 RH ENGINE CATCH CTRL
 6224 A1 REMOTE INPUT/LOCKING INPUT
 6225 HF RECEIVER BSI SERIAL LINK
 6226 LH CATCH SWITCH
 6227 RH CATCH SWITCH
 6228 BOOT PUSH-BUTTON SIGNAL
 6229 BOOT + OPENING CTRL
 623 CENTRAL UNLOCKING SIGNAL
 6230 FR LH CENTRAL LOCKING INPUT +
 UNLOCK. STATUS
 6231 FR RH CENTRAL LOCKING INPUT +
 UNLOCK. STATUS
 6232 FR LH LOCK POS. INFO. + LOCK. STATUS
 6233 FR RH LOCK POS. INFO. + LOCK. STATUS.
 6234 AUTO LOCK INHIBIT CTRL
 6235 AUTO LOCK INHIBIT INFO.
 6236 AUTO LOCK INH. WARNING LIGHT OUTP.
 6237 LH DOOR SENSOR + POWER SUPPLY
 6238 LH DOOR SENSOR - POWER SUPPLY
 6239 LH DOOR S1 SIGNAL
 624 DOOR PRESENT CONTACT
 6240 LH DOOR S2 SIGNAL
 6241 LH DOOR + BRAKE
 6242 LH DOOR - BRAKE
 6243 LH SLIDING SIDE DOOR OPENING
 MOTOR CTRL
 6244 LH SLID. SIDE DOOR CLOSING
 MOTOR CTRL
 6245 DIAGNOSTIC SIGNAL
 6246 LH SLIDING SIDE DOOR CLOSING CTRL
 6247 LH SLID.SIDE DOOR INTEG.SW. LOCK SIG.
 6248 RH SLID.SIDE DOOR INTEG.SW. LOCK SIG.
 6249 LH SLID.SIDE DOOR END.OPEN.SW.SIG.
 625 RH SLID.SIDE DOOR OPENING CTRL
 6250 RR RH DOOR CHILD SAFETY SIGNAL
 6251 RR LH DOOR CHILD SAFETY SIGNAL
 6252 RH SLID.SIDE DOOR OPEN. MOTOR CTRL
 6253 RH SLID.SIDE DOOR CLOSING
 MOTOR CTRL.SLID.SIDE DOOR
 6254 LH SLID.SIDE DOOR CLOS./OP. FR
 LH PUSH-BUTTON SIGNAL
 6255 RH SLID.SIDE DOOR CLOS./OP. FR
 RH PUSH-BUTTON SIGNAL
 6256 LH SLID.SIDE DOOR CLOS./OP. RR
 LH PUSH-BUTTON SIGNAL
 6257 RH SLID.SIDE DOOR CLOS./OP. RR
 RH PUSH-BUTTON SIGNAL
 6258 LH SSD LOCK OPEN ACTUATOR
 6259 RH SSD LOCK OPEN ACTUATOR

626 WINDOW CLOSE CTRL
 6260 DOORS OPEN INFORMATION
 6261 RH DOOR SENSOR + POWER SUPPLY
 6262 RH DOOR SENSOR - POWER SUPPLY
 6263 RH DOOR S1 SIGNAL
 6264 RH DOOR S2 SIGNAL
 6265 RH DOOR + BRAKE
 6266 RH DOOR - BRAKE
 6267 FR LH CPO INFO.
 6268 FR RH CPO INFO.
 6269 LOCK STATUS + LOCK POS. INFO.
 627 IR RECEIVER CENTRAL LOCKING CTRL
 6270 HF RECEIVER CENTRAL LOCKING/
 UNLOCKING CTRL
 6271 REAR SCREEN + BOOT OPEN+CTRLAUTH.
 6272 RH SSD END OF OPENING SWITCH SIG.
 6273 RH DOOR OPENING BACKUP CTRL
 6274 RH DOOR CLOSING BACKUP CTRL
 6275 HF RECEIVER DEADLOCKING CTRL
 6276 DEADLOCKING STATUS
 6277 CHILD SAFETY WARNING LIGHT SIG.
 6278 RH SSD CLOSING CTRL
 6279 CHILD SAFETY RELAY OPEN OUTPUT
 628 IR RECEIVER UNLOCKING CTRL
 6280 FR LH OPEN DOOR SWITCH INPUT (MDP)
 6281 TAILGATE CLOSED SWITCH INPUT (BSI)
 6282 BOOT OPEN EXT. SWITCH SIGNAL
 6283 BOOT OPENING DOOR SWITCH INPUT
 6284 BOOT ISOLATION INPUT (BSI)
 6285 FR RH OPEN DOOR SWITCH INPUT (MDP)
 6286 FR LH EXT. OPENING SENSOR SIGNAL
 6287 OPEN. RR RH DOOR SWITCH INPUT. (BSI)
 6288 OPEN. G RR LH DOOR SWITCH INPUT. (BSI)
 6289 FR RH EXT. OPENING SENSOR SIGNAL
 629 CHILD SAFETY PUSH-BUTTON
 6290 REAR SCREEN CLOSING CTRL
 6291 FR LH CENTRAL LOCK. INPUT (SSD)
 6292 FR RH CENTRAL LOCKING INPUT (SSD)
 6293 LOCK. STATUS + RR LOCK POS. SIGNAL
 6294 FR LH LOCKING BUTTON CTRL
 6295 FR RH LOCKING BUTTON CTRL
 6296 VEHICLE PROTECT. WARN.LIGHT CTRL (BSI)
 6297 HATCH/REAR SCREEN OPEN INPUT
 6298 TILTING SCREEN CENTRAL LOCKING
 6299 REAR SCREEN OPENING CTRL

HEATED SEATS

6300 FR LH SEAT BELT INFO.
 6301 FR RH SEAT BELT INFO.
 6302 FR LH ELECTRIC SEAT POWER SUPPLY
 6303 FR RH ELECTRIC SEAT POWER SUPPLY
 6304 REAR PASS. SEAT BELT INFO.
 6305 CENTRAL RR SEAT BELT INFO.
 6306 RR LH SEAT BELT INFO.
 6307 RR RH SEAT BELT INFO.
 6308 FR LH SEAT BELT INFO.
 6309 FR RH SEAT BELT INFO.
 6310 SEAT BELT INFO.
 6311 DR RUNNER POS. INFO.

6312 DR FR SEAT CUSHION POS. INFO.
 6313 RD RR SEAT CUSHION POS. INFO.
 6314 DR BACKREST POS. INFO.
 6315 RR LH 3RD ROW SEAT BELT INFO.
 6316 RR RH 3RD ROW SEAT BELT INFO.
 6317 M MEMORY KEYPAD INFO.
 6318 MEMORY 1 KEYPAD INFO.
 6319 MEMORY 2 KEYPAD INFO.
 632 FR LH SEAT ACQUIS.
 6320 DR SEAT FR RUNNER CTRL
 6321 DR SEAT FR RUNNER INFO.
 6322 BACKW. SEAT BACK TOP RECLINE CTRL
 6323 FORW. SEAT BACK TOP RECLINE CTRL
 6324 SEAT BACK TOP RECLINE SENSOR INFO.
 6325 DR SEAT RR RUNNER CTRL
 6326 DR SEAT RR RUNNER INFO.
 6327 FAST RUNNER ADJ. CTRL.
 6328 DR SEAT FRONT TOP SEAT CUSHION CTRL
 6329 DR SEAT FRONT TOP SEAT CUSHION INFO.
 633 FR RH SEAT ACQUIS. SWITCH
 6330 DETECTION PANEL +
 6331 DETECTION PANEL -
 6332 FR RH SEAT ADJ. AUTHORISATION
 6334 DR SEAT RR TOP SEAT CUSHION CTRL
 6335 DR SEAT RR TOP SEAT CUSHION INFO.
 6336 DR SEAT FR LOWER SEAT CUSHION CTRL
 6337 DR SEAT FR LOWER SEAT CUSHION INFO.
 6338 DR SEAT RR LOWER SEAT CUSHION CTRL
 6339 DR SEAT RR LOWER SEAT CUSHION INFO.
 6340 FR RH EXTERIOR PRESENT
 6341 FR RH EXTERIOR BUCKLE
 6342 FR RH INTERIOR PRESENT
 6343 FR RH INTERIOR FASTENED
 6344 UNFASTENED PRES. FR RH SENSOR REQ.
 6345 + FR RH SEAT BELT BUCKLE SWITCH
 6346 - FR RH SEAT BELT BUCKLE SWITCH
 6347 BGBC BT SEAT BELT REM. BUZZER CTRL
 6348 BACKWARDS FAST RUNNER CTRL
 6350 DR SEATBACK FR ANGLE CTRL
 6351 DR SEATBACK FR ANGLE SENSOR
 6352 BACK HORIZONTAL LUMBAR CTRL
 6353 FORWARD HORIZONTAL LUMBAR CTRL
 6354 HORIZONTAL LUMBAR SENSOR INFO.
 6355 DR SEAT BACK RR ANGLE CTRL
 6356 DR SEAT BACK RR ANGLE INFO.
 6357 RAISE VERTICAL LUMBAR CTRL
 6358 LOWER VERTICAL LUMBAR CTRL
 6359 VERTICAL LUMBAR SENSOR INFO.
 6360 DR SEAT POS. SENSOR + CTRL
 6361 DR ARMREST RAISE CTRL
 6362 DR ARMREST LOWER CTRL
 6363 SENSOR POWER SUPPLY
 6364 SENSOR EARTH 1
 6365 HEATED SEAT SWITCH CTRL.
 6366 DR HEATED SEAT POWER SUPPLY
 6367 PASS HEATED SEAT POWER SUPPLY
 6368 DR HEATED SEAT CTRL
 6369 PASS HEATED SEAT CTRL
 6370 FR HEATED SEAT SWITCH CTRL

6371 RR LH HEATED SEAT CTRL
 6372 RR RH HEATED SEAT CTRL
 6373 RR HEATED SEAT SWITCH CTRL
 6374 HEATED SEAT PANEL EARTH
 6375 RR LH HEATED SEAT POWER SUPPLY
 6376 RR RH HEATED SEAT POWER SUPPLY
 6377 MULTI/RUNNER/SITE/COMMON
 6378 BACKREST/HEIGHT ADJUSTER COM.
 6379 SENSOR EARTH 2
 638 DR SEAT RHEOSTAT CTRL
 6380 DR SEAT RHEOSTAT INFO.
 6381 RR LH SEAT RHEOSTAT CTRL
 6382 RR LH SEAT RHEOSTAT INFO.
 6383 COMMON CEA
 6384 VOLTAGE LEVEL INFO. HEIGHT RUNNER
 6385 HEIGHT ADJUSTER SEATBACK
 TENSION LEVEL INFO.
 6386 BACKREST TOP TENSION LEVEL INFO.
 6387 LUMBAR TENSION LEVEL INFO.
 639 FR RH SEAT RHEOSTAT CTRL
 6390 FR RH SEAT RHEOSTAT INFO.
 6391 RR RH SEAT RHEOSTAT CTRL
 6392 RR RH SEAT RHEOSTAT INFO.
 6394 SEAT MEM. MOD. DIAG INFO..
 6395 MEMORY KEYPAD INFO.
 6396 MEM. KEYPAD LIGHTING CTRL.
 6397 MEM. KEYPAD WARNING LIGHT
 LIGHTING CTRL
 6398 COMMON MEMORY KEYPAD

REAR VIEW MIRRORS, STEERING COLUMN

640 REAR VIEW MIRROR JOYSTICK
 POWER SUPPLY OUTPUT (BSI)
 6400 COMMON DR REAR VIEW MIRROR
 MOTOR CTRL
 6401 DR REAR VIEW MIRROR UP/DOWN
 MOTOR CTRL
 6402 DR REAR-VIEW MIRROR L/R MOT. CTRL
 6403 DR REAR VIEW MIRROR COMMON INFO.
 6404 DR REAR VIEW MIRROR UP/DOWN
 MOT. INFO.
 6405 DR REAR-VIEW MIRROR L/R MOT. INFO.
 6406 PASS REAR VIEW MIRROR MOT. INFO.
 6407 PASS REAR VIEW MIRROR UP/
 DOWN MOT. INFO.
 6408 PASS REAR-VIEW MIRROR L/R MOT. INFO.
 6409 DR REAR VIEW MIRROR UP/DOWN
 POS. INFO.
 6410 COMMON PASS REAR VIEW MIR. MOTOR CTRL
 6411 PASS REAR VIEW MIRROR UP/DOWN
 MOTOR CTRL
 6412 PASS REAR-VIEW MIRROR L/R MOT. CTRL
 6413 DR REAR VIEW MIRROR POS. +
 POTENTIOM. CTRL
 6414 PASS REAR VIEW MIRROR POS. -
 POTENTIOM. CTRL
 6415 DR REAR VIEW MIRROR POS. -
 POTENTIOM. CTRL
 6416 PASS REAR VIEW MIRROR POS. +

POTENTIOM. CTRL
 6417 PASS REAR VIEW MIRROR UP/DOWN
 POS. INFO.
 6418 PASS REAR-VIEW MIRROR L/R POS. INFO.
 6419 DR REAR-VIEW MIRROR L/R POS. INFO.
 642 REAR-VIEW MIRROR FOLDING CTRL
 6420 REAR-VIEW MIRROR FOLDING INFO.
 6421 DRIVER FOLDING REAR VIEW MIR.
 6422 PASSENGER FOLDING REAR VIEW
 MIRROR CTRL
 6423 REAR VIEW MIRROR ADJUSTMENT
 ANALOG. INFO.
 6424 REAR VIEW MIRROR SELECTOR
 ANALOGUE INFO.
 6425 COMMON FOLD.DR.REAR-VIEW
 MIRROR MOT.CTRL
 6426 COMMON FOLD.PASS.REAR-VIEW
 MIRROR MOT.CTRL
 6427 REAR VIEW MIRROR FOLD. REQ. INPUT
 6428 REAR VIEW MIRROR FOLD-IN RELAY CTRL
 6429 REAR VIEW MIR. FOLD-OUT RELAY CTRL
 643 REAR VIEW MIRROR FOLD-OUT CTRL
 6430 REAR-VIEW MIRROR FOLD-OUT INFO.
 6431 MANUAL REAR VIEW MIR. FOLD.INFO.
 6432 EXTERIOR TEMPERATURE CTRL
 6433 EXTERIOR TEMPERATURE INFO.
 6434 COMMON EXTERIOR TEMP. INFO.
 6435 REAR VIEW MIRROR FOLD-IN/OUT INFO.
 6440 REVERSE INDEXING DIAG INFO.
 6441 REVERSING INFO.
 6443 ELECTROCHR.RR VIEW MIRROR
 ANALOG. EARTH OUTPUT
 6444 ELECT. RR VIEW MIRROR INPUT
 6445 ELECTROCHROME RR VIEW MIRROR
 POWER SUPPLY OUTPUT
 6446 ELECTROCHR. RR VIEW MIR. EARTH OUTPUT
 6450 COMMON LH RR VIEW MIR. MOTOR CTRL
 6451 RR VIEW MIRROR UP/DOWN MOT. CTRL
 6452 LH REAR-VIEW MIRROR RIGHT/LEFT
 MOT. CTRL
 6453 COMMON RH RR VIEW MIR. MOTOR CTRL
 6454 RH RR VIEW MIR. UP/DOWN MOT. CTRL
 6455 RH RR VIEW MIR. RIGHT/LEFT MOT. CTRL
 6456 FOLD-IN LH RR VIEW MIR. MOT. CTRL
 6457 FOLD-OUT LH REAR VIEW MIRROR
 MOT. CTRL
 6458 FOLD-IN RH RR VIEW MIR. MOT. CTRL
 6459 FOLD-OUT RH REAR VIEW MIRROR
 MOT. CTRL
 646 FR LH/FR RH MEM. MOD. INFO.
 6460 COLUMN INPUT CTRL
 6461 COLUMN COMMON CTRL
 6462 COLUMN RAISE CTRL
 6463 COLUMN AXIAL POS. INFO.
 6464 COLUMN RADIAL POS. INFO.
 6465 COLUMN POS + SENSOR CTRL
 6466 COLUMN POS SENSOR - CTRL
 6467 COLUMN RADIAL MOT. CTRL INFO.
 6468 COLUMN COMMON MOT. CTRL INFO.

6469 COLUMN AXIAL MOT. CTRL INFO.
 6470 LH RR VIEW MIR. UP/DOWN POS.INFO.
 6471 DR REAR-VIEW MIRROR LEFT/RIGHT
 POS. INFO.
 6472 LH REAR VIEW MIRROR POS.
 POTENTIOM. + CTRL
 6473 LH REAR VIEW MIRROR POS.
 POTENTIOM. - CTRL
 6474 RH REAR VIEW MIRROR UP/DOWN
 MOT. INFO.
 6475 RH REAR VIEW MIRROR LEFT/RIGHT
 MOT. INFO.
 6476 RH REAR VIEW MIRROR POS.
 POTENTIOM. + CTRL
 6477 RH REAR VIEW MIRROR POS.
 POTENTIOM. - CTRL
 6480 LH CAMERA EARTH
 6481 LH CAMERA SUPPLY
 6482 LH CAMERA VIDEO + SIGNAL
 6483 LH CAMERA VIDEO - SIGNAL
 6484 LH PICTO CTRL
 6485 RH CAMERA EARTH
 6486 RH CAMERA SUPPLY
 6487 RH CAMERA VIDEO + SIGNAL
 6488 RH CAMERA VIDEO - SIGNAL
 6489 RH PICTO CTRL
 6490 LH CAMERA + DATA
 6491 LH CAMERA - DATA
 6492 RH CAMERA + DATA
 6493 RH CAMERA - DATA

SEAT BELTS

650 FR LH PYRO SEAT BELT + CTRL
 6500 DR AIRBAG 2 + CTRL
 6501 DR AIRBAG 2 - CTRL
 6502 PASS AIRBAG 1 + CTRL
 6503 PASS AIRBAG 1 - CTRL
 6504 PASS AIRBAG 2 + CTRL
 6505 PASS AIRBAG 2 - CTRL
 6506 FR LH SIDE AIRBAG + CTRL
 6507 FR LH SIDE AIRBAG - CTRL
 6508 FR RH SIDE AIRBAG + CTRL
 6509 FR RH SIDE AIRBAG - CTRL
 651 FR LH PYRO SEAT BELT - CTRL
 6510 D1 AIRBAG + INFO.
 6511 D1 AIRBAG - INFO.
 6512 DRIVER KNEE AIRBAG + CTRL
 6513 DRIVER KNEE AIRBAG - CTRL
 6514 PASSENGER KNEE AIRBAG + CTRL
 6515 PASSENGER KNEE AIRBAG - CTRL
 6516 RR LH SIDE AIRBAG + CTRL
 6517 RR LH SIDE AIRBAG - CTRL
 6518 RR RH SIDE AIRBAG + CTRL
 6519 RR RH SIDE AIRBAG - CTRL
 652 FR RH PYRO SEAT BELT + CTRL
 6520 FR LH SEAT POS. SENSOR + CTRL
 6521 FR LH SEAT POS. SENSOR - CTRL
 6522 FR RH SEAT POS. SENSOR + CTRL
 6523 FR RH SEAT POS. SENSOR - CTRL

6524 FR RH SIDE IMPACT DETECTOR + CTRL
 6525 FR RH SIDE IMPACT DETECTOR - CTRL
 6526 FR LH SIDE IMPACT DETECTOR + CTRL
 6527 FR LH SIDE IMPACT DETECTOR - CTRL
 6528 RH CURTAIN AIRBAG + CTRL
 6529 RH CURTAIN AIRBAG - CTRL
 653 FR RH PYRO SEAT BELT - CTRL
 6530 LH CURTAIN AIRBAG + CTRL
 6531 RR RH PYRO SEAT BELT + CTRL
 6532 RR RH PYRO SEAT BELT - CTRL
 6533 RR LH PYRO SEAT BELT + CTRL
 6534 RR LH PYRO SEAT BELT - CTRL
 6535 REAR CENT. PYRO SEAT BELT + CTRL
 6536 REAR CENT. PYRO SEAT BELT - CTRL
 6537 PYRO SEAT BELT DIAGNOSTIC INFO.
 6538 DR 1 AIRBAG + CTRL
 6539 DR 1 AIRBAG - CTRL
 664 SEATBELT PRESENCE WARNING LIGHT CTRL
 6540 AIRBAG DIAG. INFO.
 6541 AIRBAG WARNING LIGHT INFO.
 6542 FRONT AIRBAG WARNING LIGHT CTRL
 6543 SIDE/FRONT AIRBAG WAR. LIGHT CTRL
 6544 SIDE AIRBAG WARNING LIGHT CTRL
 6545 FR RH STRAP RET. PYRO. SEAT BELT + CTRL
 6546 PASS AIRBAG INHIBIT SWITCH INFO.
 6547 PASS AIRBAG INHIBIT SWITCH CTRL
 6548 AIRBAG INHIBIT WARNING LIGHT CTRL
 6549 LH CURTAIN AIRBAG - CTRL
 655 DR STRAP PYRO. SEAT BELT + CTRL
 6550 DR2 AIRBAG + INFO.
 6551 DR2 AIRBAG - INFO.
 6552 LH CURT./SIDE AIRBAGS MOD. CTRL
 6553 RH CURT./SIDE AIRBAGS MOD. CTRL
 6554 RR RH SIDE IMPACT DETECTOR + CTRL
 6555 RR RH SIDE IMPACT DETECTOR - CTRL
 6556 RR LH SIDE IMPACT DETECTOR + CTRL
 6557 RR LH SIDE IMPACT DETECTOR - CTRL
 6558 FR PRETENSIONER MOD. CTRL
 6559 RR PRETENSIONER MOD. CTRL
 656 DR STRAP PYRO. SEAT BELT - CTRL
 6560 LH PRETENSIONER MOD. CTRL
 6561 RH PRETENSIONER MOD. CTRL
 6562 FR LH FRONT IMPACT DETECTOR + CTRL
 6563 FR LH FRONT IMPACT DETECTOR - CTRL
 6564 FR RH FRONT IMPACT DETECTOR + CTRL
 6565 FR RH FRONT IMPACT DETECTOR - CTRL
 6566 PASS. BELT RET. PYRO SEAT BELT + CTRL
 6567 PASS. BELT RET. PYRO SEAT BELT - CTRL
 6568 RR RH ROLL BAR + CTRL
 6569 RR RH ROLL BAR - CTRL
 657 R3 RR LH PYRO SEAT BELT + CTRL
 6570 RR LH ROLL BAR + CTRL
 6571 RR LH ROLL BAR - CTRL
 6572 FR/RR LH SIDE AIRBAG MOD. COMMON
 6573 FR/RR RH SIDE AIRBAG MOD. COMMON
 6574 DR PEDEST. IMPACT DETECTION + CTRL
 6575 DR PEDEST. IMPACT DETECTION - CTRL
 6576 LH PEDEST. IMPACT DETECTION + CTRL
 6577 LH PEDEST. IMPACT DETECTION - CTRL

6578 RH BONNET HINGE ACTUATOR + CTRL
 6579 RH BONNET HINGE ACTUATOR - CTRL
 658 FR LH BELT RET. PYRO SEAT BELT - CTRL
 6580 LH BONNET HINGE ACTUATOR + CTRL
 6581 LH BONNET HINGE ACTUATOR - CTRL
 6582 PEDEST. FR IMP. SENSOR + POW. SUPPLY
 6583 PEDESTRIAN FR IMP. SENSOR EARTH
 6584 PEDESTRIAN FR IMP. SENSOR + SIGN.
 6585 PEDESTRIAN FR IMP. SENSOR - SIGN.
 6586 FR RH SEAT BELT UNBUCKLED WARN. LIGHT
 6587 RR SEAT BELT UNBUCKLED WARN. LIGHT
 6588 RRC SEAT BELT UNBUCKLED WARN. LIGHT
 6589 RR LH SEAT BELT UNBUCKLED WARN. LIGHT
 659 R3 REAR PRETENSIONERS SWITCH
 6590 RR RH SEAT BELT UNBUCKLED WARN. LIGHT
 6591 FR LH SEAT BELT UNBUCKLED WARN. LIGHT
 6592 RH ANTI-SUBMARINING MOD. + CTRL
 6593 RH ANTI-SUBMARINING MOD. + CTRL
 6594 CENTRAL FR PYRO. SEAT BELT + CTRL
 6595 FR RH BELT RETURN PYRO SEAT
 BELT - CTRL.
 6596 CENTRAL FR PYRO. SEAT BELT - CTRL
 6597 EMERGENCY CALL CTRL

HEADLIGHT LEVELLER

6601 HEADLIGHT LEVEL. MOD. INDICATOR CTRL
 6602 LH HEADLIGHT LEVELLER CTRL
 6603 RH HEADLIGHT LEVELLER CTRL
 6604 FR BODY HEIGHT SENSOR SIGNAL
 6605 RR BODY HEIGHT SENSOR SIGNAL
 6606 FR BODY HEIGHT SENS. +POWER SUPPLY
 6607 FR BODY HEIGHT SENS. POWER SUPPLY
 6608 RR BODY HEIGHT SENS.+POWER SUPPLY
 6609 RR BODY HEIGHT SENS.-POWER SUPPLY
 6610 HEADLIGHT LEVELLER DIAGN.
 6611 LH LEVELLER PHASE 1_1
 6612 LH LEVELLER PHASE 1_2
 6613 LH LEVELLER PHASE 2_1
 6614 LH LEVELLER PHASE 2_2
 6615 BODY HEIGHT SENS. + POWER SUPPLY
 6616 BODY HEIGHT SENS. - POWER SUPPLY
 6621 RH LEVELLER PHASE 1_1
 6622 RH LEVELLER PHASE 1_2
 6623 RH LEVELLER PHASE 2_1
 6624 RH LEVELLER PHASE 2_2

GEARBOX AND TRANSMISSION ASSISTANCE

670 MOTOR POS. SENSOR POWER SUPPLY
 6700 AUTOMATIC GEARBOX OPERATION
 MODE INFO.
 6701 STARTING PREVENTION REL. CTRL
 6702 REDUNDANT BRAKE SWITCH INFO.
 6703 SEQUENCE SV + POWER SUPPLY
 6704 MODULATION SV + POWER SUPPLY
 6705 BVA COOLANT SV + POWER SUPPLY
 6706 BVA COOLANT SV - POWER SUPPLY
 6707 AUTOMATIC GEARBOX DATA POSITION
 - SIGNAL
 6708 LOCKUP SOLENOID VALVE CTRL

6709 LOCKUP INFO.
 671 ENGINE POS. SENSOR EARTH
 6710 AUTOM. GEARBOX OIL TEMP. + SIGNAL
 6711 AUTOM. GEARBOX OIL TEMP. - SIGNAL
 6712 AUTOM. GEARBOX POSITION + SIGNAL
 6713 AUTOM. GEARBOX POSITION - SIG.
 6714 GEARBOX SPEED SENSOR + SIGNAL
 6715 GEARBOX SPEED SENSOR - SIGNAL
 6716 GEARBOX OIL PRESSURE INFO.
 6717 GEARBOX OIL TEMPERATURE INFO.
 6718 SEQUENCE 1 SV CTRL
 6719 SEQUENCE 2 SV CTRL
 672 SOLENOID EARTH
 6720 SEQUENCE 3 SV CTRL
 6721 SEQUENCE 4 SV CTRL
 6722 SEQUENCE 5 SV CTRL
 6723 SEQUENCE 6 SV CTRL
 6724 MODULATION 1 SV CTRL
 6725 START LOCK SIGNAL
 6726 GEAR LEVER SWITCH A1
 6727 GEAR LEVER SWITCH A2
 6728 GEAR LEVER SWITCH A3
 6729 GEAR LEVER SWITCH A4
 673 ENGINE + CTRL
 6730 GEAR LEVER EARTH
 6731 LH STEERING WHEEL CONTROL SWITCH
 6732 RH STEERING WHEEL CONTROL SWITCH
 6733 STEERING WHEEL CONTROL EARTH
 6734 BVA DATA1 POS. SIGNAL
 6735 BVA DATA2 POS. SIGNAL
 6736 BVA DATA3 POS. SIGNAL
 6737 BVA DATA4 POS. SIGNAL
 6738 VEHICLE SPEED SIGNAL
 6739 VEHICLE SPEED INFORMATION
 674 ENGINE - CTRL
 6740 BVA FAULT WARNING LIGHT CTRL
 6741 ENGINE POS. SENSOR SIGNAL
 6742 SHIFT LOCK RELAY CTRL
 6743 SHIFT LOCK CTRL
 6744 INHIB. APR WARNING LIGHT CTRL
 6745 SHIFT LOCK VIA RELAY + CTRL
 6746 SHIFT LOCK VIA RELAY - CTRL
 6747 SELECTION ACTUATOR CTRL
 6748 SELECT. ACTUATOR + POWER SUPPLY
 6749 SELECT. ACTUATOR - POWER SUPPLY
 675 ENGINE POS. RECOPY SENSOR SIGNAL
 6750 SHIFT ACTUATOR CTRL
 6751 SHIFT ACTUATOR + POWER SUPPLY
 6752 SHIFT ACTUATOR - POWER SUPPLY
 6753 CLUTCH ACTUATOR CTRL
 6754 CLUTCH ACTUATOR + POWER SUPPLY
 6755 CLUTCH ACTUATOR - POWER SUPPLY
 6756 GEARBOX INPUT SPEED INFO.
 6757 GEARBOX INPUT SPEED SIGNAL
 6758 GEARBOX OUTPUT SPEED INFO.
 6759 GEARBOX OUTPUT SPEED SIGNAL
 676 AUTOMATIC GEARBOX SPORT
 PUSH-BUTTON LED CONTROL
 6760 ENGINE TORQUE INFO.

6761 PROGRAM POS. DISPLAY INFO.
 6762 NORMAL SPORT PROGRAM INFO.
 6763 SNOW PROGRAM INFO.
 6764 ENGINE B SELECTION POS. RECOPY
 6765 ENGINE B SHIFT POS. RECOPY
 6766 ENGINE B CLUTCH POS. RECOPY
 6767 AUTOMATIC GEARBOX TORQUE
 REDUCTION INFO.
 6768 AorN SEQ. SV POWER SUPPLY
 6769 KEY LOCK + CTRL
 677 AUTO. GEARB. SNOW/SPORT PROG. CTRL
 6770 KEY LOCK - CTRL
 6771 KEY LOCK SIGNAL
 6772 LINE PRESSURE + SUPPLY
 6773 LINE PRESSURE - SUPPLY
 6774 LINE PRESSURE SIGNAL
 6775 SHIFT SENSOR + POWER SUPPLY
 6776 SHIFT SENSOR - POWER SUPPLY
 6777 ENGINE A SHIFT POSITION
 6778 SELECTION SENSOR + POWER SUPPLY
 6779 SELECTION SENSOR - POWER SUPPLY
 678 NEUTRAL INPUT (BVM)
 6780 ENGINE A SELECTION POSITION
 6781 CLUTCH SENSOR + POWER SUPPLY
 6782 CLUTCH SENSOR - POWER SUPPLY
 6783 ENGINE A CLUTCH POSITION
 6784 THROTTLE POSITION SENSOR
 + POWER SUPPLY
 6785 THROTTLE POSITION SENSOR -
 POWER SUPPLY
 6786 THROTTLE POS. SENSOR SIGNAL
 6787 AUTOM. GEARBOX RETROCONTROL INFO.
 6788 SPORT PROGRAM CTRL
 6789 SNOW PROGRAM CTRL
 679 SNOW BUTTON LED OUTPUT
 6790 FIRST GEAR HELD PROGRAM CTRL
 6791 NEUTRAL PARKING POSITION INFO.
 6792 ALL OR NOTHING EV 1 CTRL
 6793 ALL OR NOTHING EV 2 CTRL
 6794 OVERDRIVE SIGNAL
 6795 ONE-TOUCH CTRL WITH +
 6796 ONE-TOUCH CTRL WITH -
 6797 PARKING PROGRAM CTRL
 6798 PARKING POSITION SIGNAL

SUNROOF, QUARTER PANELS
 6800 SUNROOF RELAY CTRL
 6801 SUNROOF SWITCH CTRL
 6802 SUNROOF MOTOR CTRL
 6803 SUNROOF SLIDE RUNNER LIMIT CTRL
 6804 SUNROOF TILT LIMIT CTRL
 6805 SUNROOF CLOSING OUTPUT
 6806 SUN. OUTPUT/CTRL PANEL EW OUTPUT
 6807 SUNROOF AUTHORISATION OUTPUT (BSI)
 6808 SLIDE OPEN/CLOSE TILT CTRL
 6809 SLIDE CLOSE/OPEN TILT CTRL
 6810 SUNROOF SWITCH LIGHTING INFO.
 6811 SUNROOF SWITCH 1 INFO.
 6812 SUNROOF SWITCH 2 INFO.

 6813 SUNROOF SWITCH 3 INFO.
 6814 SUNROOF SWITCH 4 INFO.
 6815 ONE-TOUCH SUNROOF POWER
 SUPPLY OUTPUT
 6816 ROW 1 SUNROOF OPEN CTRL
 6817 ROW 1 SUNROOF CLOSE CTRL
 6818 ROW 2 SUNROOF OPEN CTRL
 6819 ROW 2 SUNROOF CLOSE CTRL
 6820 ROW 3 SUNROOF OPEN CTRL
 6821 ROW 3 SUNROOF CLOSE CTRL
 6822 ROW 1 SUNROOF SWITCH LIGHT
 6823 ROW 2 SUNROOF SWITCH LIGHT
 6824 ROW 3 SUNROOF SWITCH LIGHT
 6825 FR QUARTER SWITCH POWER SUPPLY
 6826 RR QUARTER SWITCH POWER SUPPLY
 6827 FR QUARTER RELAY CTRL
 6828 RR QUARTER RELAY CTRL
 6829 HALL SENSOR POWER SUPPLY
 683 BOOT OPEN INFO.
 6830 RH/LH BOOT LOCKED COMMON INFO.
 6831 RH/LH ROOF CLOSED COMMON INFO.
 6832 LOCKED ROOF INFO.
 6833 BOOT LOCKED INFO.
 6834 MODULE STATUS INFO.
 6835 EARTH ACTUATOR POWER SUPPLY
 6836 REAR SCREEN INFO.
 6837 MODULE OPEN CTRL
 6838 HALL SENSOR EARTH
 6839 HALL SENSOR SIGNAL
 6840 FOLDING ROOF OPEN CTRL INFO.
 6841 STOWED PIVOTING PANEL
 INFORMATION COMMON
 6842 RETRACT.ROOF CLOSED COM. INFO.
 6843 REAR SCREEN UNLOCKING SIGNAL
 6844 REAR SCREEN UNLOCKING EARTH
 6845 STOWED PIVOTING PANEL INFO.
 6846 DEPLOYED PIVOTING PANEL INFO.
 6847 STOWED PIVOTING PANEL MOT.
 CTRL OUTPUT .
 6848 DEPLOYED PIVOTING PANEL MOT.
 CTRL OUTPUT .
 6849 DEPLOYED PIVOTING PANEL
 INFORMATION COMMON
 6850 SUNROOF SPEED THRESHOLD INFO. (BSI)
 6851 OPEN CURTAIN (SUNBLIND) INFO. (BSI)
 6852 LH/RH LOCK ROOF INFO.
 6853 LH/RH LOCK ROOF COM INFO.
 6854 UNLOCK ROOF INFO.
 6855 LH LOCK ROOF RACK INFO.
 6856 RH LOCK ROOF RACK INFO.
 6857 PUMP BLOCK POW. SUPPLY VIA TE ECU
 6858 HYDRAU. PPE BLOCK REL CTRL
 6859 SUNROOF AUTO CLOSE CTRL
 686 RETRACTABLE ROOF DIAGNOSTIC
 6861 ROOF CLOSED INFO. FOR BSI
 6862 BSC BEEP INFO. FOR BSI
 6863 LH LOCKED ROOF INFO.
 6864 RH LOCKED ROOF INFO.
 6865 CLOSED BOOT INFO.

6866 CURTAIN DRAWN INFO.
 6867 ROOF CLOSED INFO.
 6868 ROOF OPEN INFO.
 6869 OPEN BOOT INFO.
 6870 POLE 1 THERMAL RESISTOR INFO.
 6871 POLE 2 THERMAL RESISTOR INFO.
 6872 OPEN LH REAR QUARTER CTRL
 6873 OPEN RH REAR QUARTER CTRL
 6874 CLOSE LH REAR QUARTER CTRL
 6875 CLOSE RH REAR QUARTER CTRL
 6876 OPEN LH REAR QUARTER
 REMINDER CTRL
 6877 OPEN RH REAR QUARTER REM. CTRL
 6878 CLOSE LH REAR QUARTER REM. CTRL
 6879 CLOSE RH REAR QUARTER REM. CTRL
 6880 ECU WAKE-UP VIA REAR SCREEN
 6881 PARCEL SHELF STOWED/DEPLOYED
 INFO.
 6882 RH/LH LOCKED BOOT INFO.
 6883 RH/LH LOCKED BOOT COMMON INFO.
 6884 SWITCH ONE-TOUCH OUTP. INFO.
 6890 RELAY 2 CTRL
 6891 RELAY 1 CTRL
 6892 VALVE CTRL
 6893 HYDRAULIC PUMP UNIT RELAY EARTH

CENTRAL LOCKING (CONTINUED)

690 DOORACR.CUT-OFF MOD. OUTPUT STATUS
 6900 LH DOOR LOCK ACT. PLC MOD. CTRL
 6901 RH DOOR LOCK ACT. PLC MOD. CTRL
 6902 RR ACCESS CLOSED WARNING LIGHT
 6903 RR ACCESS CLOSED CTRL
 6904 LOCK COMMON REL. OUTPUT
 6905 RR LH EXT. OPEN SENSOR INFO.
 6906 RR RH EXT. OPEN SENSOR INFO.
 6907 FUEL FILLER FLAP RELAY OPEN OUTPUT
 6908 H_MAX SHUTTER POS
 6909 H_MIN SHUTTER POS
 6910 SHUTTER LH SENSOR + CTRL
 6911 SHUTTER LH SENSOR - CTRL
 6912 SHUTTER RH SENSOR + CTRL
 6913 SHUTTER RH SENSOR - CTRL
 6914 CPO_FR LH
 6915 CPO_FR RH
 6916 FR LH VER POS INFO.
 6917 FR RH VER POS INFO.

ANTI-LOCK BRAKING SYSTEM

700 FR LH WHEEL SPEED INFO.
 7001 FR LH WHEEL SPEED SIGNAL
 7002 FR LH WHEEL SPEED SIGNAL REF.
 701 FR RH WHEEL SPEED INFO.
 7011 FR RH WHEEL SPEED SIGNAL
 7012 FR RH WHEEL SPEED SIGNAL REF.
 702 RR LH WHEEL SPEED INFO.
 7021 RR LH WHEEL SPEED SIGNAL
 7022 RR LH WHEEL SPEED SIGNAL REF.
 703 RR RH WHEEL SPEED INFO.
 7031 RR RH WHEEL SPEED SIGNAL

7032 RR LH WHEEL SPEED SIGNAL REF.
 7045 CLUTCH SIGNAL
 7051 ABS FUNCTION SIGNAL
 7052 ABS DIAGNOSTIC
 7057 ABS MODULE POWER SUPPLY
 7062 FR LH ACTIVATE/HOLD/EXHAUST SV CTRL
 7063 FR RH ACT/MATE/HOLD/EXHAUST SV CTRL
 7064 RR LH ACT/MATE/HOLD/EXHAUST SV CTRL
 7065 RR RH ACT/MATE/HOLD/EXHAUST SV CTRL
 7066 LDA SIGNAL
 7070 BRAKE PED. TRAVEL SENSOR 5V
 POWER SUPPLY
 7071 BRAKE PED. TRAVEL SENSOR 1 SIGNAL
 7072 BRAKE PED. TRAVEL SENSOR 2 SIGNAL
 7073 SIGNAL EARTH
 7086 APR REGULATION WARNING LIGHT CTRL
 7087 ABS FAULT WARNING LIGHT CTRL
 7088 APR FAULT WARNING LIGHT CTRL
 7089 HILL HOLDER FAULT WARNING LIGHT CTRL
 7090 INHIBITED APR WARNING LIGHT CTRL
 7091 ABS INHIBIT CTRL
 7092 ASR INHIBITION CTRL
 7093 BRAKING DIST. FAULT WARNING LIGHT

VARIABLE POWER STEERING (DAV)

7100 VARIABLE POWER STEERING INFO.
 7101 VARIABLE POWER STEERING CTRL
 7102 VARIABLE POWER STEER. RELAY CTRL
 7103 EL. STEER. WHEEL ANGLE + SPEED SIG.
 7104 EL. STEERING WHEEL TORQUE SIGNAL
 7105 EL. STEERING WHEEL CLUTCH CTRL
 7106 DAV PROPORT. SV + CTRL
 7107 DAV PROPORT. SV - CTRL
 7108 DAV ECU POWER SUPPLY
 7109 DAV LIMIT INFO.
 7110 ELECT.PUMP.MOT.POWER REL. CTRL
 7111 ELECTRIC PUMP MOTOR CTRL
 7112 ANGLE SENSOR + 12V POWER SUPPLY
 7113 ANGLE SENSOR OUTPUT 1 INFO.
 7114 ANGLE SENSOR OUTPUT 2 INFO.
 7115 TORQUE SENSOR POWER SUPPLY
 7116 TORQUE SENSOR EARTH
 7117 PRIMARY TORQUE INFO.
 7118 SECONDARY TORQUE INFO.
 7119 ANGLE SENSOR EARTH
 7120 TORQUE SENSOR TEMP. INFO.
 7121 DAV VALVE COMMON
 7122 DAV VALVE PHASE 1 + CTRL
 7123 DAV VALVE PHASE 1 - CTRL
 7124 DAV VALVE PHASE 2 + CTRL
 7125 DAV VALVE PHASE 2 - CTRL

TRIP COMPUTER - CLOCK

720 LOWER SCREEN TILT CTRL (X+)
 7200 COLOUR SCREEN POWER SUPPLY
 7201 COLOUR SCREEN EARTH
 7202 SCREEN BRIGHTNESS INFO.
 7203 PAL/NTSC MODE INFO.
 7204 RED COLOUR INFO.

7205 GREEN COLOUR INFO.
 7206 BLUE COLOUR INFO.
 7207 VIDEO EARTH
 7208 COLOUR SCREEN IR RECEIVER
 POWER SUPPLY
 7209 COL. SCREEN IR RECEIVER EARTH
 721 TOP SCREEN TILT CTRL (X+)
 7210 IR RECEIVER TRANSMISS. INFO.
 7211 IR RECEIVER RECEPTION INFO.
 7212 IR RECEIVER MODE INFO.
 7213 COLOUR SCREEN SHIELDING
 7214 EXTERNAL VIDEO EARTH
 7215 EXTERNAL VIDEO INPUT
 7216 MULTIFUNCTION SCREEN EARTH
 7217 MULTIFUNCT. SCREEN POWER SUPPLY
 7218 MULTIFUNCTION SCREEN ON/OFF
 7219 MULTIFUNCTION SCREEN CAN HIGH
 7220 MULTIFUNCTION SCREEN CAN LOW
 7221 LH AUDIO AUXILIARY
 7222 RH AUDIO AUXILIARY
 7223 AUDIO EARTH
 7225 DISPLAY SCROLL INFO.
 7226 SCREEN DIMMER CTRL
 7227 FOLD. POS RETURN
 7228 FOLD. FORCED OPENING
 7230 COL. SCREEN POWER SUPPLY (JAPAN)
 7231 COL. SCREEN EARTH (JAPAN)
 7232 SCREEN BRIGHTNESS INFO. (JAPAN)
 7233 PAL/NTSC MODE INFO. (JAPAN)
 7234 RED COLOUR INFO. (JAPAN)
 7235 GREEN COLOUR INFO. (JAPAN)
 7236 BLUE COLOUR INFO. (JAPAN)
 7237 VIDEO EARTH (JAPAN)
 7238 COL. SCREEN IR REC. POWER
 SUPPLY. (JAPAN)
 7239 BSI OUTPUT TO DIODE (JAPAN)
 7240 DIODE OUTPUT TO HANDBRAKE (JAP.)
 7243 COL. SCREEN SHIELDING (JAPAN)
 7244 LVDS CLK1+
 7245 LVDS CLK1-
 7246 LVDS A0+
 7247 LVDS A0-
 7248 LVDS A1+
 7249 LVDS A1-
 7250 LVDS A2+
 7251 LVDS A2-
 7252 LVDS EARTH

CRUISE CONTROL (RVV)

730 CRUISE CONTROL POWER SUPPLY
 7300 CANCELLATION SWITCH POWER SUPPLY
 7301 ACCEL/DECEL/MEM. SWITCH
 POWER SUPPLY.
 7302 CRUISE CTRL MODULE POW. SUPPLY
 7303 RESUME CRUISE CONTROL INFO.
 7304 ACCEL/DECEL/MEM. INFO.
 7305 CRUISE CONTROL CANCEL SIGNAL
 7306 ACTION ON CLUTCH/GEAR INFO.
 7307 STARTER INHIBIT

7309 REDUNDANT BRAKE SIGNAL
 731 ACCEL. PEDAL RES.PT. SIGNAL.
 7310 ACCEL PEDAL RES.PT/C EARTH
 7311 CRUISE CONTROL PUMP CONTROL
 7312 CRUISE CONTROL SV CONTROL
 7313 SOLENOID VALVE/PUMP POWER SUPPLY
 7316 CRUISE CTRL CUT-OFF REL. POW. SUPPLY
 732 ACCEL. PEDAL RES. POINT 2 SIGNAL
 7320 CRUISE CTRL CUT-OFF SV POWER SUPPLY
 7321 CRUISE CONTROL SIGNAL
 7322 CRUISE CONTROL SIGNAL REF.
 7324 DECELERATION INFO.
 7325 ACCELERATION INFO.
 7326 CANCELLATION INFO.
 7327 MEMORY INFO.
 7330 SPEED LIMITER ANALOG/DIG.
 CONVERTS. MOD. +5V
 7331 CONVERTS. MOD SIGNAL 1 OUTPUT
 7332 CONVERTS. MOD SIGNAL 1 OUTPUT
 7334 MEM. RETURN ACCEL. SIGNAL
 7335 CONVERTS. MOD. EARTH
 7338 DECEL. MEM. SIGNAL.
 7340 OVERSPEED WARNING MEM. CTRL
 7342 OVERSP. WARNING IND. LIGHT INFO.
 7345 AUTHORISED SPEED STOP INFO.
 7346 AUTH. SPEED STOP WARNING LIGHT CTRL
 7347 MODE INFO.

PARKING ASSISTANCE (AAS) - STL

7500 INT. RR LH SENSOR + CTRL
 7501 INT. RR LH SENSOR - CTRL
 7502 EXT. RR LH SENSOR + CTRL
 7503 EXT. RR LH SENSOR - CTRL
 7504 INT. RR RH SENSOR + CTRL
 7505 INT. RR RH SENSOR - CTRL
 7506 EXT. RR RH SENSOR + CTRL
 7507 EXT. RR RH SENSOR - CTRL
 7508 TRAILER INFO.
 7509 RR SPEAKER + CTRL
 7510 RR SPEAKER -CTRL
 7511 INT. RR LH SENSOR SIGNAL
 7512 EXT. RR LH SENSOR SIGNAL
 7513 INT. RR RH SENSOR SIGNAL
 7514 EXT. RR RH SENSOR SIGNAL
 7515 RR SENSOR + CTRL
 7516 RR SENSOR - CTRL
 7517 PARKING ASSISTANCE INHIBITION CTRL
 7518 PARK. ASSIST. PUSH-BUTTON
 WARNING LIGHT CTRL
 7519 INT. FR LH SENSOR SIGNAL
 7520 EXT. FR LH SENSOR SIGNAL
 7521 INT. FR RH SENSOR SIGNAL
 7522 EXT. FR RH SENSOR SIGNAL
 7523 FR SENSOR + CTRL
 7524 FR SENSOR - CTRL
 7525 PARK. ASS. INHIBIT BUTTON INPUT
 7526 LAT. TRAJ. MON. INHIBIT BUTTON CTRL
 7527 PARK. ASS. INHIBIT BUTTON LED OUTPUT
 7528 LAT. TRAJ. MON. INHIBIT BUTTON

LED OUTPUT

7538 LH SIDE SENSOR SIGNAL
7539 RH SIDE SENSOR SIGNAL
7540 CENTRE FR LH SENSOR + CTRL
7541 CENTRE FR LH SENSOR - CTRL
7542 CENTRE FR RH SENSOR + CTRL
7543 CENTRE FR RH SENSOR - CTRL
7544 CENTRE FR LH SENSOR SIGNAL
7545 CENTRE FR RH SENSOR SIGNAL
7550 LAT. TRAJ. MON. SENS. POWER SUPPLY
7551 VIBRATORS POWER SUPPLY
7552 LH VIBRATOR CTRL
7553 RH VIBRATOR CTRL
7555 LAT. TRAJ. MON. SENSOR 0_V

TYRE PRESSURE MONITORING

7600 FR LH TYRE PRESSURE DETECT.LF ANT. +
7601 FR LH TYRE PRESSURE DETECT.LF ANT. -
7602 FR RH TYRE PRESSURE DETECT. LF ANT. +
7603 FR RH TYRE PRESSURE DETECT. LF ANT. -
7604 RR LH TYRE PRESSURE DETECT.LF ANT. +
7605 RR LH TYRE PRESSURE DETECT.LF ANT. -
7606 RR RH TYRE PRES. DETECT.LF ANT. +
7607 RR RH TYRE PRESSURE DETECT.LF ANT. -
7608 FR TYRE PRES. DETECT. HF ANT. 1
7609 FR TYRE PRES. DETECT. HF ANT. 2
7610 RR TYRE PRES. DETECT. HF ANT. 1
7611 RR TYRE PRES. DETECT. HF ANT. 2
7612 RR TYRE PRESSURE DETECTION
INITIALISATION BUTTON

SUSPENSION

770 SUSPENS. FAULT WARNING LIGHT CTRL
7700 SPORT SUSPENS. WARNING LIGHT CTRL
7701 ADAC FAULT WARNING LIGHT CTRL
7702 VARIABLE DAMPER WARN. LIGHT CTRL
7703 SPORT FAULT SUSP. WARNING LIGHT CTRL
7704 SPORT NORMAL SELECTION
7705 MINERAL HYDRAULIC FLUID LEVEL
7706 RAISE BOOT CTRL
7707 LOWER BOOT CTRL
7708 FR RH ACTUATOR PHASE 1 + CTRL
7709 FR RH ACTUATOR PHASE 1 - CTRL
771 VARIABLE DAMPING CTRL
7710 FR RH ACTUATOR PHASE 2 + CTRL
7711 FR RH ACTUATOR PHASE 2 - CTRL
7712 RR RH ACTUATOR PHASE 1 + CTRL
7713 RR RH ACTUATOR PHASE 1 - CTRL
7714 STEERING WHEEL ANGLE SENSOR S3
7715 THROTTLE ANGLE SIGNAL
7716 THROTTLE ANGLE INFORMATION
7717 RR RH ACTUATOR PHASE 2 + CTRL
7718 RR RH ACTUATOR PHASE 2 - CTRL
772 FR SHOCK ABSORBER EARTH
7720 FR LH ACTUATOR PHASE 1 + CTRL
7721 FR LH SHOCK ABSORBER EARTH
7722 FR RH SHOCK ABSORBER EARTH
7723 FR LH ACTUATOR PHASE 1 - CTRL
7724 FR BODY HEIGHT SENSOR SIGNAL

7725 RR BODY HEIGHT SENSOR SIGNAL
7726 FR BODY HEIGHT SENS.+ POWER SUPPLY
7727 FR BODY HEIGHT SENS. -POWER SUPPLY
7728 RR BODY HEIGHT SENS.+ POWER SUPPLY
7729 RR BODY HEIGHT SENS. -POWER SUPPLY
773 RR SHOCK ABSORBER EARTH
7730 FR LH ACTUATOR PHASE 2 + CTRL
7731 RR LH SHOCK ABSORBER EARTH
7732 RR RH SHOCK ABSORBER EARTH
7733 FR LH ACTUATOR PHASE 2 - CTRL
7734 FR LH BODY HEIGHT SENSOR
+ POWER SUPPLY
7735 FR LH BODY HEIGHT SENSOR -
POWER SUPPLY
7736 FR LH BODY HEIGHT SENSOR SIGNAL
7737 FR RH BODY HEIGHT SENSOR
+ POWER SUPPLY
7738 FR RH BODY HEIGHT SENSOR -
POWER SUPPLY
7739 FR RH BODY HEIGHT SENSOR SIGNAL
774 BODY HEIGHT SENSOR + POWER SUPPLY
7740 FR LH BODY HEIGHT SENSOR
+ POWER SUPPLY
7741 FR LH BODY HEIGHT SENSOR -
POWER SUPPLY
7742 FR LH BODY HEIGHT SENSOR SIGNAL
7743 RR RH BODY HEIGHT SENSOR
+ POWER SUPPLY
7744 RR RH BODY HEIGHT SENSOR -
POWER SUPPLY
7745 RR RH BODY HEIGHT SENSOR SIGNAL
7746 FR SIDE LAT. ACCELERATION INFO.
7747 RR LH ACTUATOR PHASE 1 + CTRL
7748 FR LAT. ACCELEROMETER SENSOR
+ POWER SUPPLY
7749 FR LAT. ACCELEROMETER SENSOR
POWER SUPPLY
775 BODY HEIGHT SENSOR -POWER SUPPLY
7750 FR VERTICAL ACCELERATION INFO.
7751 RR LH ACTUATOR PHASE 1 - CTRL
7752 FR VERT. ACCELER. SENS. +
POWER SUPPLY
7753 FR VERT. ACCELEROMETER
SENSOR - POWER SUPPLY
7754 FR HYDRACTIVE SV CTRL
7755 RR HYDRACTIVE SV CTRL
7756 FR HYDRACTIVE SV + POWER SUPPLY
7757 FR HYDRACTIVE SV - POWER SUPPLY
7758 RR HYDRACTIVE SV + POWER SUPPLY
7759 RR HYDRACTIVE SV - POWER SUPPLY
776 STEERING WHEEL ANGLE SIGNAL S1
7760 ADAC PROPORT. SV 1 CTRL
7761 ADAC PROPORT. SV 1 POWER SUPPLY
7762 ADAC PROPORT. SV 2 CTRL
7763 ADAC PROPORT. SV 2 POWER SUPPLY
7764 ADAC SV 1 CTRL
7765 ADAC SV 1 - POWER SUPPLY
7766 ADAC SV 2 CTRL
7767 ADAC SV 2 - POWER SUPPLY

7768 FR ACTUATOR PHASE 1 + CTRL
 7769 FR ACTUATOR PHASE 1 - CTRL
 777 E_HYD SPORT
 7770 FR ACTUATOR PHASE 2 + CTRL
 7771 FR ACTUATOR PHASE 2 - CTRL
 7772 RR LH ACTUATOR PHASE 2 + CTRL
 7773 RR LH ACTUATOR PHASE 2 - CTRL
 7774 RR ACTUATOR PHASE 1 + CTRL
 7775 RR ACTUATOR PHASE 1 - CTRL
 7776 RR ACTUATOR PHASE 2 + CTRL
 7777 RR ACTUATOR PHASE 2 - CTRL
 7778 HYDRACTIVE INPUT + (BSI)
 7779 HYDRACTIVE INPUT - (BSI)
 778 STEERING WHEEL ANGLE SIGNAL S2
 7780 BODY H BUZZER S PILOT
 7781 HIGH SUSPENS. WARNING LIGHT INFO.
 7782 TRACK SUSPENS. WARNING LIGHT INFO.
 7783 NORMAL SUSP. WARNING LIGHT INFO.
 7784 LOW SUSPENS. WARNING LIGHT INFO.
 7785 BODY HEIGHT 1 INFO.
 7786 BODY HEIGHT 2 INFO.
 7787 HIGH SUSPENSION + CTRL
 7788 HIGH SUSPENSION - CTRL
 7789 HEIGHT PROGRAMMING CTRL
 7790 HYDRAULIC DIAGNOSTIC
 7791 RR ACCEL. SENS. +5V POWER SUPPLY
 7792 RR ACCEL. SENSOR SIGNAL
 7793 RR SENSOR 5V EARTH
 7794 FR LH ACCEL. SENSOR POWER SUPPLY
 7795 FR LH ACCEL. SENSOR SIGNAL
 7796 FR LH SENSOR EARTH
 7797 FR RH ACCEL. SENSOR POWER SUPPLY
 7798 FR RH ACCEL. SENSOR SIGNAL
 7799 FR RH SENSOR EARTH

SUSPENS. + STABILITY PROGRAM

7800 ESP FAULT WARNING LIGHT
 7801 ESP INHIBIT WARNING LIGHT CTRL
 7802 ESP REGUL. WARNING LIGHT CTRL
 7803 LATERAL ACCELEROMETER INFO.
 7804 LATERAL ACCELEROMETER SIGNAL
 7805 STEERING WHEEL ANGLE INFO.
 7806 STEERING WHEEL ANGLE SIGNAL
 7807 ESP CLUTCH SIGNAL
 7809 ESP PRELOAD. PUMP MOT. + CTRL
 7810 ESP PRELOAD. PUMP MOT. - CTRL
 7811 ESP BRAKE FLUID PRESSURE SENSOR 1 +
 7812 ESP BRAKE FLUID PRESSURE SENSOR 1 -
 7813 ESP BRAKE FLUID PRESSURE
 SENSOR 1 INFO.
 7814 ESP SV + POWER SUPPLY
 7815 ESP SV RELAY CTRL
 7816 ESP MOTOR + POWER SUPPLY
 7817 ESP MOTOR RELAY CTRL
 7818 CTRL RELAY COILS+ POWER SUPPLY.
 7819 FR LH INLET SOLENOID VALVE CTRL
 7820 FR RH INLET SOLENOID VALVE CTRL
 7821 RR LH INLET SOLENOID VALVE CTRL
 7822 RR RH INLET SOLENOID VALVE CTRL

7823 FR LH EXHAUST SV CTRL
 7824 FR RH EXHAUST SV CTRL
 7825 RR LH EXHAUST SV CTRL
 7826 RR RH EXHAUST SV CTRL
 7827 USV1 SOLENOID VALVE CTRL
 7828 USV2 SOLENOID VALVE CTRL
 7829 HSV1 SOLENOID VALVE CTRL
 7830 HSV2 SOLENOID VALVE CTRL
 7831 ACCELEROM./GYROMETER + SENSOR
 7832 ACCELEROM./GYROMETER - SENSOR
 7833 ACCELEROMETER INFORMATION
 7834 GYROMETER INFORMATION
 7835 GYROM./ACCELEROM. SENSOR TEST
 OUTPUT
 7836 GYROM./ACCELEROM. SENSOR REF. INPUT
 7837 ESP INHIBIT CTRL
 7838 ESP PUSH-BUTTON WARN. LIGHT CTRL
 7839 ESP BRAKE FLUID PRESSURE SENSOR 2 +
 7840 ESP BRAKE FLUID PRESSURE
 SENSOR 2 -
 7841 ESP BRAKE FLUID PRES. SENSOR
 2 INFO.
 7842 REMOTE WAKE-UP INFO.
 787 + COMPRESSOR
 7870 BUTTON POWER SUPPLY
 7871 LOWER BUTTON
 7872 RAISE BUTTON
 7873 ACCESSORY INFLATION CTRL
 7874 PROGRAMMED INFLATION CTRL
 7875 HEIGHT SENSOR SIGNAL RECOPY
 7876 ACCESSORY PRESENCE
 7877 + TANK SV
 7878 - TANK SV
 7879 BUZZER
 788 - COMPRESSOR
 7880 COMPRESSOR SV POWER SUPPLY
 7881 FR RH SV CTRL
 7882 RR LH SV CTRL
 7883 TANK SV CONTROL
 7884 EXHAUST SV CTRL
 7885 COMPR. PRESSURE SENS. POWER SUPPLY
 7886 COMPR. PRESSURE SENSOR EARTH
 7887 COMPR. PRESSURE SENSOR SIGNAL
 7888 COMPR. TEMP. SENSOR SIGNAL
 7889 COMPR. TEMP. SENSOR EARTH
 789 INHIBIT BUTTON CTRL
 7890 SYSTEM INHIBIT LED
 7891 ACCES. PRESENCE POWER SUPPLY

CLIMATE CONTROL, AIR CONDITIONING

800 PASS CONTROL PANEL REF. +5V
 8000 CLIMATE CONTROL MODULE CTRL
 8001 CLIMATE CONTROL DIAGNOSTIC INFO.
 8002 PASS. COMPARTMENT AIR TEMP.
 SENSOR DIAG. INFO.
 8003 BRIGHTNESS SENSOR 1 SIGNAL
 8004 BRIGHTNESS SENSOR 2 SIGNAL
 8005 AMBIENT LIGHT SIGNAL
 8006 SOLAR SENSOR SIGNAL

8007 TUNNEL LIGHT SIGNAL
 8008 BRIGHTNESS SENSOR EARTH
 8009 TWILIGHT LIGHT SIGNAL
 801 STT OPERATION AUTHORISATION
 8010 CLIM. CTRL. MODULE OPERATED BY
 PRESSURE SWITCH
 8011 WARM LOOP COOLANT PUMP RELAY CTRL
 8012 PASS. CTRL. PANEL MIX. SETPOINT
 8013 PASS. CTRL. PANEL REF. EARTH
 8014 SINGLE/DUAL-ZONE MODE BUTTON
 8015 BRIGHTNESS EARTH OUTPUT
 8016 SINGLE/DUAL-ZONE MODE WARNING LIGHT
 8017 WARM LOOP SV REL. CTRL
 8018 BLOWER CTRL MOD. SETPOINT
 8019 BLOWER CTRL MOD. DIAG.
 802 LH BLOWN AIR SENSOR (RR ASSEMBLY)
 8020 CLIMATE CTRL MOTOR CTRL
 8021 CLIMATE CTRL MOTOR SPEED 1 CTRL
 8022 CLIMATE CTRL MOTOR SPEED 2 CTRL
 8023 CLIMATE CTRL MOTOR SPEED 3 CTRL
 8024 CLIMATE CTRL MOTOR SPEED 4 CTRL
 8025 RR LH CLIMATE CTRL PANEL SIGNAL
 8026 RR RH CLIMATE CTRL PANEL SIGNAL
 8027 STEPPER MOTOR BUS LINE
 + POWER SUPPLY
 8028 STEPPER MOTOR BUS LINE EARTH
 8029 PASS. COMPART. AIR TEMP. SENSOR OV
 803 RH BLOWN AIR SENSOR (RR ASSEMBLY)
 8030 PASSENGER COMPARTMENT AIR
 TEMP. INFO.
 8031 PASS. COMPARTMENT AIR TEMP.
 SENSOR POWER SUPPLY
 8032 AIR INTAKE MOTOR + POWER SUPPLY
 8033 AIR INTAKE MOTOR - POWER SUPPLY
 8034 AIR INTAKE MOTOR POTENTIOM. +
 POWER SUPPLY.
 8035 AIR INTAKE MOTOR POTENTIOM.
 - POWER SUPPLY.
 8036 AIR INTAKE MOTOR POTENTIOM. SIGNAL
 8037 COMPRESS. MAX. CAPACITY REQUEST
 8038 AIR INTAKE S. INFORMATION
 8039 RR ASSEMBLY EVAP. SENSOR
 804 STEPPER MOTOR BUS LINE
 8040 ZERO BLOWER SPEED
 8041 RR BLOWER
 8042 RR LH BLOWER SETPOINT
 8043 RR RH BLOWER SETPOINT
 8044 RR LH BLOWER DIAG.
 8045 RR CLIMATE CTRL INHIBIT CTRL
 8046 RR CLIMATE CTRL INHIBIT WARNING
 LIGHT INFO.
 8047 RR RH BLOWER DIAG.
 8048 RR CLIMATE CONTROL PANEL REF. VOLT.
 8049 CLIMATE CTRL CTRL
 805 ELECTRON. THERMOSTAT CTRL.
 8050 COMPRESSOR OPERATION INFO.
 8051 EVAPORATOR SENSOR CTRL
 8052 EVAPORATOR SENSOR INFO.
 8053 AC ON CTRL

8054 COMPRESSOR CUT-OFF CTRL
 8055 AC ADJUSTMENT CTRL (AC/TH)
 8056 EVAPOR. SENSOR ANALOGUE EARTH
 8057 AC/ON WARNING LIGHT OUTPUT
 8058 COMPRESSOR VALVE CTRL
 8059 DIESEL INFO.
 806 AIR INTAKE MOT. CTRL
 8060 COMPRESSOR CTRL
 8061 AIR CON COOL. TEMP. MODULE CTRL
 8062 RR RH CLIMATE CTRL PANEL REF. VOLT.
 8063 CLIMATE CONTROL CUT-OFF CTRL
 8064 COOLANT TEMPER. SENSOR CTRL
 8065 COOLANT TEMPERATURE INFO.
 8066 TS1 + CTRL
 8067 TS2 + CTRL
 8068 TS3 + CTRL
 8069 COMPRESSOR EARTH OUTPUT
 807 AIR INPUT MOTOR CTRL BIT 2
 8071 COMP. CUT-OFF RELAY POWER
 SUPPLY BY PRESSURE SWITCH
 8072 BLOWER SPEED NOT ZERO
 8073 LH ADDIT. BLOWER MODUL. CTRL
 8074 RH ADDIT. BLOWER MODUL. CTRL
 8075 COMPRESSOR CUT-OFF RELAY CTRL.
 8076 FORCE FAST SPEED CTRL (MFU)
 8077 FORCE LOW SPEED CTRL (MFU)
 8078 FORCE AVERAGE SPEED CTRL (MFU)
 8079 INDEPENDENT HEATER RELAY CTRL
 808 ADDITIONAL HEATING REQUEST
 8080 AIR CON COMPRESS. AUTHORIS.
 INPUT (BSI)
 8081 AIR CON COMPRESS. AUTHORISATION
 REQUEST OUTPUT, (BSI)
 8082 ADD. HEATER FUEL PUMP + CONTROL.
 8083 ADD. HEATER FUEL PUMP - CONTROL.
 8084 ADDITIONAL HEATING REL. CTRL
 8085 LH ADDIT. BLOWER SWITCH INFO.
 8086 RH ADDIT. BLOWER SWITCH INFO.
 8087 ADDITIONAL BLOWER SWITCH
 POWER SUPPLY
 8088 RH ADDIT. BLOWER SWITCH EARTH
 8089 INDEP. HEATING IGNITER CTRL
 809 LOW SPEED RELAY CONTROL
 8090 PRESSURE SAFETY INFO.
 8091 HIGH SPEED RELAY CTRL
 8092 AIR CON PRES. SENSOR POWER SUPPLY
 8093 AIR CON PRES. SENSOR SIGNAL
 8094 AIR CON PRES. SENSOR EARTH
 8095 ADDITIONAL HEATING 1 CTRL
 8096 ADDITIONAL HEATING 2 CTRL
 8097 ADD. HEATING IGNITER CTRL
 8098 ADDITIONAL HEATING 3 CTRL
 8099 IGNITER DIAGNOSTIC INFO.

HEATED COMPONENTS

810 HEATED RR SCREEN RELAY CTRL
 8100 HEAT. RR SCREEN WARNING LIGHT CTRL
 8101 HEAT. RR SCREEN WARNING LIGHT INFO.
 8102 HEATED REAR SCREEN EARTH

8103 RR CIGARETTE LIGHTER CTRL VIA BSI
 8104 HEATED RR SCREEN WARN. LIGHT OUTPUT
 8105 HEATED RR SCREEN RELAY OUTPUT
 8106 FAST DEMISTING BUTTON CONTROL
 8107 FAST DEMIST. INDICATOR OUTPUT
 8108 HEATED REAR SCREEN FILTER
 8111 HEATED REAR SCREEN CTRL
 8110 HEATED REAR SCREEN ACTVAT.INFO.
 8111 HEATED SCREEN 2 CTRL
 813 HEATED REAR VIEW MIRROR CTRL
 8130 DRIVER'S HEATED REAR VIEW
 MIRROR + CTRL
 8131 DRIVER'S HEATED REAR VIEW
 MIRROR - CTRL
 8132 PASS. HEATED REAR VIEW MIR. + CTRL
 8133 PASS. HEATED REAR VIEW MIR. - CTRL
 8140 HEATED WINDSCREEN OUTPUT
 8150 LH HEATED REAR VIEW MIR. + CTRL
 8151 LH HEATED REAR VIEW MIR. - CTRL
 8152 RH HEATED REAR VIEW MIR.+ CTRL
 8153 RH HEATED REAR VIEW MIR. - CTRL

CODED IMMOBILISER

8200 CODED IMMOB. OUTPUT INPUT INFO.
 8201 BSI LH UNLOCK. RELAY CTRL OUTPUT
 8202 GLOBAL UNLOCK. RELAY CTRL OUTPUT
 8203 SELECTIVE UNLOCK. RELAY CTRL OUTPUT
 8204 BSI RH UNLOCK. RELAY CTRL OUTPUT
 8205 SELECTIVE UNLOCK. RELAY CTRL INPUT
 8210 FR LH EXT. LF ANTEN. EARTH
 8211 FR RH EXT. LF ANTEN. EARTH
 8212 RR LH EXT. LF ANTEN. EARTH
 8213 RR RH EXT. LF ANTEN. EARTH
 8214 BOOT EXT. LF ANTEN. EARTH
 8215 FRONT INT. LF ANTEN. EARTH
 8216 PASS COMPT. INT. LF ANTEN. EARTH
 8217 BOOT INT. LF ANTEN. EARTH
 8218 EMERGENCY ANTENNA EARTH
 8223 RR LH DOOR HANDLE SWITCH
 8224 RR RH DOOR HANDLE SWITCH
 8225 FR LH DOOR HANDLE SWITCH
 8226 FR RH DOOR HANDLE SWITCH
 8227 FR LH DOOR CENTRAL LOCKING SWITCH
 8228 FR RH DOOR CENTRAL LOCK. SWITCH
 8229 BOOT OPENING SWITCH
 8230 BOOT CLOSING SWITCH
 8231 EMERGENCY ANTENNA EXCITATION
 8232 FR LH EXT. LF ANT. EXCITATION
 8233 FR RH EXT. LF ANT. EXCITATION
 8234 RR LH EXT. LF ANT. EXCITATION
 8235 RR RH EXT. LF ANT. EXCITATION
 8236 BOOT EXT. LF ANTEN. EXCITATION
 8237 FR INT. LF ANT. EXCITATION
 8238 PASS. COMPT. INT. LF ANTEN. EXCITATION
 8239 BOOT INT. LF ANTEN. EXCITATION
 8240 HF ANTENNA EXCITATION
 8241 HF ANTENNA EXCITATION1
 8245 LOCKS COMMON INPUT
 8246 FR INT. UNLOCKING REL. CTRL OUTPUT

8247 FR INT. UNLOCKING REL. CTRL INPUT
 8248 RR INT. UNLOCKING REL. CTRL OUTPUT
 8249 RR INT. UNLOCKING REL. CTRL INPUT
 8250 LOCKS COMMON OUTPUT
 8251 ANTI-THEFT POWER SUPPLY
 APPLICATION AUTHORISATION
 8265 CODED IMMOBIL. MOD. POWER SUPPLY
 8266 CODED IMMOBILISER DIAG. INFO.
 8267 CODED IMMOBILISER INPUT
 8268 CODED IMMOBILISER OUTPUT
 8269 CODED IMMOBILISER WAKE-UP INFO.
 8270 TRANSPONDER + CTRL
 8272 TRANSPONDER -CTRL
 8273 TRANSPONDER CLOCK SIGNAL
 8274 TRANSPONDER INFORMATION
 8275 TRANSPONDER COIL + SIGNAL
 8276 TRANSPONDER COIL - SIGNAL
 8280 STARTING INFO.
 8281 ENGINE START. SWITCH WARN. LIGHT (ADML)
 8282 JUMPER WIRE

RADIO TELEPHONE RADIO ANTENNA

8400 ELECTRIC ANTENNA CTRL
 8401 STEERING COLUMN CTRL 1
 8402 STEERING COLUMN CTRL 2
 8403 STEERING COLUMN CTRL 3
 8404 STEERING COLUMN CTRL 4
 8405 STEERING COLUMN CTRL 5
 8406 LH AUDIO CD CHANGER CTRL
 8407 RH AUDIO CD CHANGER CTRL
 8408 EARTH AUDIO CTRL
 8410 FR LH SPEAKER + CTRL
 8411 FR LH SPEAKER - CTRL
 8412 FR LH BOOMER + CTRL
 8413 FR LH BOOMER - CTRL
 8414 AMPLIF. FR LH OUTPUT + CTRL
 8415 AMPLIF. FR LH OUTPUT - CTRL
 8416 RR LH BOOMER + CTRL
 8417 RR LH BOOMER - CTRL
 8418 RR RH BOOMER + CTRL
 8419 RR RH BOOMER - CTRL
 8420 FR LH TWEETER + CTRL
 8421 FR LH TWEETER - CTRL
 8422 FR RH TWEETER + CTRL
 8423 FR RH TWEETER - CTRL
 8424 RR LH TWEETER + CTRL
 8425 RR LH TWEETER - CTRL
 8426 RR RH TWEETER + CTRL
 8427 RR RH TWEETER - CTRL
 8428 RADIO VOLUME +/-SEARCH +/- INFO.
 8429 RADIO MEM. + OR -MUTE MODE INFO.
 8430 FR RH SPEAKER + CTRL
 8431 FR RH SPEAKER - CTRL
 8432 FR RH BOOMER + CTRL
 8433 FR RH BOOMER - CTRL
 8434 AMPLIF. FR RH OUTPUT + CTRL
 8435 AMPLIF. FR RH OUTPUT - CTRL
 8436 JBL AMPLIF. POWER SUPPLY VIA BSI
 8437 RADIO AMPLIF. POWER SUPPLY

8440 RADIO TRANSMITTER FAN -
 8441 RADIO TRANSMITTER FAN +
 8445 RR LH LOW TONE SYST. SPEAK. 1+ CTRL
 8446 RR LH LOW TONE SYST. SPEAK. 1- CTRL
 8450 RR LH SPEAKER + CTRL
 8451 RR LH SPEAKER - CTRL
 8452 AMPLIF. RR LH OUTPUT + CTRL
 8453 AMPLIF. RR LH OUTPUT - CTRL
 8454 AMPLI. SWITCH + CTRL
 8455 RR RH LOW TONE SYST. SPEAK. 1+ CTRL
 8456 RR RH LOW TONE SYST. SPEAK. 1- CTRL
 8457 MUTE HIFI AMPLIFIER
 8458 RR LH LOW TONE SYST. SPEAK. 2+ CTRL
 8459 RR LH LOW TONE SYST. SPEAK. 2- CTRL
 8460 RR RH LOW TONE SYST. SPEAK. 2+ CTRL
 8461 RR RH LOW TONE SYST. SPEAK. 2- CTRL
 8462 AUDIO HANDS-FREE KIT +
 8463 AUDIO HANDS-FREE KIT -
 8464 POLICE RADIO TELEPHONE - INFO.
 8465 POLICE RADIO TELEPHONE + INFO.
 8466 POLICE MOBILE CHARGER - INFO.
 8467 POLICE MOBILE CHARGER + INFO.
 8468 POLICE RADIO - INFO.
 8469 POLICE RADIO + INFO.
 8470 RR RH SPEAKER + CTRL
 8471 RR RH SPEAKER - CTRL
 8472 AMPLIF. RR RH OUTPUT + CTRL
 8473 AMPLIF. RR RH OUTPUT - CTRL
 8479 TELEPHONE MUTE
 8480 DISPLAY INFO.
 8481 NAVIGATION INFO.
 8482 RADIO TELEPHONE + INFO.
 8483 RADIO TELEPHONE - INFO.
 8484 HIFI EMERGENCY CALL SPEAK. + CTRL
 8485 HIFI EMERGENCY CALL SPEAK. - CTRL
 8486 ANTENNA COAXIAL
 8487 RADIOTEL. MIKE SIGNAL + INPUT.
 8488 RADIOTEL. MIKE EARTH INPUT.
 8489 EXT. DIVERSITY FUNCTION SWITCH
 849 CD CHANGER +PERMANENT
 8490 CAN HIGH CD CHANGER
 8491 CAN LOW CD CHANGER
 8493 STEERING WHEEL CTRL LIGHTING +
 POWER SUPPLY
 8494 STEERING WHEEL CTRL EARTH
 8495 VAN DATA TRANSCEIVER RADIO TEL./
 CD CHANGER
 8496 VAN DATA B TRANSCEIVER RADIO
 TEL./CD CHANGER
 8497 CD CHANGER EARTH
 8498 VAN COMFORT + RADIO TEL.
 TRANSCEIVER/CD CHANGER
 8499 BATTERY + RADIO TEL.
 TRANSCEIVER/CD CHANGER

NAVIGATION, GUIDANCE

8500 GPS AERIAL + INFO.
 8501 GPS AERIAL - INFO.

8502 NAVIGATION DESIGNATOR 1 CTRL
 8503 NAVIGATION DESIGNATOR 2 CTRL
 8504 NAVIGATION DESIGNATOR 3 CTRL
 8505 NAVIGATION DESIGNATOR 4 CTRL
 8506 NAVIGATION DESIGNATOR 5 CTRL
 8507 NAVIGATION DESIGNATOR 6 CTRL
 8508 NAVIGATION DIAGNOSTIC INFORM.
 8509 NAVIGATION AUDIO - INPUT
 8510 NAVIGATION AUDIO - INPUT
 8511 RH NAVIGATION AUDIO + INPUT
 8512 RH NAVIGATION AUDIO - INPUT
 8513 LH NAVIGATION AUDIO + INPUT
 8514 LH NAVIGATION AUDIO - INPUT
 8515 SPEECH SYNTHESIS + INFO.
 8516 SPEECH SYNTHESIS - INFO.
 8517 RH SPEECH SYNTHESIS + INFO.
 8518 RH SPEECH SYNTHESIS - INFO.
 8519 LH SPEECH SYNTHESIS + INFO.
 8520 LH SPEECH SYNTHESIS - INFO.
 8521 MASTER TRAFFIC CTRL
 8522 MASTER TRAFFIC WARNING LIGHT CTRL
 8525 NAVIGATION DESIGNATOR 4 CTRL (JAP)

ANTI-THEFT ALARM

8601 OPEN BONNET INFO.
 8602 ANTI-THEFT ALARM WARNING LIGHT
 CONTROL
 8603 ANTI-THEFT ALARM CUT-OFF CTRL
 8604 ANTI-THEFT ALARM SIREN CONTROL
 8605 ANTI-THEFT ALARM SIREN INFO.
 8606 TRANSMITTER + SIGNAL
 8607 TRANSMITTER - SIGNAL
 8608 RECEIVER + SIGNAL
 8609 RECEIVER - SIGNAL
 8610 ANTI-THEFT ALARM TRIGGER SIGNAL
 8611 FR LH DOOR OPEN INFO.
 8612 FR RH DOOR OPEN INFO.
 8613 RR LH DOOR OPEN INFO.
 8614 RR RH DOOR OPEN INFO.
 8615 DIPPED HEADLIGHTS REL. CTRL
 8616 BOOT OPEN INFO.
 8617 ULTRASOUND MOD. LINK INPUT (BSI)
 8618 ULTRAS. MOD. POWER SUPPLY (BSI)
 8619 ANTI-THEFT ALARM VOLUME INHIBIT INFO.
 8620 ULTRASOUND MODULE CTRL
 8621 ANTI-THEFT ALARM BUZZER CONTROL
 8622 DOORS OPEN INFO.
 8623 SYSTEM STATUS
 8624 REMOTE ANTI-THEFT ALARM ON CTRL
 8625 REMOTE ANTI-THEFT ALARM CTRL
 8626 ANTI-THEFT ALARM EARTH
 8627 VOLUMETRIC INHIBIT CTRL
 8628 VOLUMETRIC INHIBIT WARNING LIGHT
 INFO.

BLIND

8700 BLIND CTRL
 8701 RAISE BLIND CTRL


8702 LOWER BLIND CTRL
8703 BLIND CENTRAL CLOSING
8704 BLIND + SUNROOF MULTIPLEXING

8801 CONTROL PANEL BUS LINE
8802 CONTROL PANEL BUS LINE EARTH
8803 BLOWN AIR SENSOR EARTH (RR)
8804 RR EVAPORATOR SENSOR EARTH

CLIMATE CONTROL, AIR CONDITIONING (CONTINUED)

8800 CONTROL PANEL BUS LINE + POWER
SUPPLY


Reading schematic diagrams (on paper and Infotec)

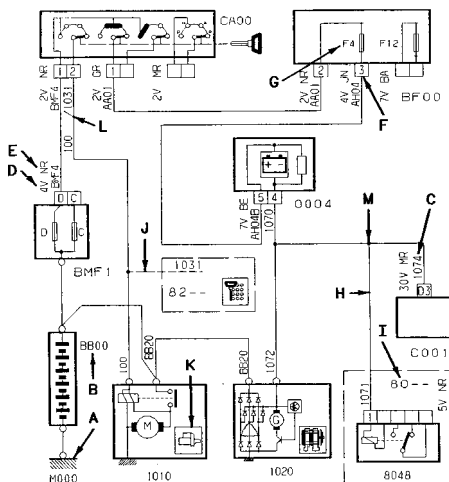

A : Earth connection symbol
B : Equipment number
C : Wire number
D : Connector housing number
E : Connector colour
F : Connector housing number
G : Fuse number
H : Represents signal to another function


I : Number of function concerned by the cross reference
J : Represents existing wire according to vehicle equipment
K : Figure representing the device
L : Married wires
M : Represents a splice

Reading wiring diagrams (on paper and Infotec)

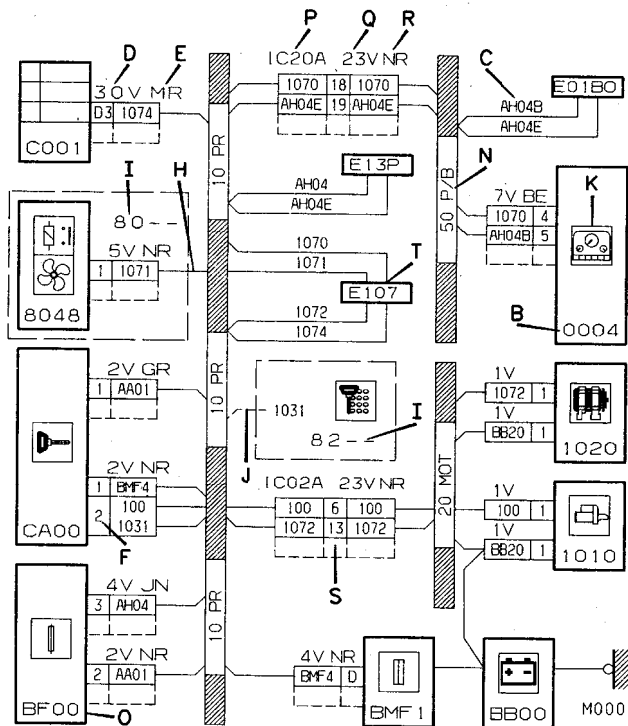

- N: Identification
 O: Representation of a fuse box
 P: Interconnection number
 Q: Number of interconnection tracks
 R: Interconnection colour
 S: Representation of a partial interconnection
 T: Represents a splice


Reading location diagrams (on paper and Infotec)

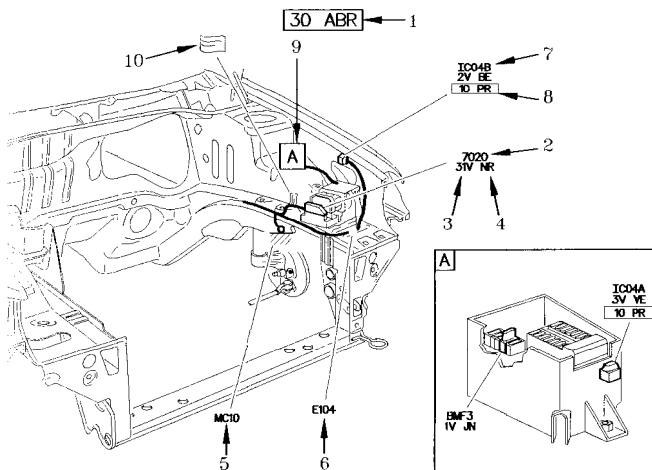

Key:


1. Identification of the wiring harness represented
2. Identification of the equipment
3. Number of connector tracks
4. Connector colour
5. Representation of an earth socket
6. Representation of a splice
7. Identification of an interconnection
8. Identification of the connected wiring harness
9. Link to a detail in the frame indicated
10. Location of the wiring harness label

Reading a flowchart diagram

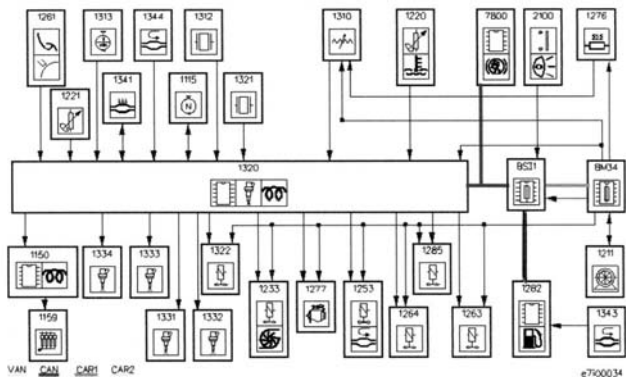

Reading the main detail and wiring diagram

10 PR

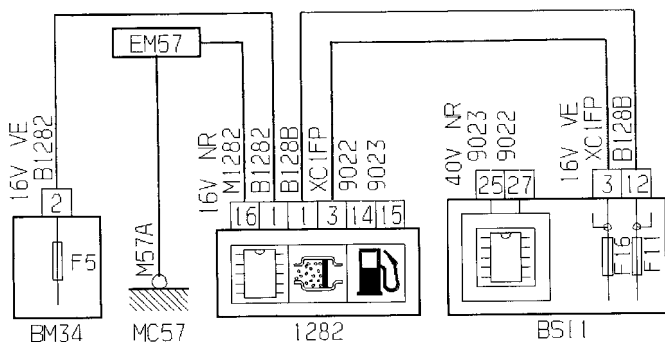


Reading a connector detail diagram

1282
16V NR / 10 PR


1	B1282	BM34
2	B1288	BS11
3	XC1FP	BS11
4	4200	4320
5	1286	1283
6		
7		
8	1283	IC26
9	1284	1283
10	1274	1343
11	1274	1343
12	4201	4320
13	1287	1283
14	9022	BS11
15	9023	BS11
16	M1282	EM57

Reading a splice detail diagram


EM 57
10 PR

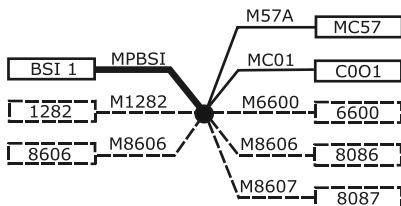


Reading the connector location diagram

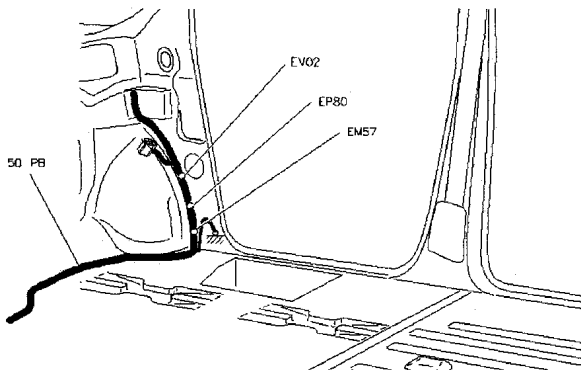

Multiplexing principles

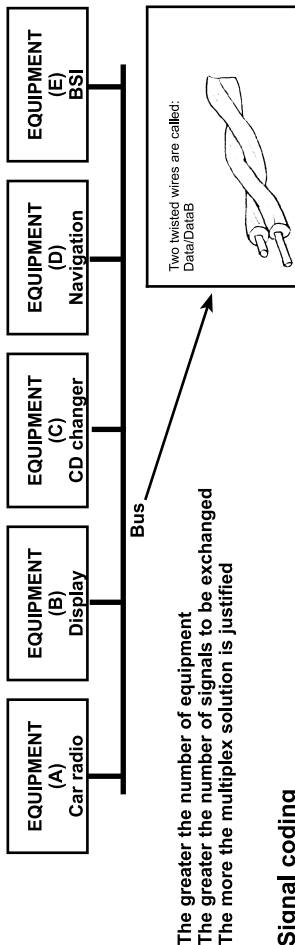

- 0: Dominant bit
- 1: Recessive bit
- 2: Start of frame
- 3: Identifier
- 4: Control field
- 5: Data to be transmitted
- 6: Control field
- 7: Acknowledgement
- 8: End of frame

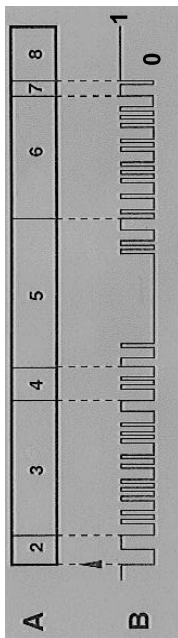

The communication protocol defines the structure of a frame