

LIST OF COMPONENTS:

NCTWD2H/3/1

AE00 : Electric immobiliser.

B001 : Mixed equipotential terminal 1.

B002 : Mixed equipotential terminal 2.

B003 : Mixed equipotential terminal 3.

B004 : Mixed equipotential terminal 4.

B005 : Mixed equipotential terminal 5.

B006 : Mixed equipotential terminal 6.

B007 : Mixed equipotential terminal 7.

B008 : Mixed equipotential terminal 8.

B009 : Mixed equipotential terminal 9.

B010 : Mixed equipotential terminal 10.

B011 : Mixed equipotential terminal 11.

B012 : Mixed equipotential terminal 12.

B013 : Mixed equipotential terminal 13.

B014 : Mixed equipotential terminal 14.

B015 : Mixed equipotential terminal 15.

B016 : Mixed equipotential terminal 16.

B017 : Mixed equipotential terminal 17.

B018 : Mixed equipotential terminal 18.

B019 : Mixed equipotential terminal 19.

B020 : Mixed equipotential terminal 20.

B021 : Mixed equipotential terminal 21.

B022 : Mixed equipotential terminal 22.

B023 : Mixed equipotential terminal 23.

B024 : Mixed equipotential terminal 24.

BB00 : Battery.

BB01 : Rear battery assembly.

BB02 : Front lower battery assembly.

BB03 : Front upper battery assembly.

BB04 : Central battery assembly.

BB05 : Starter battery.

BB06 : Service battery.

BB07 : Alternator-starter battery.

BB08 : Traction battery (hybrid drive chain).

BB10 : Supply control unit.

BB12 : Battery + connection terminal.

BCM0 : Multifunction switch block.

BCM1 : LH multifunction switch block.

BCM2 : RH multifunction switch block.

BCM3 : LH multifunction switch block.

BCM4 : RH multifunction switch block.

BCM5 : Multifunction switch block under steering wheel.

BCM9 : RH multifunction switch block (NG4).

BCP3 : Relay 3 protection switch unit.

BF00 : Passenger compartment fuse box.

BF01 : Engine compartment fuse box.

BF02 : Boot fusebox.

BFDB : Fuse box from battery.

BFH1 : Cabin 1 fusebox 5.

BFH2 : Cabin 2 fusebox 5.

BFH3 : Passenger compartment fuse/relay box 1.

BFH4 : Passenger compartment fuse/relay box 2.

BFH5 : Cabin fusebox 5.

BFH6 : Passenger compartment fuse/relay box 3.
BFRM : Engine fuse and relay box.
BGP0 : Central management unit (police).
BH12 : Cabin fusebox 12.
BH28 : Cabin fusebox 28.
BM27 : Engine slave unit 27 fuse(s).
BM34 : Engine slave unit 34 fuse(s).
BMF1 : Maxi fuse unit.
BMF2 : Maxi fuse unit.
BMF3 : Maxi fuse unit.
BMF4 : Maxi fuse unit.
BPCB : Battery cable protection housing.
BSC1 : Boot relay unit.
BSG1 : Generic wiring housing 1.
BSG2 : Generic wiring housing 2.
BSG3 : Generic wiring housing 3.
BSG4 : Generic wiring housing 4.
BSI1 : Built-in systems interface.
BSR1 : Trailer relay unit.
BTC1 : Bodywork converter unit.
C001 : Diagnostic connector.
C002 : Connector for towing cables.
C004 : Instrument panel test connector.
C103 : Engine running information test connector.
C104 : Emergency stop switch fuse-carrier connector.
C105 : General circuit-cutter optional connector.
C109 : Ignition test connector.
C110 : Ignition anti-interference connector.
C111 : Idling ignition adjustment connector.
C120 : Injection test connector.
C125 : Antipollution adjustment connector.
C126 : Supply pump fuse carrier connector.
C127 : EGR test connector.
C128 : Carburettor heater fuse carrier connector.
C130 : Injection-ignition test connector.
C131 : Vehicle/engine interconnection connector.
C132 : Automatic gearbox/vehicle interco connector.
C133 : Injection-ignition ECU fuse carrier connector.
C136 : Heated flange fuse-carrier connector.
C137 : Oxygen sensor heater fuse carrier connector.
C140 : TDC connector.
C145 : System development connector.
C150 : Cooling fan operation test connector.
C163 : Automatic gearbox test connector.
C170 : Electronic management test connector.
C180 : Gas diagnosis connector 1.
C181 : Gas diagnosis connector 2.
C182 : Gas rich switch.
C183 : Gas weak switch.
C200 : Caravan socket connector.
C231 : Driving school dual control connector.
C260 : Front foglamps fuse carrier connector.
C310 : Caravan lighting battery positive supply connector.
C311 : Stoplamp switch link connector.
C464 : Tachograph supply fuse carrier connector.
C623 : Locking test connector.
C630 : Seat memorisation test connector.

C654 : Pyrotechnic seat belt test connector.
C656 : Airbag test connector.
C657 : Airbag + pretensioner test connector.
C664 : Ride height circuit bleeding connector.
C680 : Sun roof link connector.
C686 : Electric hood test connector.
C700 : ABS test connector.
C701 : ABS power fuse carrier connector.
C705 : Traction control test connector.
C710 : Variable power steering test connector.
C721 : Multifunction screen test connector.
C722 : Navigation pre-equipment connector.
C771 : Suspension test connector.
C800 : Air conditioning test connector.
C820 : Coded immobiliser test connector.
C840 : Radio permanent + supply connector.
C860 : Antitheft alarm test connector.
C861 : Antitheft alarm supply connector.
C863 : Protection central test connector.
C1030 : Engine running information test connector.
C1042 : General circuit-cutter optional connector.
C1100 : Ignition test connector.
C1105 : Ignition anti-interference connector.
C1110 : Idling ignition adjustment connector.
C1200 : Injection test connector.
C1250 : Antipollution adjustment connector.
C1260 : Supply pump fuse carrier connector.
C1265 : Carburettor heater fuse carrier connector.
C1270 : EGR test connector.
C1300 : Injection-ignition test connector.
C1310 : Injection-ignition ECU fuse carrier connector.
C1311 : Vehicle/engine interconnection connector.
C1360 : Oxygen sensor heater fuse carrier connector.
C1400 : TDC connector.
C1450 : System development connector.
C1500 : Cooling fan operation test connector.
C1630 : Automatic gearbox test connector.
C1700 : Electronic management test connector.
C2310 : Driving school dual control connector.
C2600 : Front foglamps fuse carrier connector.
C4640 : Tachograph supply fuse carrier connector.
C6235 : Locking test connector.
C6301 : Seat memorisation test connector.
C6540 : Pyrotechnic seat belt test connector.
C6560 : Airbag test connector.
C6570 : Airbag + pretensioner test connector.
C6640 : Ride height circuit bleeding connector.
C6860 : Electric hood test connector.
C7000 : ABS test connector.
C7001 : ABS power fuse carrier connector.
C7050 : Traction control test connector.
C7100 : Variable power steering test connector.
C7215 : Multifunction screen test connector.
C7710 : Suspension test connector.
C8000 : Air conditioning test connector.
C8201 : Coded immobiliser test connector.
C8400 : Radio permanent + supply connector.

C8600 : Antitheft alarm test connector.
C8630 : Protection central test connector.
CA00 : Ignition switch.
CBE1 : Electronic handbook (police).
CCS1 : (police) signalling central control assembly.
CJ01 : Junction connector 1.
CJ02 : Junction connector 2.
CP00 : Rear 12 volt socket.
CP01 : Forward 12 V socket.
CP02 : Rear LH 12V socket on central console.
CP03 : Rear RH 12V socket on central console.
CP04 : Rear central 12 way socket.
CP05 : 12V boot socket.
CP06 : Dashboard 12 V socket.
CPC0 : LH sliding door switch assembly.
CPC1 : RH sliding door switch assembly.
CT00 : Steering wheel rotary connector.
CV00 : Switching module below steering wheel (COM 2000).
DRA0 : Shielded earth.
DRA1 : Drain 1.
ECV0 : All controls at the steering wheel.
IC02A : Main harness interconnection with engine harness (A).
IC02B : Main harness interconnection with engine harness (B).
IC02C : Main harness interconnection with engine harness (C).
IC02D : Main harness interconnection with engine harness (D).
MFAV : Front fuse grid.
MFM1 : Engine compartment mega-fuse 1.
MF00 : Service battery maxi-fuse.
MF01 : Alternator maxi-fuse.
MF02 : Starter battery maxi-fuse.
MF175 : Engine compartment mega-fuse 175A.
PC01 : Rear RH current socket.
PC02 : Rear LH current socket.
PC03 : Centre console 220 V supply socket.
PFC1 : Boot fuse holder 1.
PFPR : Trailer presence supply fuse holder.
PR01 : Cabin relay support plate.
PR02 : Engine relay board.
PRF1 : Relay support - engine compartment fuse 1.
PRF2 : Relay support - engine compartment fuse 2.
PS00 : Connector board.
PSF0 : Passenger compartment fusebox panel.
PSF1 : Engine compartment fusebox panel.
PSF2 : Boot fusebox panel.
PT00 : Transformer socket.
RP00 : BSI power relay.
VMF1 : Fixed centred controls steering wheel.
V0004 : Stop alert warning lamp.
V100 : Load warning lamp.
V101 : Traction batteries correct charge warning lamp.
V102 : Traction batteries discharged warning lamp.
V110 : Ignition test warning lamp.
V115 : Pre-heat warning lamp.
V117 : Converter fault warning lamp 12 V.
V120 : Injection test warning lamp.
V123 : Pump cut-off warning lamp.
V130 : Engine diagnosis warning lamp.

V170 : Temporary fault warning lamp.
V171 : Forward gear warning lamp.
V172 : Reverse drive warning lamp.
V173 : Insulation fault warning lamp.
V180 : Gas supply warning lamp.
V200 : Rear fog lamp warning lamp.
V201 : Front foglamps warning lamp.
V230 : Danger signal warning lamp.
V231 : LH and RH direction indicator warning lamp.
V232 : LH direction indicator warning lamp.
V233 : RH direction indicator warning lamp.
V260 : Sidelamps warning lamp.
V261 : Dipped beam warning lamp.
V262 : Main beam warning lamp.
V266 : Front foglamps warning lamp.
V401 : Coolant low level warning lamp.
V402 : Maximum engine coolant temperature warning lamp.
V404 : Screen wash fluid low level warning lamp.
V405 : Water in diesel fuel warning lamp.
V411 : Engine oil pressure warning lamp.
V412 : Engine oil level warning lamp.
V413 : Maximum engine oil temperature warning lamp.
V417 : Battery electrolyte level warning lamp.
V420 : Starter motor warning lamp.
V425 : Air filter clogged warning lamp.
V430 : Low fuel level warning lamp.
V432 : Tank cap open warning lamp.
V440 : Handbrake warning lamp.
V441 : Brake fluid level warning lamp.
V442 : Handbrake/brake fluid level warning lamp.
V443 : Brake pad wear warning lamp.
V444 : Blown bulbs detection warning lamp.
V460 : Gear lever position warning lamp.
V461 : Maximum gearbox oil temperature warning lamp.
V470 : Door open warning lamp.
V471 : Front doors and 2 side door(s) warning lamp.
V472 : Front doors and 1 side door(s) warning lamp.
V473 : Seat belt unfastened warning lamp.
V480 : Catalytic converter overheating warning lamp.
V625 : Deadlocking warning lamp.
V656 : Front airbag warning lamp.
V657 : Side airbag warning lamp.
V658 : Passenger's airbag deactivation warning lamp.
V664 : Ride height correction fluid low level warning lamp.
V670 : Diff lock test warning lamp.
V679 : Gear reduction selector warning lamp.
V700 : ABS diagnosis warning lamp.
V701 : ABS activated warning lamp.
V705 : Traction control diagnosis warning lamp.
V706 : Traction control operation warning lamp.
V707 : Brake pedal position warning lamp (starting authorisation).
V731 : Cruise control warning lamp.
V770 : Suspension diagnosis warning lamp.
V780 : ESP diagnosis warning lamp.
V811 : Heated rear screen warning lamp.
V818 : Additional heating fuel level low warning lamp.
V822 : Transponder warning lamp.

V823 : LH warning lamps display.
V824 : Right-hand warning lamps display.
V1000 : Load warning lamp.
V1001 : Traction batteries correct charge warning lamp.
V1002 : Traction batteries discharged warning lamp.
V1017 : Converter fault warning lamp 12V.
V1100 : Ignition test warning lamp.
V1150 : Pre-heat warning lamp.
V1200 : Injection test warning lamp.
V1203 : Pump cut-off warning lamp.
V1300 : Engine diagnosis warning lamp.
V1700 : Temporary fault warning lamp.
V1701 : Forward gear warning lamp.
V1702 : Reverse drive warning lamp.
V1703 : Insulation fault warning lamp.
V1800 : Gas supply warning lamp.
V2000 : Rear fog lamp warning lamp.
V2010 : Front foglamps warning lamp.
V2300 : Danger signal warning lamp.
V2310 : LH and RH direction indicator warning lamp.
V2320 : LH direction indicator warning lamp.
V2330 : RH direction indicator warning lamp.
V2600 : Sidelamps warning lamp.
V2610 : Dipped beam warning lamp.
V2620 : Main beam warning lamp.
V2660 : Front foglamps warning lamp.
V4010 : Coolant low level warning lamp.
V4017 : Battery electrolyte level warning lamp.
V4020 : Maximum engine coolant temperature warning lamp.
V4040 : Screen wash fluid low level warning lamp.
V4050 : Water in diesel fuel warning lamp.
V4110 : Engine oil pressure warning lamp.
V4120 : Engine oil level warning lamp.
V4130 : Maximum engine oil temperature warning lamp.
V4200 : Starter motor warning lamp.
V4205 : Air filter clogged warning lamp.
V4300 : Low fuel level warning lamp.
V4320 : Tank cap open warning lamp.
V4400 : Handbrake warning lamp.
V4410 : Brake fluid level warning lamp.
V4420 : Handbrake/brake fluid level warning lamp.
V4430 : Brake pad wear warning lamp.
V4440 : Blown bulbs detection warning lamp.
V4600 : Gear lever position warning lamp.
V4610 : Maximum gearbox oil temperature warning lamp.
V4700 : Door open warning lamp.
V4701 : Front doors and 2 side door(s) warning lamp.
V4702 : Front doors and 1 side door(s) warning lamp.
V4730 : Seat belt unfastened warning lamp.
V4800 : Catalytic converter overheating warning lamp.
V6235 : Deadlocking warning lamp.
V6560 : Front airbag warning lamp.
V6561 : Side airbag warning lamp.
V6562 : Passenger's airbag deactivation warning lamp.
V6640 : Ride height correction fluid low level warning lamp.
V6700 : Diff lock test warning lamp.
V6709 : Gear reduction selector warning lamp.

V7000 : ABS diagnosis warning lamp.
V7001 : ABS activated warning lamp.
V7050 : Traction control diagnosis warning lamp.
V7060 : Traction control operation warning lamp.
V7310 : Cruise control warning lamp.
V7311 : Brake pedal position warning lamp (starting authorisation).
V7700 : Suspension diagnosis warning lamp.
V7800 : ESP diagnosis warning lamp.
V8018 : Additional heating fuel level low warning lamp.
V8110 : Heated rear screen warning lamp.
V8220 : Transponder warning lamp.
0002 : Lighting and signalling switch.
0004 : Control panel.
0005 : Screen wiper switch.
1000 : Starting safety switch.
1001 : Cold starting relay.
1002 : Cold start pump.
1003 : Cold start electrovalve.
1005 : Starter inhibitor relay.
1006 : Engine locking actuator.
1007 : Body tilt sensor.
1010 : Starter.
1011 : Local voltage maintaining system.
1012 : Centralised voltage maintaining system.
1015 : Stop start check ECU.
1020 : Alternator.
1021 : Reversible alternator.
1022 : Alternator filtering condenser.
1025 : Dual battery housing.
1026 : Energy accumulator.
1028 : Electric networks supply protection control unit.
1029 : Network isolation control unit.
1030 : Engine-on information relay.
1031 : Battery charge status unit.
1032 : Battery cable protection housing.
1033 : Fuse box from battery.
1034 : Front fuse grid.
1035 : Rear electrical supplies protection and management unit.
1040 : General maintenance relay.
1041 : Emergency stop switch.
1042 : General relay.
1043 : Rearming button.
1044 : Diodes housing.
1045 : Auxiliary rearming button.
1050 : Starter heater element control electrovalve.
1086 : Alarm starter cut-off relay.
1087 : Starting electrovalve relay.
1088 : Trailer refrigeration supply relay.
1089 : 12 V socket supply relay.
1100 : Ignition device.
1101 : Engine coolant thermistor for advance module.
1102 : Advance module.
1103 : Advance correction solenoid valve resistor.
1104 : Advance correction electrovalve.
1105 : Ignition module.
1106 : Valve lift motor (VVT).
1107 : Variable valve position sensor.

1108 : Valve control ECU.
1109 : Cylinders deactivation electrovalve.
1110 : Ignition distributor.
1111 : Valve lift motor relay (VVT).
1115 : Cylinder reference sensor.
1116 : Cylinder reference sensor 1.
1117 : Cylinder reference sensor 2.
1118 : Inlet cylinder reference sensor.
1119 : Exhaust cylinder reference sensor.
1120 : Knock sensor.
1121 : Knock sensor 1.
1122 : Knock sensor 2.
1123 : Variable valve lift.
1125 : Accelerator pedal switch.
1127 : Ignition supply relay.
1130 : Ignition control unit.
1131 : Ignition coil cylinder 1.
1132 : Ignition coil cylinder 2.
1133 : Ignition coil cylinder 3.
1134 : Ignition coil cylinder 4.
1135 : Ignition coil.
1136 : Ignition coil capacitor.
1137 : Ignition coil cylinder 5.
1138 : Ignition coil cylinder 6.
1140 : Antipollution module for carburettor.
1141 : Coolant heater plugs 1 supply relay.
1142 : Coolant heater plugs 2 supply relay.
1143 : Coolant heater plugs 3 supply relay.
1145 : Throttle opening electrovalve.
1146 : Coolant heater plugs 1-2 supply relay.
1147 : Coolant heater plugs 3-4 supply relay.
1148 : Engine water heater relay 1.
1149 : Engine water heater relay 2.
1150 : Heater unit.
1151 : Relay for heated fuel filter.
1155 : Preheater relay.
1156 : Post-heat relay.
1157 : Post-heat thermal switch.
1158 : Pre-postheating control unit.
1159 : Supply strip for preheater plugs.
1160 : Preheater plugs.
1161 : Cylinder preheater plugs 1.
1162 : Cylinder preheater plugs 2.
1163 : Cylinder preheater plugs 3.
1164 : Cylinder preheater plugs 4.
1190 : Coolant circuit heater.
1191 : Ignition coil + cylinder reference.
1192 : Eccentric shaft actuator.
12A0 : Variable geometry turbocharger.
12A1 : Assembled fuel additive reservoirs.
1200 : Fuel pump relay.
1201 : Injection pump relay.
1202 : Tachymetric relay.
1203 : Inertia switch.
1204 : Impact safety relay.
1205 : Fuel pump fuse.
1206 : Transfer pump control relay.

1207 : Transfer pump.
1208 : Diesel injection pump.
1209 : Low pressure pump.
1210 : Fuel pump.
1211 : Fuel gauge pump.
1212 : Reservoir air electrovalve.
1213 : Air pump relay.
1214 : Econoscope.
1215 : Canister purge electrovalve.
1216 : Canister simulation resistance.
1217 : Canister purge cut-off electrovalve.
1218 : Ignition advance cut-off solenoid.
1219 : Automatic gearbox injection butterfly potentiometer.
1220 : Engine coolant temperature sensor.
1221 : Diesel fuel temperature sensor.
1222 : Accelerometer.
1223 : Injection air electrovalve.
1224 : Absorber closing electrovalve.
1225 : Idle regulation stepper motor.
1226 : Idle regulation motor and idle switch.
1227 : Fuel tank pressure sensor.
1228 : Idle regulation motor and idle switch + Hall effect sensor.
1229 : Variable geometry turbo regulator electrovalve.
1230 : Supplementary air device.
1231 : Automatic gearbox idle maintenance unit.
1232 : Idle maintenance electrovalve.
1233 : Turbocharger pressure regulation solenoid valve.
1234 : Carburettor damper electrovalve.
1235 : Carburettor breather solenoid valve.
1236 : Deceleration cut-off electrovalve.
1237 : Air blower electrovalve.
1238 : AFP electrovalve.
1239 : Idling regulation solenoid valve.
1240 : Induction air temperature sensor.
1241 : Pulsair pump.
1242 : Pulsair relay.
1243 : Variable timing electrovalve 1.
1244 : EGR proportional electrovalve.
1245 : Altimetric switch.
1246 : EGR function supply relay.
1247 : EGR engine coolant thermal switch.
1248 : EGR calibration resistance.
1249 : Load lever potentiometer (EGR).
1250 : Exhaust gas recycling (EGR) ECU.
1251 : EGR vacuum pump.
1252 : Diesel advance corrector relay.
1253 : All or nothing solenoid valve (EGR).
1254 : Load lever switch (EGR).
1255 : Fuel cut-off solenoid valve.
1256 : Advance electrovalve (diesel).
1257 : Flow electrovalve - (diesel).
1258 : Flow electrovalve + (diesel).
1259 : Flow electrovalve + - (diesel).
1260 : Injector needle lift sensor.
1261 : Accelerator pedal position sensor.
1262 : Motorised butterfly.
1263 : EGR electrovalve + butterfly.

1264 : Swirl electrovalve.
1265 : Carburettor heater thermal switch.
1266 : Carburettor heater relay.
1267 : Diesel throttle electrovalve (air inlet).
1268 : Variable timing electrovalve 2.
1269 : Carburettor heating resistor relay.
1270 : Carburettor or throttle housing heater resistor.
1271 : Damper electrovalve.
1272 : Damper assembly.
1273 : Oil breather re-heat resistor 1.
1274 : Oil breather re-heat resistor 2.
1275 : Carburettor.
1276 : Diesel heater.
1277 : Electrovalve for deactivation of 3 pistons of the diesel high pressure pump.
1278 : Delivery flow sensor.
1279 : Petrol high pressure regulation electrovalve.
1280 : Long AFP electrovalve.
1281 : Short AFP electrovalve.
1282 : Fuel additive ECU.
1283 : Fuel additive pump.
1284 : Fuel additive injector.
1285 : Inlet air heater electrovalve.
1286 : Diesel heater relay.
1287 : Diesel heating relay.
1288 : Diesel heater thermal switch.
1289 : Inlet heated coolant electrovalve.
1290 : Injection potentiometer.
1291 : Venting coolant electrovalve.
1292 : Relay for heated fuel filter.
1293 : Proportional coolant electrovalve integrated in coolant outlet housing.
1294 : Vacuum pump.
1295 : Compressor discharge solenoid valve.
1296 : Variable air inlet electrovalve.
1297 : Electric EGR electrovalve.
1298 : Air negative pressure proportional electrovalve.
1299 : Bypass throttle electrovalve.
13A0 : Inlet air metering device-heater.
13A1 : RAS metering device copy sensor.
13A2 : EGR BYPASS copy sensor.
13A3 : Inlet air temperature and pressure sensor.
13A4 : Engine management single relay 2.
13A5 : RAS BYPASS.
13A6 : Motorised throttle relay.
13A7 : Exhaust variable timing solenoid valve.
13A8 : Inlet variable timing solenoid valve.
13B1 : RAS BYPASS mixer position sensor.
13B2 : RAS BYPASS solenoid valve.
13B3 : EGR temperature sensor.
13B4 : Turbo temperature sensor.
1300 : Coolant emulsion sensor.
1301 : Automatic transmission information relay (injection).
1302 : Injection and supply relay.
1303 : Injection and ignition supply relay.
1304 : Engine management multi-function double relay.
1305 : Richness potentiometer.
1306 : Automatic gearbox relay shunt.
1307 : Power multifunction double relay.

1308 : Oil pressure sensor.
1309 : Turbocharger air thermistor.
1310 : Air flowmeter.
1311 : Turbo overpressure sensor.
1312 : Inlet air pressure sensor.
1313 : Engine speed sensor.
1314 : Altimetric sensor.
1315 : Injection resistance.
1316 : Throttle position sensor.
1317 : Diesel pump lever position sensor.
1318 : Butterfly switches.
1319 : Injection coding resistance.
1320 : Engine management ECU.
1321 : Diesel high pressure sensor.
1322 : Diesel high pressure regulator..
1323 : Exhaust gas high temperature sensor.
1324 : Turbo air heating position copy + electric metering pump.
1325 : Petrol high pressure sensor.
1326 : Injection ECU supply fuse.
1327 : Cam position sensor (diesel pump).
1328 : Rotor position sensor (diesel pump).
1329 : Slide position sensor (diesel pump).
1330 : Injector.
1331 : Injector cylinder 1.
1332 : Injector cylinder 2.
1333 : Injector cylinder 3.
1334 : Injector cylinder 4.
1335 : Injector cylinder 5.
1336 : Injector cylinder 6.
1337 : Injector cylinder 7.
1338 : Injector cylinder 8.
1339 : Injector cylinder 9.
1340 : Injector cylinder 10.
1341 : Particle filter differential pressure sensor.
1342 : Engine multifunction ECU.
1343 : Downstream exhaust gas high temperature sensor.
1344 : Upstream exhaust gas high temperature sensor.
1345 : Oxygen sensor heater relay.
1346 : Air flowmeter A.
1347 : Air flowmeter B.
1348 : Oxygen sensor heater fuse.
1349 : Contents temperature sensor.
1350 : Upstream oxygen sensor.
1351 : Downstream oxygen sensor: not defined.
1352 : Front downstream oxygen sensor.
1353 : Front upstream oxygen sensor.
1354 : Rear downstream oxygen sensor.
1355 : Rear upstream oxygen sensor.
1356 : Braking vacuum sensor.
1357 : Proportional oxygen sensor.
1358 : Cat. conv. downstream exhaust gas high temperature sensor A.
1359 : Cat. conv. upstream exhaust gas high temperature sensor A.
1360 : Coded immobiliser gateway housing - software locking.
1361 : Turbocharged air heater electrovalve 1.
1362 : Turbocharged air heater electrovalve 2.
1363 : Cat. conv. downstream exhaust gas high temperature sensor B.
1364 : Cat. conv. upstream exhaust gas high temperature sensor B.

1365 : Heated flange relay.
1366 : Heated flange.
1367 : Electric control turbo and local check A.
1368 : Electric control turbo and local check B.
1369 : Diesel fuel volume regulator.
1370 : Engine management single relay.
1371 : Test engine control multifunction double relay.
1372 : Inlet air heater position copy sensor.
1373 : Turbo air heater position copy sensor.
1374 : Turbo position copy sensor.
1375 : Vertical rod electrovalve 1.
1376 : Turbocharging pressure sensor.
1377 : Electric EGR electrovalve A.
1378 : Electric EGR electrovalve B.
1379 : Vertical rod electrovalve 2.
1380 : Controlled thermostat (S2RE).
1381 : Petrol injector supply cut-off relay.
1382 : Dual mode exhaust electrovalve.
1383 : Upstream exhaust gas high temperature sensor with particle filter.
1384 : Downstream exhaust gas high temperature sensor with pre-catalyser A.
1385 : Upstream exhaust gas high temperature sensor with pre-catalyser A.
1386 : Downstream exhaust gas high temperature sensor with pre-catalyser B.
1387 : Upstream exhaust gas high temperature sensor with pre-catalyser B.
1388 : Oil breather re-heat resistor 3.
1389 : EGR motorised butterfly housing.
1390 : Inlet air pressure sensor 2.
1391 : Air flowmeter 2.
1392 : Proportional electrovalve WG1.
1393 : Turbo proportional electrovalve 2.
1394 : EGR bypass throttle electrovalve.
1395 : Inlet air temperature sensor 2.
1396 : Gas recycling electrovalve 2.
1397 : Compressor electrovalve 2.
1398 : Inlet vanos electrovalve.
1399 : Exhaust vanos electrovalve.
1400 : Top dead centre sensor.
1401 : Brake servo pressure sensor.
1405 : Neutral sensor.
1410 : Exhaust temperature recovery electrovalve.
1411 : Exhaust temperature recovery pump.
1412 : Exhaust temperature recovery thermoswitch.
1413 : Coolant temperature sensor for recuperation of exhaust temperature.
1414 : Engine speed sensor housing.
1500 : Fan relay.
1501 : Cooling fan fuse.
1502 : Left hand fan supply relay.
1503 : Right hand fan supply relay.
1504 : Left and right hand fan series supply relay.
1505 : Cooling fan thermal switch.
1506 : Cooling fan 2-speed resistance.
1507 : Cooling fan unit electronic control thermistor.
1508 : Low speed fan supply relay.
1509 : High speed fan supply relay.
1510 : Cooling fan.
1511 : Right-hand fan.
1512 : Left-hand fan.
1513 : Variable speed cooling fan assembly.

1514 : Mid speed cooling fan supply relay.
1515 : LH anti-interference filter.
1516 : RH anti-interference filter.
1517 : Cooling fan unit control flap.
1518 : Cooling fan 3-speed resistance.
1519 : Cooling fan 2-speed 2 resistance.
1520 : Engine post-cooling thermal switch.
1521 : Variable speed cooling fan electronic unit.
1522 : 2-speed cooling fan ECU.
1523 : Variable speed cooling fan assembly 2.
1524 : Supply cut-off relay.
1525 : Engine post-cooling relay.
1526 : Engine post-cooling timer.
1527 : Supply cut-off relay 2.
1528 : Single-speed cooling fan ECU.
1529 : Fan assembly electric control unit.
1530 : Engine post-cooling shunt.
1531 : Turbo-alternator additional fan.
1532 : Fan assembly speed switching relay.
1533 : Additional fan assembly speed switching relay.
1550 : Turbo cooling water pump.
1551 : Turbo cooling water pump fuse.
1552 : Declutchable coolant pump.
1553 : Engine coolant pump disengagement actuator.
1555 : Turbo cooling water pump control relay.
1556 : Oil pressure regulation electrovalve.
1600 : Selector lever position switch.
1601 : One-touch control lever sensor.
1602 : One-touch control switch.
1603 : Automatic gearbox control assembly.
1604 : Clutch master cylinder position sensor.
1606 : Parking position buzzer supply relay.
1607 : Grille + selection lighting supply relay.
1610 : Exchanger flow control electrovalve.
1611 : Clutch pedal angle position sensor.
1612 : Diagnostic neutral switch.
1613 : Automatic gearbox engine speed sensor.
1615 : Automatic gearbox pressure sensor.
1620 : Vehicle speed sensor.
1621 : Automatic gearbox vehicle speed sensor.
1622 : Automatic gearbox output speed sensor.
1623 : Hydraulic slave cylinder sensor.
1624 : Gear change sensor.
1625 : Vehicle speed interface module.
1626 : Control lever.
1627 : Clutch power module.
1628 : Gear change power module.
1629 : Selection power module.
1630 : Automatic transmission control unit.
1631 : Torque reduction electrovalve.
1632 : Pedal position switch.
1633 : Selection sensor.
1634 : Clutch sensor.
1635 : Automatic gearbox electrohydraulic block.
1636 : Automatic gearbox position sensor.
1637 : Automatic gearbox kickdown switch.
1638 : Auto transmission lever blocking actuator.

1639 : Accelerator pedal switch, not depressed.
1640 : Automatic transmission programme selector.
1641 : Piloted manual gearbox programme selector.
1642 : Gear lever blocking actuator control relay.
1643 : Key locking actuator control relay.
1644 : Key locking actuator.
1645 : Automatic gearbox electronic control.
1646 : Automatic gearbox electrovalve block.
1647 : Clutch electrovalve.
1650 : Controlled electronic gearbox ECU.
1651 : Automatic gearbox electrical control ECU.
1655 : Controlled electronic gearbox power relay.
1660 : Piloted manual gearbox ECU.
1661 : Gear selector.
1662 : Piloted manual gearbox input speed sensor.
1663 : Gear change actuator.
1664 : Selection actuator.
1665 : Clutch actuator.
1666 : Gear control at the steering wheel.
1667 : Gear selector lighting.
1668 : Hydraulic clutch bearing sensor.
1669 : Piloted gearbox electropump assembly.
1670 : Piloted manual gearbox automatic mode switch.
1671 : Piloted gearbox engagement position sensor.
1672 : Piloted gearbox selection position sensor.
1700 : Electric management control unit.
1701 : Lower front battery temperature and voltage module.
1702 : Upper front battery temperature and voltage module.
1703 : Rear battery temperature and voltage module.
1704 : Relay housing.
1705 : Electronic tool kit.
1706 : Mains supply filter.
1707 : Traction battery management ECU.
1708 : Electrical converter electronic control unit.
1709 : Electric machine.
1710 : Hybrid drive chain monitor ECU.
1711 : Electric coolant pump (hybrid drive chain).
1712 : Heater matrix water pump (hybrid drive chain).
1713 : Accelerator potentiometer.
1714 : Energy gauge.
1715 : Electric coolant pump relay (hybrid drive chain).
1716 : Heater matrix coolant relay (hybrid drive chain).
1718 : Electric motor cooling fan control thermistor.
1722 : Battery water cooling fan control thermistor.
1725 : Electronic unit for transformer and electrical device.
1727 : Traction battery coolant pump.
1728 : Electronic management control unit coolant pump.
1729 : Electric vehicle coded anti-start relay.
1730 : Coded anti-theft shunt.
1732 : Battery heater relay.
1733 : Battery heater resistance.
1740 : Electric traction motor.
1741 : Active damper electronic unit.
1746 : Electric motor cooling fan.
1747 : Charging socket.
1748 : Battery charging socket unit.
1749 : Heater cut-off auto-hold relay.

1750 : Rapid recharge switch.
1760 : High voltage battery + battery status supervisor.
1761 : Drive train supervisor.
1762 : Electric machine pilot.
1800 : Gas control unit.
1801 : Absolute pressure sensor.
1802 : Metering device electrovalve.
1803 : Fuel tank electrovalve.
1804 : Evaporator-control valve electrovalve.
1805 : 3 relay housing.
1806 : Oxygen sensor relay.
1807 : Diode bridge.
1808 : Gas supply block.
1809 : Linear actuator.
1810 : Petrol-Gas switch.
1811 : Gas-petrol timer relay.
1812 : Gas supply fuse block.
1813 : Diagnostic warning lamp cut-off relay.
1814 : Gas pressure indicator.
1815 : LPG/petrol dialogue double relay.
1816 : Fitting of voltage adaptor 12V/5V.
1817 : Gas gauge.
1818 : Engine coolant temperature sensor (15).
1819 : LPG gauge damper housing.
1820 : Gas distribution motor.
1821 : LPG electrovalve + sender.
1822 : Adapter assembly diode 12V/5V.
1823 : Adapter assembly resistor 12V/5V.
1824 : Air inlet flap electrovalve.
1825 : Gas supply electrovalve.
1826 : Fuel pump cut-off relay.
1827 : Reservoir electrovalve control relay.
1828 : LPG distributor.
1829 : LPG distributor pressure sensor.
1830 : LPG evaporator control valve temperature sensor.
1831 : LPG switching relay.
1832 : Cylinder 1 LPG injector.
1833 : Cylinder 2 LPG injector.
1834 : Cylinder 3 LPG injector.
1835 : Cylinder 4 LPG injector.
1836 : LPG main relay.
1837 : Fuel booster relay.
1839 : Pressure reducer electrovalve.
1840 : Gas return electrovalve relay.
1841 : Gas injector relay.
1842 : Gas return electrovalve.
1843 : Immersed gas pump current sensor.
1844 : Gas electrovalves fuse-holder.
1845 : Gas injector fuse holder.
1846 : Gas ECU supply fuse holder.
1847 : Gas general relay supply fuse holder.
1848 : Gas pressure and temperature sensor.
1849 : Gas injector rail electrovalve.
1850 : Evaporator control electrovalve control relay.
1851 : Gas pressure management housing.
1852 : Cylinder 1 gas injector.
1853 : Cylinder 2 gas injector.

1854 : Cylinder 3 gas injector.
1855 : Cylinder 4 gas injector.
1856 : Petrol injector management housing.
1857 : Gas evaporator control valve.
1858 : Gas pressure sensor on evaporator control valve.
1859 : Coolant temperature sensor on evaporator control valve.
1860 : Absolute low pressure sensor.
1861 : Absolute high pressure sensor.
1862 : Gas information display.
1863 : Gas temperature sensor.
1864 : Gas supply electrovalve 2.
1865 : Gas supply electrovalve 3.
1900 : Alternator-starter management ECU.
1901 : Alternator-starter motor management.
1902 : Alternator-starter electric mechanism.
1903 : Heater matrix water pump.
1904 : Electronic cooling coolant pump.
1905 : Electronic coolant temperature sensor.
1906 : Declutch pedal switch.
1907 : Gearbox neutral switch.
1908 : Coolant circuit heater plug 1.
1909 : Coolant circuit heater plug 2.
1910 : Coolant circuit heater plug 3.
1911 : Alternator-starter power fuse.
1912 : Stop start switch.
1913 : High pressure battery cooling fan.
1914 : High pressure battery temperature sensor.
1915 : Battery temperature sensor.
0002 : Lighting and signalling switch.
2000 : Rear foglamps switch.
2001 : Lighting-wash/wipe combination switch.
2002 : Driving school buzzer (Germany).
2003 : Driving school instructor's control unit.
2004 : Driving school jack socket (Germany).
2005 : Rear foglamps relay.
2006 : Driving school switching (Germany).
2007 : Driving school footwell lighting (Germany).
2008 : Driving school interface control unit.
2010 : LH rear foglamp.
2011 : Central rear foglamp.
2015 : RH rear foglamp.
2016 : Rear foglamps control unit.
2100 : Stoplamp switch.
2101 : Redundant stop switch.
2110 : Additional stop lamps.
2111 : LH additional stoplamp.
2112 : RH additional stoplamp.
2113 : Positive temperature sensor(PTC).
2120 : Brake dual-function switch.
2200 : Reverse lamp switch.
2202 : Reverse drive control switch.
2210 : LH reversing lamp.
2215 : RH reversing lamp.
2300 : Hazard warning switch.
2305 : Flasher unit.
2310 : Direction indicators switching.
2320 : Left-hand front direction indicator lamp.

2325 : Right-hand front direction indicator lamp.
2330 : Left-hand rear direction indicator lamp.
2335 : Right-hand rear direction indicator lamp.
2340 : Left-hand side repeater flasher.
2345 : Right-hand side repeater flasher.
2400 : Sidelamp day running lights line relay.
2401 : Dipped beam day running lights relay.
2402 : Daylight running lights relay shunt.
2403 : Rear sidelamps relay.
2404 : Running lamp relay.
2410 : Dipped beam relay.
2411 : Reduced intensity lighting relay.
2415 : Reduced intensity lighting resistance.
2500 : Horn button.
2501 : Horn switch in steering wheel.
2505 : Air horn compressor relay.
2510 : Horn compressor.
2520 : Horn.
2521 : Low note horn.
2522 : High note horn.
2523 : Pedestrian buzzer.
2524 : Horn.
2525 : Horn compressor fuse.
2530 : Siren unit (police).
2531 : Police siren switch.
2532 : Day/night police siren switch.
2535 : Siren loudspeaker (police).
2600 : Lighting rotary switch.
2601 : Front incline sensor.
2602 : Rear incline sensor.
2606 : Main beam relay.
2607 : Main beam headlamps relay 2.
2610 : Left hand headlamp.
2611 : LH directional headlamp.
2612 : LH additional headlamp.
2615 : Right hand headlamp.
2616 : RH directional headlamp.
2617 : RH additional headlamp.
2618 : Main beam headlamps automatic switch.
2620 : LH front sidelamp.
2625 : RH front sidelamp.
2630 : Left-hand tail lamp.
2631 : Right-hand tail lamp on boot lid.
2632 : LH rear lamps on boot lid.
2633 : Number plate right-hand lamp.
2634 : Jack socket shunt.
2635 : Right-hand tail lamp.
2636 : Number plate lamp.
2637 : Jack plug for rotating lamp.
2638 : Rotating light.
2639 : Rotating beacon switch.
2640 : Front LH outline marker lamps.
2641 : Front RH side marker.
2642 : Front LH side marker.
2643 : Rear RH side marker.
2644 : Rear LH side marker.
2645 : Front RH outline marker lamps.

2646 : LH rear lamp on upper body.
2647 : RH rear lamp on upper body.
2648 : Left-hand central marker lamps.
2649 : Right-hand central marker lamps.
2650 : Rear LH outline marker lamps.
2651 : Police car bar across roof.
2655 : Rear RH outline marker lamps.
2656 : Rotating lamps (rear roof lamps).
2657 : Rotating lamps unit (rear roof lamps).
2658 : Rear roof lamp switch.
2659 : Orange lamps switch.
2660 : Foglamps switch.
2662 : Front foglamps prohibition relay.
2665 : Front foglamps relay.
2670 : Left-hand front fog lamp.
2675 : Right-hand front fog lamp.
2676 : Additional headlamp shunt.
2680 : Long range headlamps switch.
2685 : Long range headlamps relay.
2690 : LH long range headlamp.
2695 : RH long range headlamp.
3000 : Front LH door pillar switch.
3001 : Front RH door pillar switch.
3002 : Rear LH door edge switch.
3003 : Rear RH door edge switch.
3004 : Lighting timer unit.
3005 : Interior lamps timer relay.
3006 : Interior lamps switch.
3007 : Interior lamps lighting relay.
3008 : Interior lighting ECU.
3009 : Welcome/night ambiance lighting rheostat button.
3010 : Front interior lamp.
3011 : Front central interior lamp.
3012 : Front LH interior lamp.
3013 : Front RH interior lamp.
3014 : Door switch, driver's side.
3015 : Roof console + integrated functions.
3016 : Passenger's side sill switch.
3019 : Rear interior lamp switch.
3020 : Rear interior lamp.
3021 : Rear central interior lamp.
3022 : Rear LH interior lamp.
3023 : Rear RH interior lamp.
3024 : Left-hand courtesy lamp.
3025 : Right-hand courtesy lamp.
3028 : Boot upper interior lamp.
3029 : Central interior lamp switch.
3030 : Central courtesy lamp.
3031 : Front RH map reading lamp.
3032 : Front LH map reading lamp.
3033 : Rear RH map reading lamp.
3034 : Rear LH map reading lamp.
3035 : Footwell lamp.
3036 : Front RH footwell lighting.
3037 : Front LH footwell lighting.
3038 : Rear RH footwell lighting.
3039 : Rear LH footwell lighting.

3040 : Left-hand front door tread lamp.
3041 : Spotlamp on LH row 2 seat.
3042 : Rear LH door sill lighting.
3043 : Rear LH interior door opening control lamp.
3044 : Rear RH interior door opening control lamp.
3045 : Right-hand front door tread lamp.
3046 : Spotlamp on RH row 2 seat.
3047 : Rear RH door sill lighting.
3048 : Front LH interior door opening control lamp.
3049 : Front RH interior door opening control lamp.
3050 : Lighting rheostat.
3051 : Heater control panel lamp.
3052 : Console lamp.
3053 : Cigar lighter lamp.
3054 : Ashtray lamp.
3055 : Radio flap control lighting.
3056 : Ashtray flap control lighting.
3057 : LH air vent lighting.
3058 : RH air vent lighting.
3059 : Central air vent lighting.
3060 : Driver's vanity mirror lighting.
3061 : Passenger's vanity mirror lighting.
3062 : Rear ashtray lighting.
3063 : Roof lighting.
3064 : Dashboard lighting.
3065 : Map reading lamp.
3066 : Front LH armrest lighting.
3067 : Front RH armrest lighting.
3068 : Rear LH armrest lighting.
3069 : Rear RH armrest lighting.
3070 : Selector lever lamp.
3071 : Centre pillar lighting.
3072 : Front LH door lamp.
3073 : Front RH door lamp.
3074 : Roof lighting 2.
3075 : Antitheft switch lighting.
3076 : Driver's dashboard lamp.
3077 : Passenger's dashboard lamp.
3078 : Front left seat back table lamp.
3079 : Front right seat back table lamp.
3080 : Police visor lamp.
3081 : Front left door trim light.
3082 : Front right door trim light.
3083 : Rear left door trim light.
3084 : Rear right door trim light.
3085 : Central and passenger's interior lamp switch (white light).
3086 : Central and passenger's interior lamp switch (blue light).
3087 : Sidelamps switch.
3088 : Sidelamps relay.
3089 : Front roof console LED module.
3090 : Row 3 rear left seat lighting timer relay.
3091 : Row 3 rear right seat lighting timer relay.
3092 : Row 3 rear left seat lamp switch.
3093 : Row 3 rear right seat lamp switch.
3094 : Row 3 rear left footwell lamp.
3095 : Row 3 rear right footwell lamp.
3096 : Connector area light.

3097 : Day/night passenger compartment lighting switch.
3100 : Luggage compartment switch.
3101 : Movable boot lighting.
3102 : Refrigerated central storage lighting.
3104 : Tailgate lamp.
3105 : Boot (or luggage compartment) lamp.
3106 : LH boot lamp.
3107 : RH boot lamp.
3108 : CD console lighting switch.
3109 : Secondary boot lighting.
3110 : Glove box lamp switch.
3111 : Motorised boot buzzer.
3112 : Tailgate motor.
3113 : Motorised tailgate absolute sensor.
3114 : Large storage compartment light.
3115 : Glove box lamp.
3116 : Front LH storage lighting.
3117 : Front RH storage lighting.
3118 : Front LH storage tray lamp.
3119 : Front RH storage tray lamp.
3120 : Bonnet switch.
3121 : Engine compartment lamp.
3122 : Engine compartment lamp switch.
3123 : Central storage tray lamp.
3125 : Boot lighting relay.
3126 : Boot lighting timer relay.
0004 : Control panel.
4000 : Instrument panel central electronic module.
4001 : Head-up vision control unit.
4002 : Head-up vision control panel.
4005 : Engine coolant temperature sensor.
4010 : Engine coolant level switch.
4012 : Separate instrument panel.
4015 : Engine coolant level housing.
4020 : Engine coolant thermal switch.
4021 : Engine temperature thermal switch.
4025 : Temperature sensor - engine coolant thermal switch (indicator).
4026 : Coolant temperature gauge.
4030 : Engine coolant thermistor (indicator).
4035 : Pre-alert thermal switch.
4040 : Engine coolant and aircon thermistor.
4050 : Water in fuel sensor.
4060 : Battery charge indicator.
4100 : Engine oil temperature + level indicator.
4101 : Engine oil temperature indicator.
4102 : Engine oil level indicator.
4103 : Engine oil temperature sensor.
4104 : Engine oil pressure sensor.
4105 : Engine oil pressure indicator.
4106 : Engine oil pressure sensor/pressure switch.
4110 : Oil pressure switch.
4111 : Engine oil temperature sensor + thermal switch.
4120 : Engine oil level sensor.
4130 : Engine oil thermal switch.
4131 : Engine oil temperature and level sensor.
4132 : Engine oil level and temperature quality sensor.
4200 : Starter switch.

4205 : Air filter pressure switch.
4210 : Rev counter (if separate).
4240 : Inlet pressure sensor.
4241 : Turbo pressure indicator.
4300 : Fuel minimum level switch.
4310 : Fuel gauge.
4311 : Fuel pump electronic damper housing.
4315 : Fuel gauge (transmitter).
4320 : Filler cap presence switch.
4330 : Fuel flowmeter (computer).
4335 : Consumption interface unit.
4340 : Consumption ECU.
4341 : Instantaneous fuel consumption indicator.
4400 : Handbrake switch.
4401 : Handbrake warning lamp diode.
4402 : Reverse gear buzzer diode.
4405 : Brake servo vacuum control vacuum switch.
4410 : Brake fluid level switch.
4420 : ABS alert warning lamp relay.
4430 : Front left brake pad wear contact.
4431 : Front right brake pad wear contact.
4432 : Rear LH brake pad wear switch.
4433 : Rear RH brake pad wear switch.
4440 : Blown bulbs detection unit.
4445 : Blown bulbs relay (warning lamp).
4450 : Brake warning lamp relay (Australia).
4500 : Ride height correction fluid level switch.
4605 : Programme or selection display.
4610 : Gearbox oil thermal switch.
4630 : Vehicle speed indicator.
4635 : Electronic tachograph converter.
4640 : Mileometer (if separate).
4645 : Odometer and warning lamps electronic unit.
4700 : Front LH lock switch.
4701 : Front RH lock switch.
4702 : Rear LH lock switch.
4703 : Rear RH lock switch.
4704 : Bonnet closing switch (bonnet open detection).
4705 : Boot lock switch (boot open detection).
4710 : Headlamp flash relay.
4715 : Door open buzzer.
4716 : Park position buzzer.
4720 : Lamps on buzzer relay.
4725 : Lamps on + ignition key in buzzer relay.
4728 : Row 3 rear left buckle strap return switch.
4729 : Row 3 rear right buckle strap return switch.
4730 : Driver's seat belt switch.
4731 : Passenger's seat belt switch.
4732 : Rear LH seat belt switch.
4733 : Rear RH seat belt switch.
4734 : Rear central seat belt switch.
4735 : Seat belt buzzer.
4736 : Seat belt fastening management control unit.
4737 : Detection layer.
4738 : LH central rear seat belt switch.
4739 : RH central rear seat belt switch.
4740 : Overspeed buzzer.

4741 : Rear LH seat belt switch row 3.
4742 : Rear RH seat belt switch row 3.
4743 : Rear central and rear RH seat belt switch.
4744 : Rear central and rear LH seat belt switch.
4745 : Rear LH and RH row 3 seat belt switch.
4746 : Seat belts not fastened warning lamp control unit.
4747 : Rear LH, central and RH seat belt switch.
4748 : Discontinue use: take 65A9.
4750 : ABS buzzer.
4760 : Key left in ignition switch (buzzer control).
4761 : Ignition key presence switch.
4765 : Key left in ignition buzzer relay.
4790 : Electric motor reminder buzzer.
4800 : Catalytic converter temperature sensor.
4805 : Catalytic converter temperature unit.
4900 : Anomaly detector indicator.
4905 : Point matrix.
4990 : Charging flap opening control switch.
0005 : Screen wiper switch.
5001 : Rain sensor.
5002 : Rain sensor control relay.
5003 : Rain sensor speed control relay.
5004 : Automatic screen wipe ECU.
5005 : Windscreen wipe relay.
5006 : Windscreen/rear screen wipe relay.
5007 : Rain/sunlight sensor.
5008 : Rain/sunlight/tunnel sensor.
5009 : Windscreen wipers de-icing.
5010 : Windscreen wiper timer.
5011 : Front screen wipe deicer relay.
5012 : Sunlight sensor.
5015 : Windscreen wiper motor.
5016 : Parking stop unit.
5020 : Screen wash fluid heater.
5021 : Pipe heater.
5025 : LH windscreen wiper motor.
5030 : RH windscreen wiper motor.
5100 : Windscreen wash pump.
5105 : LH heated screen wash jet.
5106 : RH heated screen wash jet.
5110 : Wash liquid level sensor.
5115 : Front/rear screen wash pump.
5202 : Rear screen wiper switch.
5203 : Rear screen wash switch.
5204 : Rear wiper motor switch (if separate).
5205 : Tailgate wiper relay.
5210 : Rear screen wiper timer.
5211 : LH rear screen wiper motor.
5212 : RH rear screen wiper motor.
5215 : Rear screen wiper motor.
5300 : Rear screen wash pump.
5400 : Headlamp wash timer relay.
5401 : Headlamp wash relay.
5405 : Headlamp wash pump.
5406 : Headlamp wash switch.
6000 : Left-hand door left-hand window lift switch.
6001 : Left-hand window lift front switch.

6002 : Right-hand window lift front switch.
6003 : Passenger's electric window switch, driver's side.
6004 : Passenger's electric window switch.
6005 : Right-hand door right-hand window lift switch.
6007 : Driver's electric window switch, driver's side.
6010 : Right-hand door left-hand window lift switch.
6015 : Left-hand door right-hand window lift switch.
6016 : Electric window + sun roof circuit diode.
6017 : Passenger's electric window switch, passenger's side.
6020 : Front window lift + sun roof relay.
6021 : Window lift relay.
6025 : Sun roof + electric window supply relay.
6029 : Driver's door anti-pinch/sequential unit.
6030 : One touch electric window control unit.
6031 : Passenger's front sequential electric window unit + motor.
6032 : Driver's front sequential electric window unit + motor.
6033 : Anti-pinch unit.
6034 : Anti-pinch sensor.
6035 : Anti-pinch electric window motor on driver's door.
6036 : Electric window/rear view mirror control panel on driver's door.
6037 : Electric window/rear view mirror control panel on passenger's door.
6038 : Anti-pinch electric window motor on passenger's door.
6039 : Rear microdescent anticipation control unit.
6040 : Driver's electric window motor.
6041 : Driver's door interior handle sensor.
6042 : Driver's door exterior handle sensor.
6043 : Passenger's door interior handle sensor.
6044 : Passenger's door exterior handle sensor.
6045 : Passenger's electric window motor.
6046 : Rear LH door exterior handle switch.
6047 : Rear RH door exterior handle switch.
6048 : Front microdescent anticipation control unit.
6049 : Driver's door exterior handle switch.
6050 : Passenger's door exterior handle switch.
6051 : Front RH electric window unit + motor.
6052 : Front LH electric window unit + motor.
6053 : Driver's door electric window/locking control pad.
6060 : Central electric window switch.
6100 : Left-hand rear window lift rear switch.
6101 : Rear RH sequential electric window unit + motor.
6102 : Rear LH sequential electric window unit + motor.
6105 : Right-hand rear window lift rear switch.
6110 : Left-hand rear window lift front switch.
6115 : Right-hand rear window lift front switch.
6116 : Control panel for rear electric windows.
6120 : Rear window lift inhibitor switch.
6121 : Rear function locking relay.
6122 : Rear electric windows locking and alarm cut-off switch.
6125 : Rear electric window lift relay.
6126 : Rear electric windows at ACC+ relay.
6130 : Rear LH electric window motor.
6131 : Rear RH electric window unit + motor.
6132 : Rear LH electric window unit + motor.
6133 : Anti-pinch electric window motor in rear LH door.
6134 : Anti-pinch electric window motor in rear RH door.
6135 : Rear RH electric window motor.
6140 : Heated seat + rear electric windows relay.

62A0 : Central locking relay.
62A1 : Rear LH rear door lock assembly.
6200 : Front LH door open switch.
6201 : Door module / BSI LH door open contact diode.
6202 : Driver's door lock assembly.
6203 : Front/rear doors switch isolation diode.
6204 : Door module / BSI RH door open contact diode.
6205 : Front RH door open switch.
6206 : Child lock switch.
6207 : Passenger's door lock assembly.
6208 : LH motor striker.
6209 : RH motor striker.
6210 : Rear LH door open switch.
6211 : Lock switch.
6212 : Rear left-hand door lock assembly.
6213 : Front LH exterior opening control sensor.
6214 : Front RH exterior opening control sensor.
6215 : Rear RH door open switch.
6216 : Boot open switch.
6217 : Rear right-hand door lock assembly.
6218 : Rear RH hinged door lock assembly.
6219 : Door unlocking safety relay.
6220 : Door locking switch.
6221 : Rear RH hinged door locking switch.
6222 : Boot lock assembly.
6223 : Rear screen lock assembly.
6224 : LH tailgate lock assembly.
6225 : RH tailgate lock assembly.
6226 : Fuel flap relay.
6228 : Electric windows and doors locking control unit.
6229 : Locking and automatic locking prohibition switch.
6230 : Infra red door locking receiver.
6231 : High frequency receiver for central locking.
6232 : High frequency door locking transmitter.
6233 : Front LH door lock assembly.
6234 : Doors actuator cut-off control unit.
6235 : Central locking control unit.
6236 : Left sliding side door end of opening switch.
6237 : Boot unlocking switch.
6238 : Right sliding side door end of opening switch.
6239 : Sliding side doors module.
6240 : Front LH door locking motor.
6241 : Fuel flap switch.
6242 : Front LH door deadlocking motor.
6243 : LH sliding side door motor.
6244 : LH sliding side door front LH switch.
6245 : Front RH door locking door.
6246 : LH sliding side door rear LH switch.
6247 : Front RH door deadlocking motor.
6248 : RH sliding side door motor.
6249 : RH sliding side door front RH switch.
6250 : Left-hand rear door lock motor.
6251 : RH sliding side door rear RH switch.
6252 : Rear left-hand door deadlock motor.
6253 : Rear LH hinged door locking motor.
6254 : Front RH door lock assembly.
6255 : Right-hand rear door lock motor.

6256 : Rear doors locking motor.
6257 : Rear right-hand door deadlock motor.
6258 : Right-hand rear hinged door locking motor.
6259 : Rear RH hinged door deadlocking motor.
6260 : Boot or tailgate lock motor.
6261 : Tailgate locking motor.
6262 : Boot deadlocking motor diode.
6263 : LH door child safety motor.
6264 : Child safety relay.
6265 : Fuel filler flap lock motor.
6266 : Charging flap locking motor.
6267 : RH door child safety motor.
6268 : Rear LH door child safety LED.
6269 : Rear RH door child safety LED.
6270 : LH sliding door brake sensor.
6271 : RH sliding door brake sensor.
6272 : LH lock opening actuator.
6273 : RH lock opening actuator.
6274 : LH lock with integrated contact.
6275 : RH lock with integrated contact.
6276 : Boot lock actuator.
6277 : Moving contacts switch.
6278 : LH sliding side door switch.
6279 : RH sliding side door switch.
6280 : RH sliding door double relay.
6281 : Rear screen opening switch.
6282 : Boot opening switch.
6283 : Tailgate opening switch.
6284 : Rear tailgate glass lock actuator.
6285 : Rear screen window open switch.
6286 : Boot/rear screen authorisation relay.
6287 : Boot opening relay.
6288 : Rear screen opening relay.
6289 : Boot striker plate.
6290 : Boot movement control unit.
6291 : Fixed contacts switch.
6292 : Boot switch.
6293 : LH side sliding door split switch.
6294 : Boot common relay.
6295 : LH anti-pinch sensor.
6296 : RH anti-pinch sensor.
6297 : Tailgate opening position switch.
6298 : Rear access locking.
6299 : Door locking high frequency aerial.
63A1 : Driver's seat motors assembly.
63A2 : Passenger's seat motors assembly.
63A3 : Rear right head restraint folding motor.
63A4 : Rear left head restraint folding motor.
63A5 : Rear seats unlocking unit.
63A6 : Rear LH seat unlocking button.
63A7 : Rear RH seat unlocking button.
63A8 : Rear left seat unlocking actuator.
63A9 : Rear right seat unlocking actuator.
63B0 : Driver's seat back folded position micro switch.
63B1 : Driver's comfort seat back position micro switch.
63B2 : Passenger's comfort seat back position micro switch.
63B3 : Driver's seat memorisation control unit.

63B4 : Passenger's seat memorisation control unit.
63B5 : Driver's access to rear seat switch.
63B6 : Passenger's access to rear seat switch.
63B7 : Driver's electric seat power unit.
63B8 : Folding rear seats automatic control diode.
63C0 : Rear left seats unlocking unit.
63C1 : Rear right seats unlocking unit.
63C2 : Interior boot opening button.
63C3 : Rear doors hands-free locking button.
63D5 : Rear left seat back adjustment switch.
63D6 : Rear right seat back adjustment switch.
6300 : Driver's seat advance switch.
6301 : Driver's seat + door mirror position memorisation control unit.
6302 : Driver's seat adjustment assembly.
6303 : Passenger's seat adjustment assembly.
6304 : Passenger's seat position memorisation unit.
6305 : Passenger's seat advance switch.
6306 : Driver's seat angle memorisation motor.
6307 : Seat position memorisation keypad.
6308 : Presence sensor.
6309 : Passenger's seat angle memorisation motor.
6310 : Driver's seat raising switch.
6311 : Driver's seat power switch 4.
6312 : Passenger's seat power switch 4.
6313 : Driver's seat cushion length memorisation motor.
6314 : Passenger's seat cushion length memorisation motor.
6315 : Passenger's seat raising switch.
6316 : Driver's seat position motor.
6317 : Passenger's seat position motor.
6318 : Driver's seat cushion length motor.
6319 : Passenger's seat cushion length motor.
6320 : Driver's seat glide motor.
6321 : Driver's seat slide memorisation motor.
6322 : Driver's seat height adjustment motor.
6323 : Passenger's seat height adjustment motor.
6324 : Passenger's seat slide memorisation motor.
6325 : Passenger's seat glide motor.
6326 : Driver's seat head restraint motor.
6327 : Passenger's seat head restraint motor.
6328 : Driver's seat head restraint memorisation motor.
6329 : Passenger's seat head restraint memorisation motor.
6330 : Driver's seat height memorisation motor.
6331 : Passenger's seat height memorisation motor.
6332 : Driver's seat upper backrest motor.
6333 : Driver's seat upper backrest memorisation motor.
6334 : Passenger's seat upper backrest motor.
6335 : Passenger's seat upper backrest memorisation motor.
6336 : Front passenger's seat fore/aft switch.
6337 : Passenger's seat front cushion motor.
6338 : Seat memorisation control unit.
6339 : Passenger's seat rear cushion motor.
6340 : Driver's seat backrest switch.
6341 : Driver's seat lower backrest memorisation motor.
6342 : Passenger's seat lower backrest memorisation motor.
6343 : Driver's seat tension level control.
6344 : Passenger's seat tension level control.
6345 : Driver's seat voltage level switch 4.

6346 : Passenger's seat voltage level switch 4.
6347 : Centre armrest motor.
6348 : Rear seat position memorisation control unit.
6349 : Passenger's seat position control unit.
6350 : Driver's seat lower backrest motor.
6351 : Passenger's seat position rear switch.
6352 : Rear seats position control unit.
6353 : Rear LH seat fore/aft switch.
6354 : Rear RH seat fore/aft switch.
6355 : Passenger's seat lower backrest motor.
6356 : Driver's seat lumbar adjustment motor.
6357 : Passenger's seat lumbar adjustment motor.
6358 : Driver's seat horizontal lumbar motor.
6359 : Passenger's seat horizontal lumbar motor.
6360 : Driver's seat adjustment relay.
6361 : Driver's seat vertical lumbar motor.
6362 : Passenger's seat vertical lumbar motor.
6363 : Driver's seat horizontal lumbar memorisation motor.
6364 : Passenger's seat horizontal lumbar memorisation motor.
6365 : Passenger's seat adjustment relay.
6366 : Passenger's seat fast speed glide motor.
6367 : Driver's seat fast speed glide motor.
6368 : Driver's seat vertical lumbar memorisation motor.
6369 : Passenger's seat vertical lumbar memorisation motor.
6370 : Seat slave unit.
6371 : Driver's seat ventilator.
6372 : Passenger's seat ventilator.
6373 : Driver's seat front stop position micro-switch.
6374 : Driver's seat backrest locked position micro-switch.
6376 : Passenger's seat front stop position micro-switch.
6377 : Passenger's seat backrest folded position micro-switch.
6378 : Passenger's seat backrest locked position micro-switch.
6379 : Passenger's seat memorised backrest position micro-switch.
6380 : Driver's/passenger's seat voltage level top-of-backrest switch.
6381 : Driver's/passenger's seat power top-of-backrest switch.
6382 : Driver's/passenger's seat voltage level lumbar switch.
6383 : Driver's/passenger's seat power lumbar switch.
6384 : Rear RH seat adjustment motor.
6385 : Rear LH seat adjustment motor.
6386 : Driver's seat lumbar adjustment module.
6387 : Passenger's seat lumbar adjustment module.
6388 : Rear RH head restraint motor.
6389 : Rear LH head restraint motor.
6390 : Rear head restraint retracting switch.
6391 : Rear RH seat adjustment assembly.
6392 : Rear LH seat adjustment assembly.
6393 : Driver's seat panel.
6394 : Passenger's seat panel.
6395 : Driver's seat.
6396 : Passenger's seat.
6397 : Master control unit for seat 5 movements.
6398 : Slave control unit for seat 5 movements.
6399 : Slave control unit for seat 2 movements.
6350 : Driver's seat.
6350 : Passenger's seat.
6400 : Driver's rear view mirror switch.
6404 : Passenger's rear view mirror memorisation and lighting control unit.

6405 : Passenger's side rear view mirror control.
6406 : Rear view mirror control.
6407 : Fold back rear view mirror unit.
6408 : Rear view mirrors foldback relay.
6409 : Rear view mirrors deployment relay.
6410 : Driver's side rear view mirror.
6411 : LH rear view mirror.
6415 : Passenger's door mirror.
6416 : RH door mirror.
6420 : Folding rear view mirror switch.
6421 : Reverse indexing unit.
6422 : Reverse gear indexing switch.
6430 : Electric interior rear view mirror.
6435 : Anti-dazzle unit.
6440 : Photochromic interior rear view mirror.
6450 : Blind spot monitoring control unit.
6451 : LH camera.
6452 : RH camera.
6470 : Steering wheel adjustment switch.
6471 : Steering wheel height adjustment motor.
6472 : Steering wheel depth adjustment motor.
6473 : Steering wheel height/reach adjustment motor.
65A0 : Row 2 seat 1 right-hand seat belt switch.
65A1 : LH seat belt switch, seat 1, row 2.
65A2 : Row 2 seat 2 right-hand seat belt switch.
65A3 : LH seat belt switch, seat 2, row 2.
65A4 : Row 2 seat 3 right-hand seat belt switch.
65A5 : LH seat belt switch, seat 3, row 2.
65A6 : Row 2 seat 1 electrical connection unit without contact.
65A7 : Row 2 seat 2 electrical connection unit without contact.
65A8 : Row 2 seat 3 electrical connection unit without contact.
65A9 : Row 2 body electrical connection unit without contact.
65B0 : Driver's satellite sensor.
65B1 : Passenger's satellite sensor.
65B2 : Driver's side airbag module.
65B3 : Passenger's side airbag module.
6500 : Driver's passive seat belt switch.
6501 : Driver's pyrotechnic seat belt reel.
6502 : Front right head side airbag module.
6503 : Front left head side airbag module.
6505 : Passenger's passive seat belt switch.
6506 : Passenger's pyrotechnic seat belt reel.
6510 : Driver's passive seat belt unit.
6515 : Passenger's passive seat belt unit.
6520 : Passive seat belt timer relay.
6524 : Front LH belt pretensioner.
6525 : Passenger's airbag deactivation LED.
6530 : Driver's passive seat belt motor.
6535 : Passenger's passive seat belt motor.
6539 : Front central pretensioner.
6540 : Driver's pre-tensioning seat belt control unit.
6541 : Passenger's pyrotechnic seat belt control unit.
6542 : Pre-tensioning seat belt control unit.
6543 : Driver's vehicle occupant specification control unit.
6544 : Front RH belt pretensioner.
6546 : Passenger's vehicle occupant specification control unit.
6547 : Driver's seat position sensor.

6548 : Driver's knees airbag module.
6549 : Front passenger's knees airbag module.
6550 : Passenger's seat position sensor.
6551 : RH curtain airbag module.
6552 : LH curtain airbag module.
6553 : Airbag shunt resistance.
6555 : Front central airbag module.
6558 : Rear LH crossmember.
6559 : Rear RH crossmember.
6560 : Rear safety crossmember control unit.
6561 : Airbag ECU anti-interference self.
6562 : Front RH lateral airbag module.
6563 : Front LH lateral airbag module.
6564 : Passenger's airbag module.
6565 : Driver's airbag module.
6566 : Rear RH lateral airbag module.
6567 : Rear LH lateral airbag module.
6568 : Front passenger's belt return pretensioner.
6569 : Passenger's airbag deactivation switch.
6570 : Air bag and pre-tensioners control unit.
6571 : RH lateral airbag control unit.
6572 : LH lateral airbag control unit.
6573 : Front LH satellite sensor.
6574 : Front RH satellite sensor.
6575 : Front LH pretensioner.
6576 : Front RH pretensioner.
6577 : Rear LH pretensioner.
6578 : Rear RH pretensioner.
6579 : Rear central pretensioner.
6580 : Rear LH satellite sensor.
6581 : Rear RH satellite sensor.
6582 : Front LH front satellite sensor.
6583 : Front RH front satellite sensor.
6584 : Passenger's active anti-submarining module.
6585 : Front frontal satellite sensor.
6586 : Rear right strap return pretensioner.
6587 : Rear left strap return pretensioner.
6588 : Driver's strap return pretensioner.
6590 : Pedestrian impact detection control unit.
6591 : Front RH pedestrian impact detection accelerometer sensor.
6592 : Front LH pedestrian impact detection accelerometer sensor.
6593 : Pedestrian impact detection force sensor.
6594 : RH bonnet hinge actuator.
6595 : LH bonnet hinge actuator.
6596 : Rear LH pretensioner (row 3).
6597 : Rear RH pretensioner (row 3).
6598 : Driver's pretensioner.
6599 : Passenger's pretensioner.
6600 : Headlamp height adjustment control.
6601 : Vehicle height switch.
6605 : Headlamps corrector unit.
6606 : Headlamps dynamic correction control unit.
6610 : LH headlamp corrector.
6615 : RH headlamp corrector.
6616 : Front body height sensor.
6617 : Rear body height sensor.
6620 : Vehicle height correction control fuse.

6621 : Vehicle height correction motor fuse.
6625 : Vehicle height position switch.
6630 : Handbrake information relay.
6631 : Brake pedal information relay.
6632 : Hydraulic circuit fluid pressure switch.
6635 : Vehicle height correction ECU-sensor.
6636 : Vehicle height correction motor relay.
6637 : Vehicle height correction electrovalve relay.
6640 : Vehicle height correction electropump motor.
6645 : Vehicle height correction electrovalve.
6646 : Vehicle height correction fluid level switch.
6700 : Diff lock control switch.
6701 : Rear diff lock control electrovalve.
6702 : 4X4 engagement control electrovalve.
6703 : 4X4 retention control electrovalve.
6705 : Diff lock fuse.
6706 : 4X4 engagement control relay.
6707 : 4X4 engagement switch.
6708 : Reduction box engagement closing switch.
6709 : Reduction box engagement closing switch.
6710 : Front diff lock position switch.
6711 : 4X4 engagement closing sensor.
6712 : Rear diff lock opening sensor.
6713 : Differential speed sensor (hybrid drive chain).
6715 : Rear diff lock position switch.
6720 : Diff lock ECU.
6721 : 4 wheel drive ECU.
6730 : Front diff lock motor.
6735 : Rear diff lock motor.
6740 : Diff lock relay.
6750 : Managed differential ECU.
6755 : Traction control cut-off switch.
6760 : Managed differential proportional electrovalve.
68A1 : Tailgate closing assistance module.
6800 : Sun roof switch.
6801 : End of sun roof travel switch.
6802 : Sun roof tilting end of travel switch.
6803 : Sun roof sliding control relay.
6804 : Sun roof half travel control relay.
6805 : Sun roof relay.
6806 : Sun roof zero point switch.
6807 : Sun roof relay inside sun roof assembly.
6808 : Sun roof intermediate position switch.
6809 : Screens actuator supply relay.
6810 : Sun roof motor.
6811 : Sun roof one-touch motor.
6812 : Sun roof one-touch motor row 2.
6813 : Sun roof one-touch motor row 3.
6814 : LH rear screen switch.
6815 : RH rear screen switch.
6816 : Cassette opening switch.
6817 : Sun roof front switch rows 2 and 3.
6818 : Sunroof switch row 2.
6819 : Sunroof switch row 3.
6820 : Sun roof assembly.
6822 : LH screen actuator.
6823 : RH screen actuator.

6824 : Rear screen opening switch.
6825 : Sun roof infrared transmitter.
6826 : Sun roof infrared receiver.
6827 : LH cassette actuator.
6828 : RH cassette actuator.
6829 : Cassette actuator supply relay.
6830 : Sun roof unit.
6831 : LH arch switch.
6832 : RH arch switch.
6833 : LH cassette switch.
6834 : RH cassette switch.
6835 : Sun roof control unit.
6840 : LH electric quarterlight switch.
6841 : Quarterlight relays.
6842 : LH electric quarterlight recall switch.
6845 : RH electric quarterlight switch.
6847 : RH electric quarterlight recall switch.
6850 : LH electric quarterlight motor.
6851 : Folding roof switch.
6852 : Folding roof regulation electrovalve.
6853 : Folding roof hydraulic block relay R1.
6854 : Folding roof hydraulic block relay R2.
6855 : RH electric quarterlight motor.
6856 : Roof locking and unlocking switch.
6858 : Folding roof mechanism LH striker plate contact.
6859 : Folding roof mechanism RH striker plate contact.
6860 : Electric bonnet unit.
6861 : Electric bonnet switch.
6862 : Electric bonnet electropump motor.
6863 : Opening electrovalve rear part.
6864 : Closing electrovalve rear part.
6865 : Electric bonnet closing electrovalve.
6866 : Electric bonnet opening electrovalve.
6867 : Cover opening electrovalve.
6868 : Cover closing electrovalve.
6870 : Hydraulic pump block relay.
6871 : Ram switch rear part.
6872 : Electric bonnet ram switch.
6873 : Cover valve switch.
6874 : Roof unlocked switch.
6875 : Electric bonnet buzzer.
6876 : Electric bonnet buzzer diode.
6877 : Boot opening diode.
6878 : LH roof closing contact.
6879 : RH roof closed switch.
6880 : Roof open switch.
6881 : Boot switch.
6882 : Folding roof flap motor.
6883 : LH roof locked switch.
6884 : RH roof locked switch.
6885 : Hydraulic pump unit.
6886 : Blind contact.
6887 : RH luggage space locked switch.
6888 : LH luggage space locked switch.
6889 : Roof closed switch.
6890 : Luggage space open switch.
6891 : Parcel shelf retracted switch.

6892 : Parcel shelf extended switch.
6893 : Folding roof ECU.
6894 : Sun roof and parcel shelf extended/retracted switch.
6895 : Central electric window folding roof switch control panel.
6896 : Folding roof assembly.
6897 : LH boot locked switch.
6898 : RH boot locked switch.
6899 : Boot open switch.
6900 : Luggage cover switch.
6901 : Blind switch.
6910 : Mobile deflector.
6911 : Spoiler button.
6912 : Spoiler LED.
70A1 : ABS motors supply relay.
70A2 : ABS electrovalves supply relay.
70A3 : Front right wheel speed sensor.
70A4 : Front left hand wheel speed sensor.
70A5 : Rear right wheel speed sensor.
70A6 : Rear left wheel speed sensor.
7000 : Front LH ABS sensor.
7001 : Power steering fluid pressure switch.
7005 : Front RH ABS sensor.
7010 : Rear LH ABS sensor.
7013 : Gear lever neutral switch.
7014 : Rear ABS gyrometric sensor.
7015 : Rear RH ABS sensor.
7016 : ABS accelerometer sensor.
7017 : ABS ECU fuse.
7018 : ABS ECU relay.
7019 : Idle support simulation resistance.
7020 : Anti-lock brake control unit.
7025 : ABS hydraulic unit.
7026 : Brake assistance electric pump.
7027 : ABS electrovalve fuse.
7028 : ABS shunt.
7029 : ABS pump fuse.
7030 : Electropump assembly.
7031 : Electropump assembly relay.
7040 : Additional regulation unit.
7041 : Additional regulation unit control panel.
7045 : Clutch pedal information switch.
7046 : Clutch position potentiometer.
7048 : Managed braking servo.
7049 : Managed braking servo ECU.
7050 : Traction control ECU.
7051 : Traction control plus ECU.
7055 : Traction control hydraulic unit.
7060 : Traction control butterfly actuator.
7065 : Traction control butterfly potentiometer.
7070 : Braking electrohydraulic unit.
7071 : Brake pedal travel sensor.
7075 : Traction control cut-off switch.
7076 : Traction control switch warning lamp relay.
7077 : Hill holder cut-off switch.
7078 : Hill holder buzzer.
7080 : Brake fluid level information diode.
7090 : Brake servo vacuum pump.

7091 : Brake servo pressure switch.
7092 : Electrical parking brake control.
7095 : Electric handbrake unit.
7100 : Power steering regulator servo.
7105 : Variable power steering ECU.
7110 : Power steering servo.
7111 : Variable power steering proportional electrovalve.
7112 : Power steering pressure sensor.
7113 : Power steering stop sensor.
7114 : Variable power-steering valve.
7115 : Power steering control relay.
7120 : Power steering electropump motor.
7121 : Power steering electropump diode.
7122 : Power steering electropump unit.
7125 : Power steering power relay.
7126 : Electric power steering ECU.
7127 : Electric power steering wheel angle sensor.
7128 : Electric power steering torque sensor.
7129 : Electric power steering motor.
7130 : Multiplex steering wheel angle sensor.
7200 : Computer-regulator information relay.
7201 : Colour display control unit.
7202 : Colour screen infrared receiver.
7205 : Computer scroll switch.
7206 : Check switch.
7207 : Instrument panel information scrolling control.
7210 : Trip computer.
7211 : Police on-board computer.
7214 : Screen tilt motor.
7215 : Multifunction screen.
7216 : Multifunction screen keypad.
7220 : Clock.
7222 : Outside temperature sensor.
7225 : Clock + outside temperature display.
7226 : Exterior temperature display.
7300 : Cruise control switch.
7302 : LIDAR sensor.
7304 : Autoadaptive cruise control electronic unit.
7305 : Cruise control switch.
7306 : Cruise control safety switch (clutch).
7307 : Cruise control override relay.
7308 : Cruise control safety switch (brake).
7309 : Cruise control/engine ECU circuit shunt.
7310 : Cruise control control unit.
7311 : Cruise control fuse.
7312 : Cruise control switch warning lamp circuit diode.
7315 : Vacuum pump assembly.
7316 : Vehicle speed limiter switch.
7318 : Speed limiter analogue/digital conversion unit.
7320 : Cruise control override solenoid valve.
7325 : Vehicle cruise control button.
7400 : External temperature display.
7500 : Parking assistance ECU.
7501 : Laser telemetry.
7502 : Laser telemetry switch.
7503 : Parking assistance front speaker.
7504 : Parking assistance rear speaker.

7505 : Parking assistance deactivation switch.
7506 : Outer LH front proximity sensor.
7507 : Inner LH front proximity sensor.
7508 : Outer RH front proximity sensor.
7509 : Inner RH front proximity sensor.
7510 : Outer LH rear proximity sensor.
7511 : Inner LH rear proximity sensor.
7512 : Outer RH rear proximity sensor.
7513 : Inner RH rear proximity sensor.
7514 : Parking assistance audible warning.
7515 : Parking assistance cut-off switch.
7516 : LH space available proximity sensor.
7517 : RH space available proximity sensor.
7518 : LH central front proximity sensor.
7519 : RH central front proximity sensor.
7520 : Parking assistance camera.
7521 : Measurement of available space switch.
7522 : Parking assistance video screen.
7523 : Reversing assistance camera.
7524 : Reversing assistance switchbox.
7525 : Overtaking assistance camera.
7526 : Vehicle present when overtaking LED.
7530 : Overtaking assistance management unit.
7540 : Left-hand blind spot monitoring ultrasound sensor.
7541 : Right-hand blind spot monitoring ultrasound sensor.
7542 : Left-hand available space measurement ultrasound sensor.
7543 : Right-hand available space measurement ultrasound sensor.
7550 : Lateral trajectory monitoring ECU.
7551 : LH sensor 1 for lateral trajectory monitoring.
7552 : LH sensor 2 for lateral trajectory monitoring.
7553 : LH sensor 3 for lateral trajectory monitoring.
7554 : LH sensor 4 for lateral trajectory monitoring.
7555 : LH sensor 5 for lateral trajectory monitoring.
7556 : LH sensor 6 for lateral trajectory monitoring.
7559 : LH vibrator for lateral trajectory monitoring.
7561 : RH sensor 1 for lateral trajectory monitoring.
7562 : RH sensor 2 for lateral trajectory monitoring.
7563 : RH sensor 3 for lateral trajectory monitoring.
7564 : RH sensor 4 for lateral trajectory monitoring.
7565 : RH sensor 5 for lateral trajectory monitoring.
7566 : RH sensor 6 for lateral trajectory monitoring.
7569 : RH vibrator for lateral trajectory monitoring.
7570 : Lateral trajectory monitor switch.
7571 : Inter-vehicle time observance assistance sensor/ECU.
7600 : Under-inflation detector ECU.
7601 : Under-inflation detection high frequency receiver.
7602 : Wheel transmitter module.
7605 : Under-inflation detection reinitialisation switch.
7606 : Low frequency aerial for front LH deflation detection.
7607 : Low frequency aerial for front RH deflation detection.
7608 : Low frequency aerial for rear LH deflation detection.
7609 : Low frequency aerial for rear RH deflation detection.
7610 : High frequency aerial for front deflation detection.
7611 : High frequency aerial for rear deflation detection.
7612 : Tyre under-inflation detection high frequency aerial.
7700 : Flywheel angle sensor.
7701 : Steering wheel angle ECU.

7702 : Front body height sensor.
7703 : Rear body height sensor.
7704 : Body height potentiometer.
7705 : Central rear body height sensor.
7706 : Brake pressure sensor.
7708 : Front wheels travel sensor.
7709 : Rear wheels travel sensor.
7710 : Suspension switch.
7711 : Front RH wheel travel sensor.
7712 : Front LH wheel travel sensor.
7713 : Rear RH wheel travel sensor.
7714 : Rear LH wheel travel sensor.
7715 : Suspension control unit.
7716 : Suspension solenoid valve (single or front).
7717 : Rear suspension solenoid valve.
7718 : Roll correction electrovalve.
7719 : Active anti-roll electrohydraulic unit.
7720 : Front LH damper actuator.
7721 : Front LH damper suppression self.
7722 : Active anti-roll ECU.
7723 : Active anti-roll accelerometer.
7724 : Variable damping accelerometer.
7725 : Front RH damper actuator.
7726 : Front RH damper suppression self.
7727 : Rear active active anti-roll accelerometer.
7728 : Front LH active anti-roll accelerometer.
7729 : Front RH active anti-roll accelerometer.
7730 : Rear LH damper actuator.
7731 : Rear LH damper suppression self.
7732 : Front active anti-roll accelerometer.
7733 : Rear LH active anti-roll accelerometer.
7734 : Rear RH active anti-roll accelerometer.
7735 : Rear RH damper actuator.
7736 : Rear RH damper suppression self.
7737 : Suspension compressor.
7738 : Suspension inhibition switch.
7739 : Central electronic block motor.
7740 : Suspension electrohydraulic block.
7741 : Front RH hydraulic suspension electrovalve block.
7742 : Front LH hydraulic suspension electrovalve block.
7743 : Rear RH hydraulic suspension electrovalve block.
7744 : Rear LH hydraulic suspension electrovalve block.
7745 : Vehicle height selector.
7746 : Piloted rear suspension mountings electrovalve.
7747 : Front suspension electrovalve.
7748 : Rear suspension electrovalve.
7749 : Boot height selector.
7750 : Suspension control panel.
7751 : Front LH body height sensor.
7752 : Front RH body height sensor.
7753 : Rear LH body height sensor.
7754 : Rear RH body height sensor.
7755 : Front suspension pressure sensor.
7756 : Rear suspension pressure sensor.
7757 : Electropump supply current cut-off relay.
7758 : Variable damping ECU.
7759 : Electronic block engine cut-off relay.

7760 : Can gateway.
7769 : Suspension buzzer.
7770 : Hydraulic fluid level and/or pressure warning buzzer.
7771 : Fuel tank electrovalve.
7772 : Suspension ECU fuse board.
78A1 : ESP motors supply relay.
78A2 : ESP electrovalves supply relay.
7800 : ESP ECU.
7801 : ESP cut-off switch.
7802 : ESP relay.
7803 : ESP flywheel angle sensor.
7804 : ESP accelerometer gyroscope.
7805 : ESP primer pump.
7806 : ESP hydraulic unit.
7807 : Braking circuit pressure sensor 1.
7808 : Braking circuit pressure sensor 2.
7809 : ESP gateway.
7810 : Front LH ESP sensor.
7815 : Front RH ESP sensor.
7820 : Rear LH ESP sensor.
7825 : Rear RH ESP sensor.
80A0 : Multifunction blower relay.
80A1 : Rear right mixing flap reduction geared motor.
80A2 : Rear left mixing flap reduction geared motor.
80A3 : Rear left passenger compartment air thermistor.
80A4 : Rear right passenger compartment air thermistor.
80A5 : Additional unit evaporator thermistor.
80A6 : Rear LH additional blower control module.
80A7 : Rear RH additional blower control module.
80A8 : Rear LH additional blower.
80A9 : Rear RH additional blower.
80B0 : Autonomous coolant heater control module.
80B1 : Additional unit distribution flap reduction geared motor.
80B2 : Additional heating relay 1.
80B3 : Additional heating relay 2.
80B4 : Additional heating relay 3.
80C1 : Rear air conditioning control panel.
80F1 : Additional air conditioning fuse board 1.
80F2 : Additional air conditioning fuse board 2.
8000 : Air conditioning switch.
8001 : Air conditioning compressor relay shunt.
8002 : Internal ventilation switch.
8003 : Internal ventilation motor.
8004 : Air conditioning cut-off housing.
8005 : Air conditioning compressor relay.
8006 : Evaporator thermistor (if separate).
8007 : Pressostat.
8008 : Engine coolant and aircon thermistor.
8009 : Aircon fluid pressure sensor.
8010 : Coolant temperature unit.
8011 : Hot loop coolant pump control relay.
8012 : Aircon cut-off pressure switch.
8013 : Additional aircon electrovalve.
8014 : Idling stability electrovalve.
8015 : Compressor cut-off relay controlled by coolant temperature unit.
8016 : Compressor cut off relay controlled by the injection ECU.
8017 : Hot loop electrovalve control relay.

8018 : Blower fast speed control relay.
8019 : Blower slow speed control relay.
8020 : Air conditioning compressor.
8021 : Driver's aircon control panel.
8022 : Air conditioning coolant thermocontact.
8023 : Passenger's aircon control panel.
8024 : Left passenger compartment air thermistor.
8025 : Heater panel (if separate).
8026 : Additional aircon panel.
8027 : Additional air conditioning switch.
8028 : Right passenger compartment air thermistor.
8029 : Air conditioned central storage.
8030 : Passenger compartment air thermistor.
8031 : Coolant thermistor.
8032 : Outside air thermistor.
8033 : Sunshine temperature sender unit.
8034 : Air to footwell temperature sender unit.
8035 : Passenger compartment temperature electronic thermostat (if separate).
8036 : Hot loop coolant pump.
8037 : Air vent temperature sender unit.
8038 : Hot loop electrovalve.
8039 : Front seat air blower.
8040 : Blower speed rheostat (if separate).
8041 : Central rear air blower.
8042 : Rear air blower.
8043 : Right-hand blower control module.
8044 : Left-hand blower control module.
8045 : Blower control module (if separate).
8046 : Blower motor resistor (if separated).
8047 : Blower speed control (if separate).
8048 : Blower relay.
8049 : Additional aircon blower element.
8050 : Blower motor (if separate).
8051 : Right-hand blower motor.
8052 : Left-hand blower motor.
8053 : LH additional blower speed switch.
8054 : RH additional blower speed switch.
8055 : Element unit control relay 1er.
8056 : Element unit control relay 2nd.
8057 : Element unit control relay 3ème.
8058 : Control relays R2 and R3.
8059 : Additional aircon blower motor.
8060 : Heater unit.
8061 : Heating/air conditioning unit relay.
8062 : Aircon heater unit shunt.
8063 : RH mixer flap reduction motor.
8064 : LH mixer flap reduction motor.
8065 : Mixer flap reduction motor.
8066 : Rear aircon heater unit.
8067 : Air inlet flap control.
8068 : Left-hand air inlet flap reduction motor.
8069 : Right-hand air inlet flap reduction motor.
8070 : Air inlet flap reduction motor.
8071 : Distribution flap reduction motor.
8072 : Ventilation flap motor.
8073 : Footwell/demisting flap motor.
8074 : Cut-off valve.

8075 : RH distribution flap reduction motor.
8076 : LH distribution flap reduction motor.
8077 : Rear blower speed switch.
8078 : Rear blower motor.
8079 : Air quality sensor.
8080 : Air conditioning ECU.
8081 : Rear LH aircon control panel.
8082 : Rear RH aircon control panel.
8083 : Mixing flap reduction motor control relay.
8084 : Cabin air heating resistors.
8085 : Blower motor power.
8086 : LH additional flow unit.
8087 : RH additional flow unit.
8088 : Additional heating control panel.
8089 : Additional heating electrovalve fuse.
8090 : Compressor protection diode.
8091 : Additional/autonomous heating control relay.
8092 : Additional heating switch.
8093 : Additional heating fuel pump.
8094 : Additional heater fuse.
8095 : Additional heater control panel fuse.
8096 : Additional heating operation information diode.
8097 : Fuel heater control switch.
8098 : Additional heating.
8099 : Additional/autonomous heating burner.
8100 : Front cigar lighter.
8105 : Rear cigar lighter.
8106 : Rear 2 cigar lighter.
8110 : Heated rear screen switch.
8111 : Demister switch.
8112 : Rear screen demisting sensor.
8115 : Heated rear screen relay.
8116 : Rear screen heater time switch relay.
8118 : LH rear heated window.
8119 : RH rear heated window.
8120 : Heated rear screen.
8121 : Rear window demisting motor.
8122 : Upper heated rear window.
8140 : Heated windscreen.
8141 : Heated windscreen switch.
8145 : Heated windscreen relay.
8146 : Heated windscreen timer unit.
8200 : Coded immobiliser keypad.
8201 : Coded immobiliser led.
8203 : Injecton ECU supply relay circuit diode.
8205 : Diagnostic warning lamp circuit diode.
8206 : Coded anti-start device door circuit diode.
8207 : Coded anti-start relay for diesel pump.
8208 : Coded immobiliser/transponder electronic unit.
8209 : Transponder coil.
8210 : Transponder relay shunt.
8220 : Analogue module transponder.
8221 : Control module transponder.
8235 : Engine starting switch.
8239 : Hands-free access and starting electronic key reader.
8240 : Hands free starter access ECU.
8241 : Cabin internal aerial 1.

8242 : Cabin internal aerial 2.
8243 : Boot internal aerial.
8244 : Emergency aerial.
8245 : Front LH external aerial.
8246 : Front RH external aerial.
8247 : Rear LH external aerial.
8248 : Rear RH external aerial.
8249 : Boot exterior aerial.
8250 : Front LH exterior opening control module for the hands-free starting access.
8251 : Front RH exterior opening control module for the hands-free starting access.
8252 : Rear LH exterior opening control module for the hands-free starting access.
8253 : Rear RH exterior opening control module for the hands-free starting access.
8300 : Driver's heated seat switch.
8301 : Heated seats regulation unit.
8302 : Driver's heated seat rheostat.
8303 : Passenger's heated seat rheostat.
8304 : Front left heated seat rheostat.
8305 : Passenger's heated seat switch.
8306 : Rear LH heated seat switch.
8307 : Rear RH heated seat switch.
8308 : Heated seat relay.
8310 : Driver's heated seat.
8311 : Heated seat thermostat.
8312 : Driver's heated seat relay.
8313 : Passenger's heated seat relay.
8314 : Heated passenger seat.
8315 : Passenger's heated seat.
8316 : Heated seat regulation unit.
8317 : Heated backrest regulation unit.
8318 : Rear LH heated seat rheostat.
8319 : Rear RH heated seat rheostat.
8320 : Rear heated seat.
8321 : Driver's heated seat timer relay.
8322 : Passenger's heated seat timer relay.
8323 : Rear LH heated seat timer relay.
8324 : Rear RH heated seat timer relay.
8325 : Rear LH heated seat.
8326 : Rear RH heated seat.
8327 : Driver's seat cushion heating element.
8328 : Driver's seat backrest heating element.
8329 : Passenger's seat cushion heating element.
8330 : Passenger's seat backrest heating element.
8331 : Driver's heated seat control unit.
8332 : Passenger's heated seat control unit.
8333 : Driver's heated seat sensor.
8334 : Passenger's heated seat sensor.
8335 : Central seat cushion heating pad.
8336 : Massaging seat switch.
8337 : Driver's massaging seat switch.
8338 : Passenger's massaging seat switch.
8339 : Driver's massage control unit.
8340 : Driver's heated seat adjustment assembly.
8341 : Passenger's massage control unit.
8345 : Passenger's heated seat adjustment assembly.
8346 : Front right heated seat switch.
8347 : Front left heated seat switch.
8348 : Front right heated seat timer relay.

8349 : Front left heated seat timer relay.
8350 : Front right heated seat.
8351 : Front left heated seat.
8352 : Driver's seat neck heater.
8353 : Passenger's seat neck heater.
8354 : Driver's seat neck heater rheostat.
8355 : Passenger's seat neck heater rheostat.
84A0 : Rear right multimedia screen.
84A1 : USB socket on front centre console.
84A2 : MP3 player jack socket.
84A3 : Aerial filter + heated rear screen.
84A4 : Aerial filter - heated rear screen.
84A5 : Telematic transmitter-receiver service module.
84A6 : SIM card reader.
84A7 : Marques call button.
84A8 : Emergency call button.
84A9 : Rear left multimedia screen.
84B0 : Rear player-multimedia screen.
84B1 : Front central medium speaker.
84B2 : Audio system supply relay.
84B3 : Control panel dot matrix display.
84B4 : Portable multimedia unit.
84B5 : Front left door tweeter speaker.
84B6 : Front right door tweeter speaker.
84B7 : Front left door speaker.
84B8 : Front right door speaker.
84B9 : Hands free kit ECU.
84C1 : Multimedia interface unit.
84C2 : Radio-telephone voice control at the steering wheel.
84C3 : Glove box USB socket.
84C4 : Independent telematic unit.
8401 : Impedance adaptor.
8402 : Aerial lead.
8403 : Aerial filter.
8404 : Aerial.
8405 : Electric aerial.
8406 : Electric aerial amplifier.
8407 : Duplexer.
8408 : Radio amplifier.
8409 : Heated screen aerial assembly.
8410 : Radio.
8411 : Front LH/RH radio balance.
8412 : Front/rear radio balance.
8413 : Radio control.
8414 : Navigation audio line transformer.
8415 : Compact disc player.
8416 : Compact disc interface.
8417 : Radio receiver transmitter ventilator.
8418 : Radio aerial adaptor.
8419 : Radio amplifier relay.
8420 : Driver's front door speaker.
8421 : Front speaker.
8422 : Front LH speaker.
8423 : Front RH speaker.
8424 : Radio amplifier.
8425 : Passenger's front door speaker.
8426 : Bass acoustic speaker.

8427 : Amplified bass acoustic speaker.
8428 : LH rear hifi coaxial.
8429 : RH rear hifi coaxial.
8430 : Left hand rear speaker.
8431 : Rear LH central speaker.
8432 : Aerial filter 2.
8433 : Radio supply filter.
8435 : Right hand rear speaker.
8436 : Rear RH central speaker.
8440 : Front LH tweeter speaker.
8442 : Front LH medium speaker.
8443 : Front LH boomer speaker.
8444 : Front LH woofer speaker.
8445 : Front RH tweeter speaker.
8447 : Front RH medium speaker.
8448 : Front RH boomer speaker.
8449 : Front RH woofer speaker.
8450 : Rear LH tweeter speaker.
8452 : Rear LH medium speaker.
8453 : Rear LH boomer speaker.
8454 : LH rear subwoofer speaker.
8455 : Rear RH tweeter speaker.
8457 : Rear RH medium speaker.
8458 : Rear RH boomer speaker.
8459 : RH rear subwoofer speaker.
8460 : Rear LH headset socket.
8461 : Resistance 1 (Japan).
8462 : Resistance 2 (Japan).
8463 : Resistance 3 (Japan).
8464 : Resistance 4 (Japan).
8465 : Rear RH headset socket.
8470 : Front police radio supply.
8471 : Rear police 1 radio supply.
8472 : Rear police 2 radio supply.
8473 : Rear police 3 radio supply.
8475 : Radio telephone handset.
8476 : Radio telephone A electronic control unit.
8477 : Radio telephone B electronic control unit.
8478 : Auto PC microphone.
8479 : Auto PC switch.
8480 : Radiotelephone transceiver.
8481 : Radio telephone speaker.
8482 : Radio telephone microphone.
8483 : Radio telephone left on buzzer.
8484 : Radio telephone aerial.
8485 : Radio telephone keypad.
8486 : External audio-video input unit.
8487 : Multimedia assembly.
8488 : Auto PC colour screen.
8489 : Auto PC annex unit.
8490 : Auto PC central unit.
8491 : Aerial switching control unit.
8492 : Hands free kit.
8493 : Telematic receiver control.
8494 : Telephone charge supply.
8495 : Telephone aerial assembly (Japan).
8496 : Remote toll system (Japan).

8497 : Filter (Japan).
8498 : AM/FM aerial (Japan).
8499 : External audio input block.
8500 : Navigation ECU.
8501 : GPS antenna.
8502 : Navigation speaker.
8503 : Control keypad.
8504 : Traffic info unit.
8505 : Traffic info switch.
8506 : RH navigation audio line transformer.
8507 : LH navigation audio line transformer.
8508 : Navigation recall switch.
8509 : Traffic status information warning lamp.
8510 : Navigation assembly (Japan).
8511 : Brake information diode (Japan).
8512 : Traffic information transmission-reception unit.
8513 : Compass.
8520 : Authorised speed control unit.
8521 : Dialogue control unit.
8522 : Authorised speed off switch.
8523 : Data acquisition, collection and transmission system.
8600 : Alarm unit.
8601 : Antitheft alarm key switch.
8602 : Antitheft alarm volumetric unit.
8603 : Anti-theft alarm switch.
8604 : Ultrasonic sensor.
8605 : Alarm siren.
8606 : Alarm LED.
8607 : Ultrasonic transmitter.
8608 : Ultrasonic receiver.
8609 : Ultrasonic transmitter + antitheft alarm led.
8610 : Anti-theft alarm system boot switch.
8611 : Anti-theft alarm system bonnet switch.
8612 : Antitheft alarm rear RH hinged door switch.
8613 : Alarm rear left-hand door switch.
8614 : Alarm rear right-hand door switch.
8615 : Dipped beam supply relay for alarm.
8616 : Alarm relay.
8617 : Anti-theft alarm warning relay.
8618 : Anti-lift switch.
8619 : Alarm horn.
8630 : Protection central unit.
8700 : Electric blind motor.
8701 : Electric blind front switch.
8702 : Electric blind rear switch.
8800 : Trailer refrigerator control relay.
8801 : Trailer double relay.
8802 : Trailer socket fuse holder.
8900 : Glove box lock assembly.
8901 : Armrest lock assembly.
8902 : Interior storage compartment locks control relay.
8905 : Refrigerator socket 15 A ATO fuse.
9000 : Central unit.
9005 : Left front side lamp station.
9010 : Fan unit station.
9015 : Right front side lamp station.
9020 : Wipe/wash station.

9025 : Sensor information station.
9030 : Left front door station.
9031 : Seat station.
9032 : Rear left door station.
9033 : Rear right door station.
9035 : Instrument panel station.
9040 : Display station.
9045 : Passenger compartment station.
9050 : Right front door station.
9055 : Signalling switch station.
9056 : Automatic lighting station.
9060 : Wiper switch station.
9065 : Console station.
9070 : Towing station.
9075 : Left tail lamp station.
9080 : Tailgate station.
9085 : Right tail lamp station.